



XP1	
Литер	Код
STK	1
GND	2
MISO	3
+5V	4
RESET	5
NC	6
NC	7
MOSI	9
GND	10