


SCHEMATIC DIAGRAM - 1 (MAIN C.B)

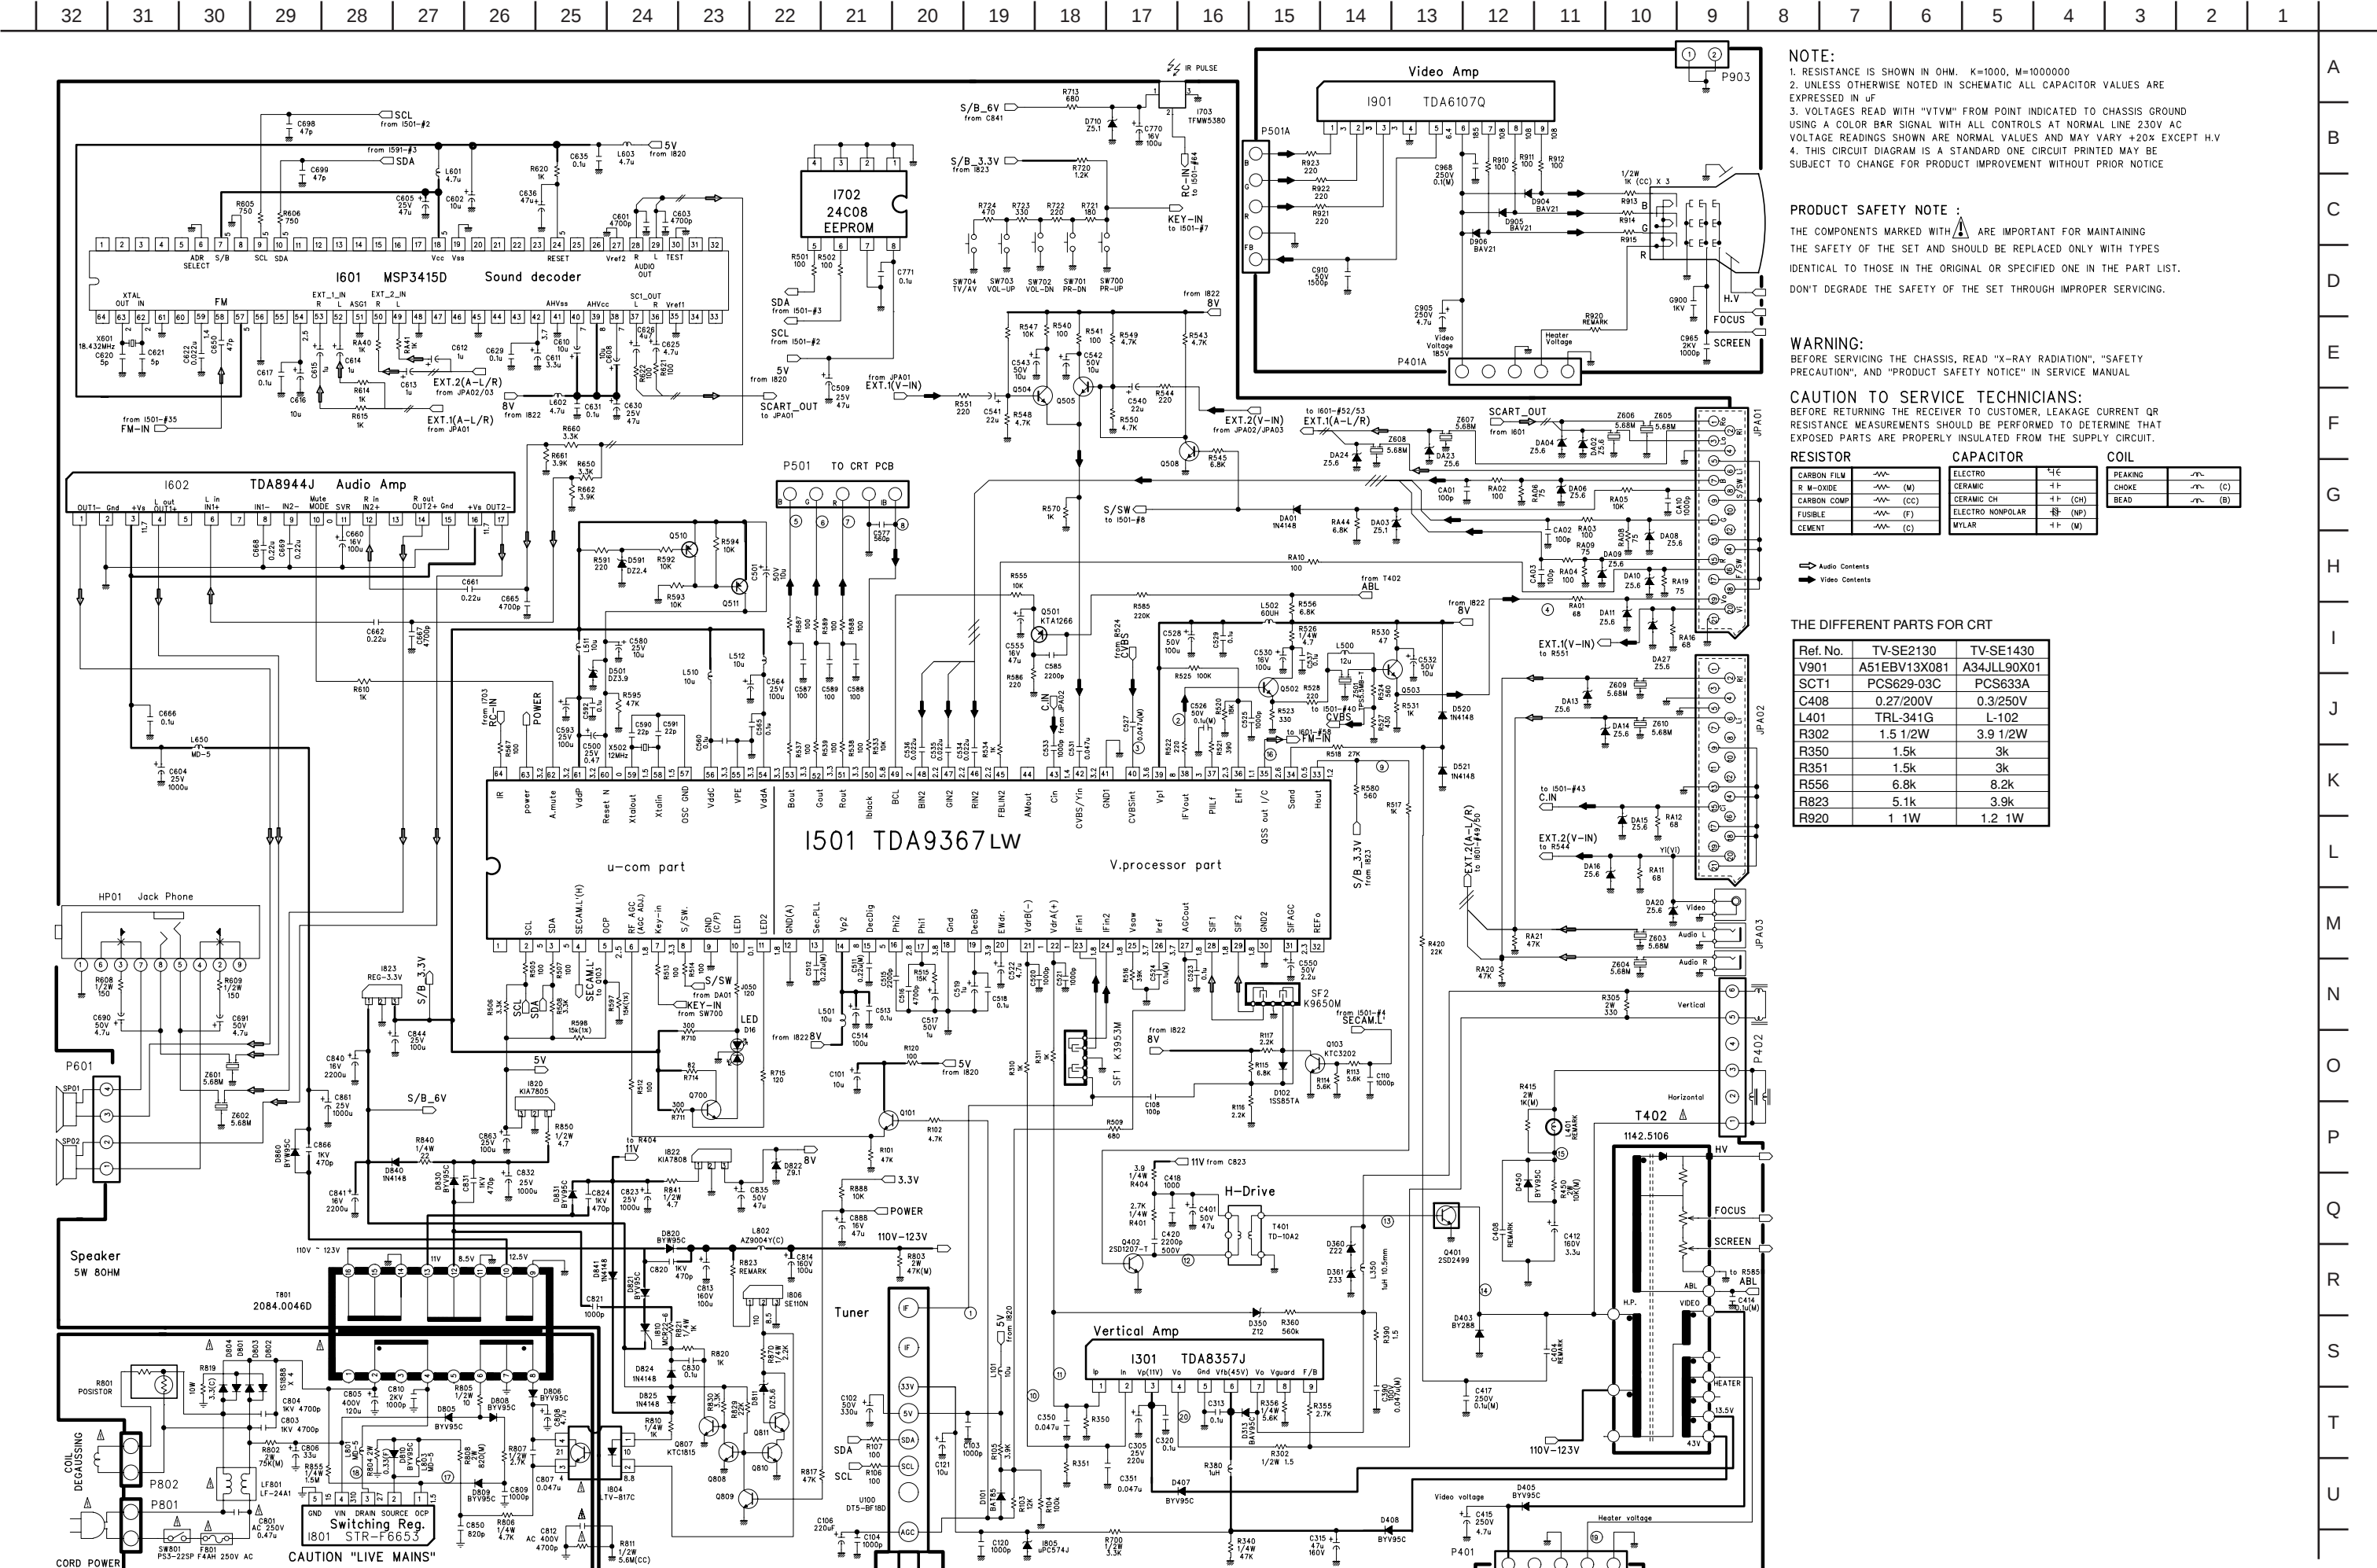


2. ELECTRICAL ADJUSTMENT

1. Use the numeric keys on the remote control to set the receiving channel to Pr91.
2. Set Sharpness on the Picture Menu screen to 0.
3. Press the buttons on remote control in the following order:

Skip (R) → Move (G) → Menu

The following menu will appear on the TV screen (the menu can be switched by the "P ^/v" button on the remote control):

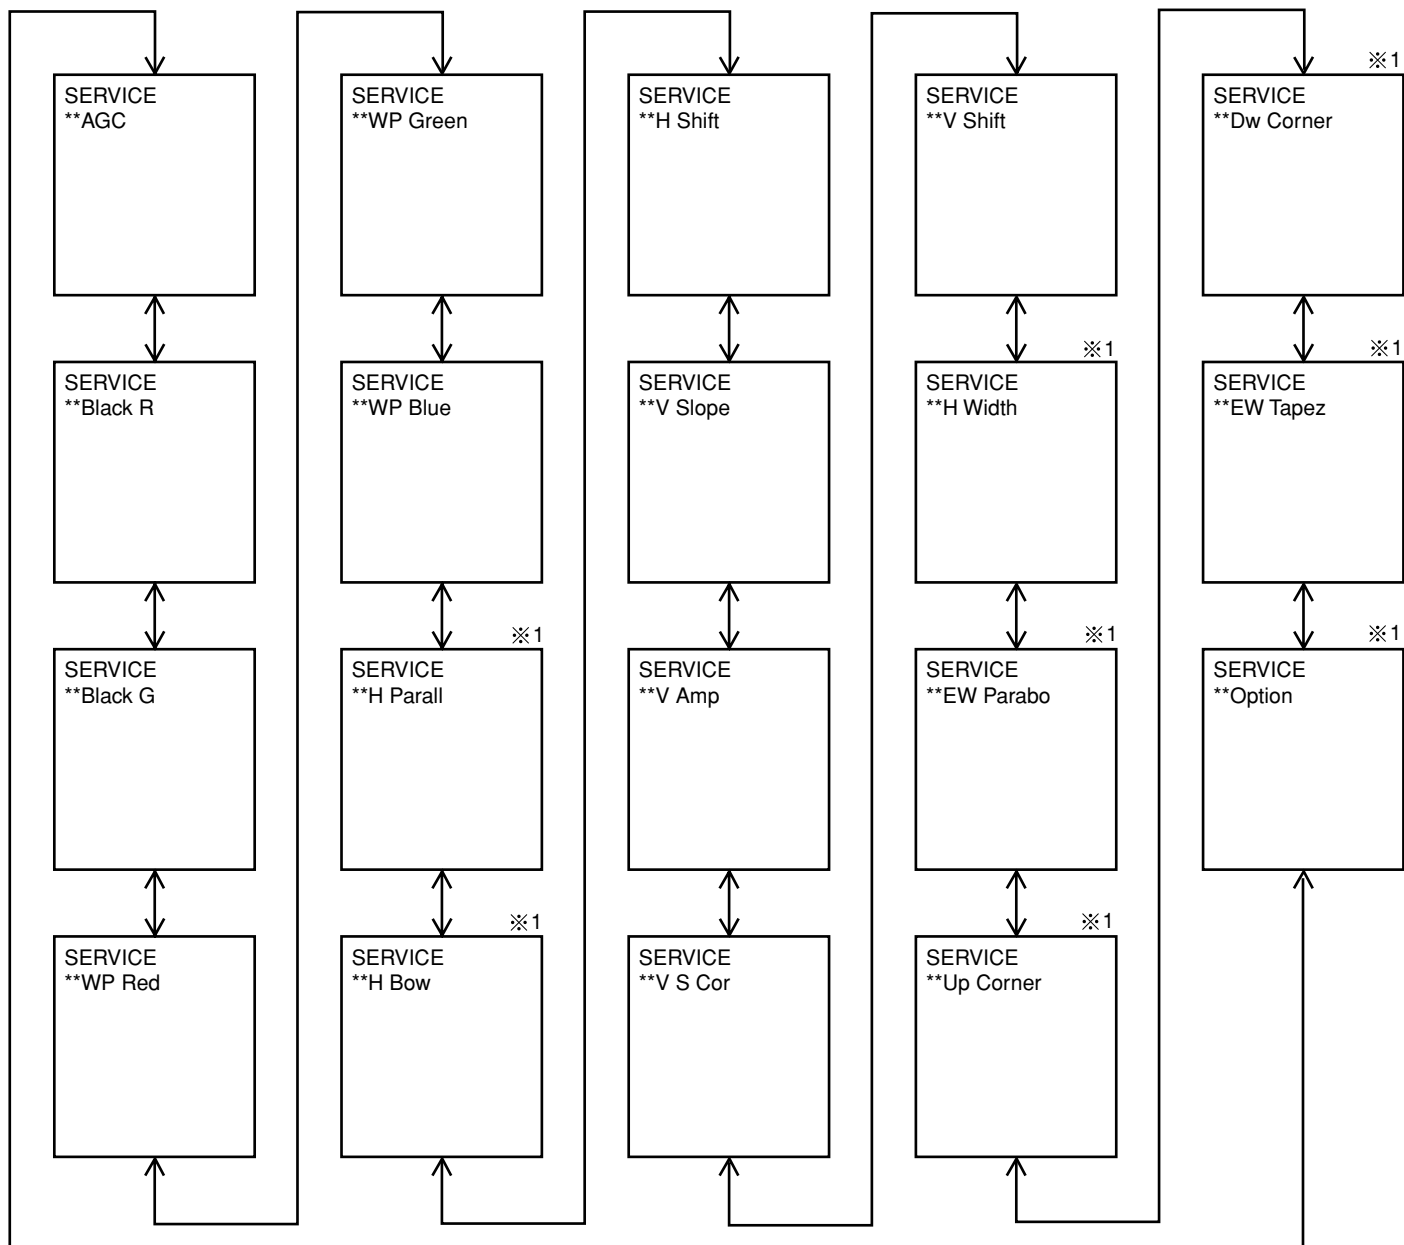

4. To terminate the menu screen, press the MENU button on the remote control, or the power button on the TV or remote control.

※ It is not necessary to adjust the above items marked ※ 1.