
OF IVI 1404

HITACHI

SERVICE MANUAL

CAUTION:

Before servicing this chassis, it is important that the service technician read the "Safety Precautions" and "Product Safety Notices" in this service manual.

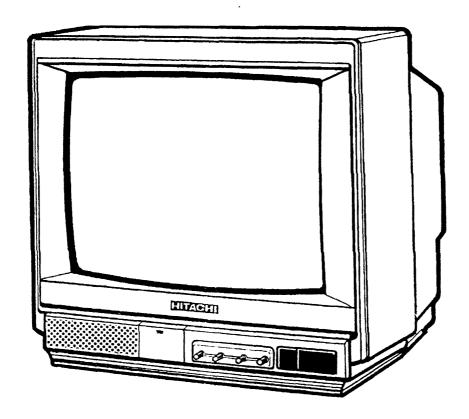

TECHNICAL SPECIFICATIONS

V standard	625 lines	Picture tube34 cm T	, уре
peaker	8 Ohms 7.5 cm	Power consumption4	5 W
ocusing	Electro static	Dimensions:	
lains voltage	220-240 V 50 Hz	Width405 r Height394 r	mm
use	T3.15A	Depth	mm ' ka

Since this is a basic circuit, the values of the parts and specifications are subject to be altered for improvement

SAFETY PRECAUTIONS

WARNING: The following precautions should be observed.

- Do not install, remove, or handle the picture tube in any manner unless shatter proof goggles are worn.
 People not so equipped should be kept away while picture tubes are handled. Keep the picture tube away from the body while handling.
- When service is required, an isolation transformer should be inserted between the power line and the receiver before any service is performed on the chassis.
- 3. When replacing the chassis in the cabinet, ensure all the protective devices are put back in place, such as barriers, non-metallic knobs, adjustment or compartment covers or shields, isolation resistors/capacitors, etc.
- 4. When service is required, observe the original lead dressing. Extra precaution should be taken to ensure correct lead dressing in the high voltage circuitry area. Particularly note the R.G.B. lead dressing. Ensure they are dressed well away from the horizontal scan and F.B.T. circuitry.
- 5. Always use the manufacturer's replacement component. Always replace original spacers and maintain lead lengths. Especially critical components are indicated thus \triangle on the parts list and should not be replaced by other makes. Furthermore, where a short circuit has occurred, replace those components that indicate evidence of overheating.
- 6. Before returning a serviced receiver to the customer, the service technician must thoroughly test the unit to be certain that it is completely safe to operate without danger of electrical shock, and be sure that no protective device built into the instrument by the manufacturer has become defective, or inadvertently damaged during servicing.

Therefore, the following checks are recommended for the continued protection of the customers and service technicians.

INSULATION

Insulation resistance should not be less than 10M Ω at 500V DC between the mains poles and any accessible metal parts.

Also, no flashover or breakdown should occur during the dielectric strength test, applying 3kV AC or 4.25kV DC for two seconds between the main poles and accessible metal parts.

HIGH VOLTAGE

High voltage should always be kept at the rated value of the chassis and no higher. Operating at higher voltages may cause a failure of the picture tube or high voltage supply, and also, under certain circumstances could produce X-radiation levels moderately in excess of design levels. The high voltage must not, under any circumstances, exceed 27kV on the chassis.

X-RADIATION

TUBES: The primary source of X-radiation in this receiver is the picture tube. The tube utilised for the above mentioned function in this chassis is specially constructed to limit X-radiation.

For continued X-radiation protection, replace tube with the same type as the original HITACHI approved type.

PRODUCT SAFETY NOTICE

Many electrical and mechanical parts in HITACHI television receivers have special safety related characteristics. These characteristics are often not evident from visual inspection, nor can the protection afforded by them necessarily be obtained by using replacement components rated for higher voltage, wattage, etc. Replacement parts which have these special safety characteristics are identified by marking with a \triangle on the schematics and the replacement parts list contained in this service manual.

The use of a substitute replacement component which does not have the same safety characteristics as the HITACHI recommended replacement one, shown in the parts list of this service manual, may create electrical shock, fire, X-radiation, or other hazards.

Product Safety is continuously under review, and new instructions are issued from time to time. For the latest information, always consult the current HITACHI service manual. A subscription to, or additional copies of HITACHI service manuals, may be obtained at a nominal charge from your HITACHI SALES CORPORATION.

TUBE DISCHARGE

The line output stage can develop voltages in excess of 25kV; if the E.H.T. cap is required to be removed, discharge the anode to chassis via a high value resistor, prior to its removal from the tube.

CIRCUIT DESCRIPTION

Sound stages:

The sound stages consist of IC201 and IC402, which is the output amplifier.

Audio signals are input via the scart or AUDIO-IN phono socket, then applied via R2117, Q2122, C2106 and buffer transistor Q2102, to pin 6 of IC201. The sound output is obtained from pin 50, then input to pin 3 of IC402 via C421 and R413, for further amplification. The output for the speaker is made available from pin 7.

Volume control is performed by the DC voltage applied to pin 5 of IC201, which can be preset by VR2102.

The audio signals input via the scart or AUDIO-IN phono socket, can also be applied as an output via the AUDIO OUT socket.

Vision Circuitry

Luminance:

Video signals input via the scart socket or BNC connector, are applied to pin 15 of IC201 via R2105, C2102, R311 and C303, for luminance/chrominance processing and deflection synchronisation.

The luminance signal is added internally to the RGB matrix circuits of IC201, and will be controlled by the brightness, contrast, and blanking stages of the IC.

The luminance signal finally emerges with the RGB signals from pins 18, 19 and 20 of IC201.

The voltages to control the contrast and brightness levels are applied to pins 25 and 17 of IC201, and can be varied by VR2103 and VR2104 respectively.

An automatic beam current circuit is employed on this chassis. Should the beam current start to rise, the voltage at pin 4 of the flyback transformer will fall. This fall is applied to the cathode of D706, then via R720 to pin 25 of IC201, thereby reducing the contrast level and consequently the beam current.

The video input from the scart socket or the VIDEO-IN socket can also be applied as an output to the VIDEO-OUT socket via the amplifier stages Q2101, Q2102 and buffer transistor Q2103.

Chrominance:

IC201 performs demodulation of the signal input to pin 15, and the R-y and B-y colour signals are output from IC201 at pins 30 and 31. They are then fed to pins 14 and 16 of IC501 which is a switch capacitor delay line. The inputs at pins 14 and 16 are clamped, then fed via a buffer stage to internal delay lines, which are driven by a clock signal of 3MHz, and a delay period of 64u Seconds is obtained. The internal clock signal is generated from a 6MHz voltage controlled oscillator, and line locked by the sandcastle pulse input at pin 5. Low pass filters after the delay line stages suppress the clock signal.

The undelayed and the delayed signals are then added, with the resulting R-y and B-y signals being output from pins 11 and 12 via an internal buffer stage.

These outputs are then returned to IC201 at pins 28 and 29. The IC contains clamping circuits, and a DC colour saturation control, the level of which is set by VR2101, and applied to pin 26. The signals are then applied to a MATRIX circuit, and finally emerge from pins 18, 19 and 20, as the blue, green, and red signals.

Should S-VHS signals be applied via the 5 pin socket, the luminance and chrominance signals will be separate inputs.

The luminance signal is applied to pin 15 of IC201, but the chrominance signal is now applied to pin 16 via C2101 and R522.

In order for the I.C. to process these separated signals into the red, green and blue outputs, the voltage level at pin 16 needs to be approximately 4v5. This is achieved by SW2101. When it is set to the SVHS position, R2103 and R2118 form a potential divider to the +9v supply, thus creating the desired 4v5 level.

RGB external inputs:

RGB inputs can only be applied via the scart socket. When this is done, the switch SW2101 must be set to its RGB position.

This applies a voltage to pin 21 of IC201 via R2114, which changes the processing path of the I.C., so that only the RGB inputs applied to pins 22, 23, and 24, are output from pins 20, 19, and 18.

Deflection Circuits:

The deflection circuitry of IC201 contains a sync. separator stage, a horizontal oscillator and output stages, plus a vertical count-down and output stage.

Horizontal Stage

The video signal input to pin 15 of IC201 is applied to the internal sync. separator stages of the IC.

An internal phase detector stage is supplied with a sawtooth waveform, generated from the line pulse which is input to pin 38. The phase detector then compares this sawtooth to the sync. pulse.

Any frequency drift will cause a corrective output to be applied to the horizontal oscillator, thereby maintaining the desired phase relationship.

The components connected to pin 40 form a filter network for the phase detector, and VR701 connected to pin 39 provides manual phase control. The horizontal output emerges at pin 37, and is then applied to the base of line drive transistor Q701. T701 couples the output of Q701 to the line output transistor Q702. Both these transistors are powered by the 103v supply.

The line pulse available at pin 6 of the flyback transformer is rectified by D701, smoothed by C716, and provides approximately 180v to drive the output transistors Q801, Q802, Q803.

Under certain fault conditions, i.e. increased H.T. supply low line oscillator frequency, or reduced value of the tuning capacitor C730, an excess of E.H.T. could be developed. To prevent this happening, the rectified voltage of D701 is fed via potential divider R715, R716, and applied to ZD701. Should the E.H.T. rise excessively, the threshold of the zener will be exceeded, and a voltage will be applied to the gate of Q703 via R718, turning it on. This effectively applies a "Low" to Q952 base, turning the transistor off. Consequently, Q953 will turn off, and the +9v supply to IC201 is then removed, thereby shutting down the deflection stages of the IC, and preventing further E.H.T. generation.

Excessive beam current can also occur under certain fault conditions, so this is prevented in the following manner.

The H.T. current to the horizontal output stages is measured by R727.

Should the current rise due to a short circuit of Q702 for example, the voltage drop across R727 will cause Q704 to be turned on, and a voltage will be applied to the gate of Q703 via R729. This will then prevent further E.H.T. generation as described earlier.

A supply of +25v is required for IC601. This is obtained from pin 5 of the flyback transformer, rectified by D702, and smoothed by C719.

Vertical Stages:

The internal vertical sync. of IC201 is fed to a triggered vertical divider stage, which is used to count down the horizontal frequency to obtain the vertical frequency, thereby eliminating the need for a conventional oscillator circuit. This also has the advantage that no external frequency control is required.

C601 at pin 42 of the I.C. is used for ramp generation, and produces the required sawtooth output.

The vertical output from pin 43 of IC201 is applied to pin 4 of IC601 via R604. The components D601 and C605 determine the flyback generation time, and the vertical output to drive the deflection coils is made available from pin 2.

The deflection current that occurs at the junction of R609/R610, is added to the feedback from R607/C608 etc, and the result is applied to pin 41 of IC201. The values of R607 and C608 determine the linearity, whilst VR601 sets the vertical height.

Power Supply Circuit:

The AC input is rectified by D901 - 04 and produces approximately 300v to power Q903.

Current flowing through R901, causes Q903 to initially turn on.

Secondary voltages are then induced in T901, and a feed-back voltage is applied to Q903 base via D905, L903 etc., thereby maintaining the transistors operation.

This circuitry self oscillates at a frequency determined by the inductance of the transformer, the AC mains voltage and load conditions.

The secondary voltage in the S1 - S2 winding is rectified by D951 to produce the H.T. of 103v, which is smoothed by C952. The S3 - S4 winding produces +15v from D952, which is smoothed by C954.

From this 15v, the chassis +9v is obtained via Q953 and IC951.Q951 stage is employed for H.T. regulation. The base of Q951 is set to a pre-determined level by the resistor network R952, VR951, and R951.

Should the H.T. rise, the emitter voltage of Q951 will become more positive, and this difference is amplified by the transistor and applied to opto-coupler IC901. An output is then produced from pin 5 of the opto-coupler, which is applied to transistor network Q901, Q902.

These transistors control the on time of the power transistor Q903, therefore a constant and regulated H.T. level is maintained. ZD952 offers protection to the H.T. circuits should the voltage level rise excessively.

PICTURE AND CONTROL ADJUSTMENTS

H.T. Adjustment:

- 1. Adjust VR951 to its centre position, then switch TV on.
- 2. Connect a voltmeter between the +ve side of C952 and ground.
- 3. Receive Philips test pattern and set brightness and contrast to maximum.
- 4. Allow approximately 1 minute for the TV to warm up thoroughly, then gradually turn VR951 clockwise until voltmeter reads $103v \pm 0v2$.

Horizontal Phase and Amplitude:


- 1. Switch TV on, and receive Philips test pattern.
- 2. Set the brightness and contrast to their maximum settings.
- 3. Adjust VR701 if picture is not centralised.

Vertical Centre and Height Adjustment:

- 1. Switch TV on, receive Philips test pattern, and wait 5 minutes.
- 2. Adjust contrast and brightness levels to their maximum setting.
- 3. If picture is not centred vertically, change position of shorting link on v. centre plug (see Position of Adjustment Control drawing, shown later) until desired result is obtained.
- 4. Adjust VR601 to obtain the desired height.

Focus Adjustment:


- 1. Switch TV on and receive Philips test pattern.
- 2. Set the colour level to minimum, and the brightness and contrast to their maximum levels.
- 3. Adjust contrast so that the first two bars of the colour bar display are the same colour black, then adjust brightness to make the first two bars of the grey scale bar pattern the same colour black.
- 4. Adjust focus control knob on the flyback transformer for the best overall focus.

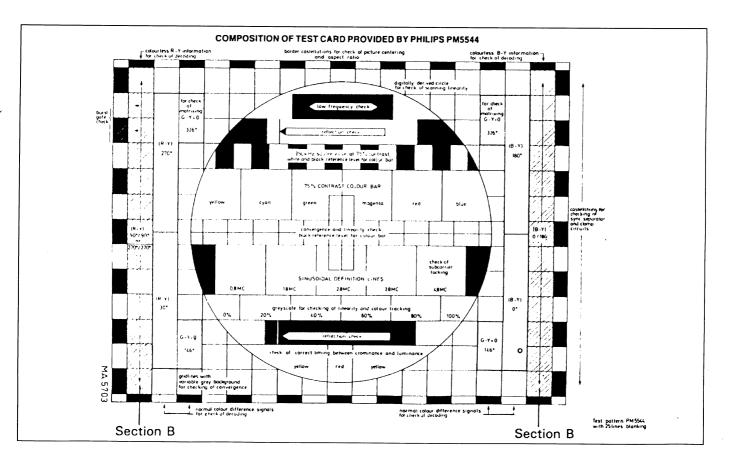

CUT OFF AND SCREEN ADJUSTMENT

PREPARATION:

i) Preset the red, green and blue background controls on the C.R.T. base to the positions shown.

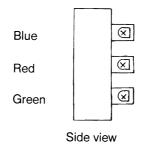

ii) Set the preset controls as follows:-

Contrast = minimum

 
Colour = minimum

Brightness = mid point

ii) Receive horizontal white line, or red raster pattern from a Philips pattern generator.

METHOD:

- 1. Adjust screen control on the flyback transformer until the horizontal line is just visible and its colour can be seen.
- 2. Do not touch the background control of the colour that is most prominent on the screen, but adjust the other two background controls until a reasonable white line is obtained.
- 3. Connect an oscilloscope probe to each of the R.G.B. cathodes in turn and leave connected to the one with the highest level.
- 4. Set customer brightness so that the cathode value is no greater than 140v as shown below.



5. Disconnect oscilloscope, and set screen control so that the white horizontal line is just visible once more.

WHITE BALANCE

PREPARATION:

i) Set the preset controls as follows:-

Contrast = minimum

Colour = minimum

- ii) Receive the white raster pattern.
- iii) Obtain and set up a combined colour analyser and light meter, e.g. MINOLTA CA100.

METHOD:

- 1. Adjust brightness preset control so that the light output from the white raster reads $Y = 1 \rightarrow 2$ cdm⁻² on the light meter.
- 2. Next adjust the red and blue background controls to obtain the colour chromaticity co-ordinates of x = 283 y = 299. The above co-ordinates represent a colour temperature of 9300k.
 - **N.B.** For Export models x = 304 y = 320 temperature = 7400k

PROTECTION CHECKS


High Voltage Limit Check:

- 1. Switch TV on, receive Philips test pattern, and set contrast and brightness to their maximum levels.
- 2. Connect a 390K resistor in parallel with R715, and ensure that the sound and picture disappear instantly.
- 3. Switch TV off remove resistor and wait 10-15 seconds.
- 4. Switch TV on again to ensure normal operation, then return contrast and brightness to their previous levels.

Anode/Focus s/c Check:

- 1. Switch TV on, receive Philips test pattern, and set the contrast and brightness levels to maximum.
- 2. Connect a 270R resistor from pin 9 of the flyback transformer to ground.
- 3. Check that sound and picture disappear instantly.
- 4. Switch TV off, remove resistor, and wait 10-15 seconds.
- 5. Switch TV on again to ensure normal operation, then return contrast and brightness to their previous levels.

POSITION OF ADJUSTMENT CONTROLS

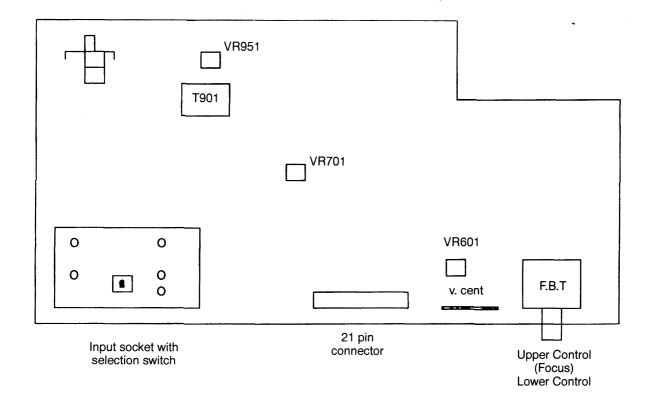

VOLTAGE TABLES

The following voltages were taken using a $20K\Omega$ /volt meter, with brightness, colour and contrast set to give normal viewing levels.

	IC201					
Pin	Volts	Pin	Volts			
1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 1 22 23 24 25 26	Volts 3V0 Not Used Not Used Not Used OV5 - 4V5 (VOLUME) 3V5 Not Used 1V8 OV 8V0 OV 0V8 Not Used 6V8 3V8 8V5 (4V5)* OV - 3V5 (brightness) 1V9 1V9 1V9 1V9 0V2 (3V8)+ 0V5 0V5 0V - 4V8 (contrast) OV - 4V8 (colour)	27 28 29 30 31 32 33 34 35 36 37 38 39 40 41 42 43 44 45 46 47 48 49 50 51 52	Volts Not Used 3V5 2V9 1V5 1V5 Not Used 3V8 3V0 2V0 8V4 1V4 1V1 2V7 2V6 2V3 2V0 0V9 Not Used 3V5 4V1 6V5			

	IC402
Pin	Volts
1	0V6
2	1V0
2 3 4 5	0V4
4	0V
5	6V5
6	12V
7	12V
8	Not Used

	IC601		
Pin	Volts		
1 2 3 4 5 6	10V 13V5 26V —		
5 6 7	 26V 1V0		

IC501				
Pin	Volts	Pin	Volts	
1 2 3 4 5 6 7 8	5V7 Not Used 0V 0V 1V5 Not Used Not Used 0V	9 10 11 12 13 14 15	5V7 0V 3V1 3V1 Not Used — Not Used	

	100	204	
8	Not Used 0V	15 16	Not Used —
6	Not Used	14	

IC901				
Pin	Volts	Pin	Volts	
1 2 3	14V 13V Not Used	4 5 6	-5V 0V3 Not Used	

^{* =} SW2101 IN SVHS POSITION + = SW2101 IN RGB POSITION

	Q701	Q702	Q704	Q801	Q802	Q803	Q804
CBE	24V 0V4 0V	103V — 0V	103V 103V	145V 2V2 1V7	140V 2V0 1V8	140V 2V0 1V5	— 8V4 8V3

Q901	Q902	Q903	Q951	Q952	Q953
C -2V2	5V0	340V	14V	0V2 *12V	12V *0v8
B 0V3	4V5	-3V0	14V5 *28V	0V8 *0V	12V
E 0V	-3V0	0V	14V	0V	13V

^{* =} standby

	Q2101	Q2102	Q2103	Q2122
C	5V0	2V9	8V8	8V8
B	2V1	5V0	2V9	1V1
E	1V6	5V7	2V2	0V5

A530720 PANEL


IC201 pin 15 2v p.p.

IC201 pins 18 3v8 p.p.




IC201 pin 19 3v5 p.p.

IC201 pin 20 4v p.p.

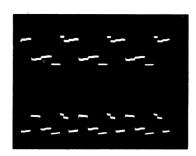


IC201 pin 28 1v5 p.p.

IC201 pin 29 1v2 p.p.

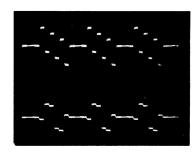


IC201 pin 30 0v8 p.p.

IC201 pin 31 0v8 p.p.

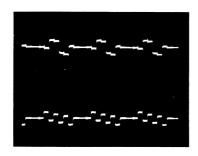


IC201 pin 37 3v8 p.p.

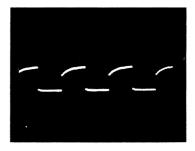


IC201 pin 38 6v0 p.p.

IC201 pin 41 1v0 p.p. at 5m secs/cm.

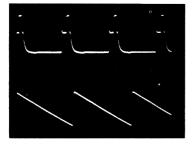


IC201 pin 42 2v p.p. at 5m secs/cm.

IC201 pin 43 1v8 p.p. at 5m secs/cm.

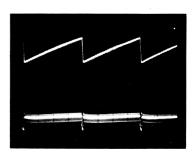


IC201 pin 50 2v0 p.p. at 0.5m secs/cm. at max. volume with speaker disconnected.

IC601 pin 2 55v p.p. at 5m secs/cm.

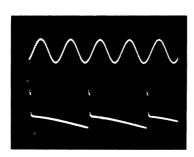


IC402 pin 3 0v25 p.p. at 1m sec/cm. at max. vol. with speaker disconnected

IC402 pin 7 10v p.p. at 1m sec/cm. at max. volume with speaker disconnected.

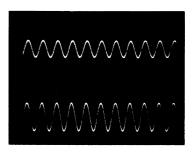


IC601 pin 4 3v0 p.p. at 5m secs/cm.


IC601 pin 3 25v p.p. at 5m secs/cm.

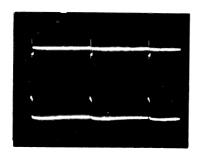


Q701 Base 1v5 p.p.

Q701 Collector 60v p.p.

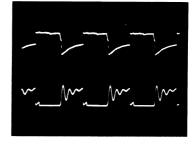

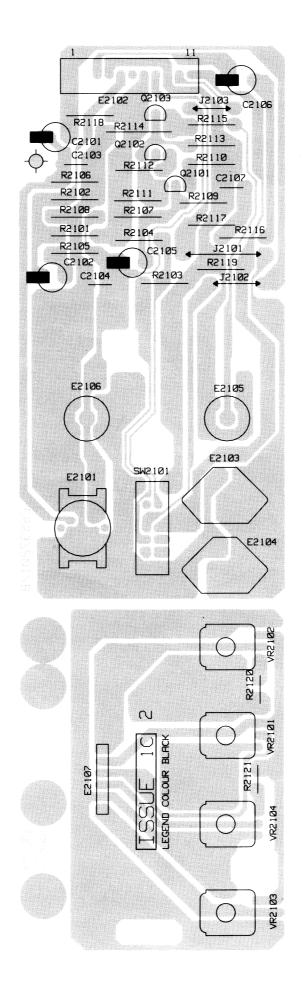

INPUT/OUTPUT AND CUSTOMER CONTROL P.C.B.

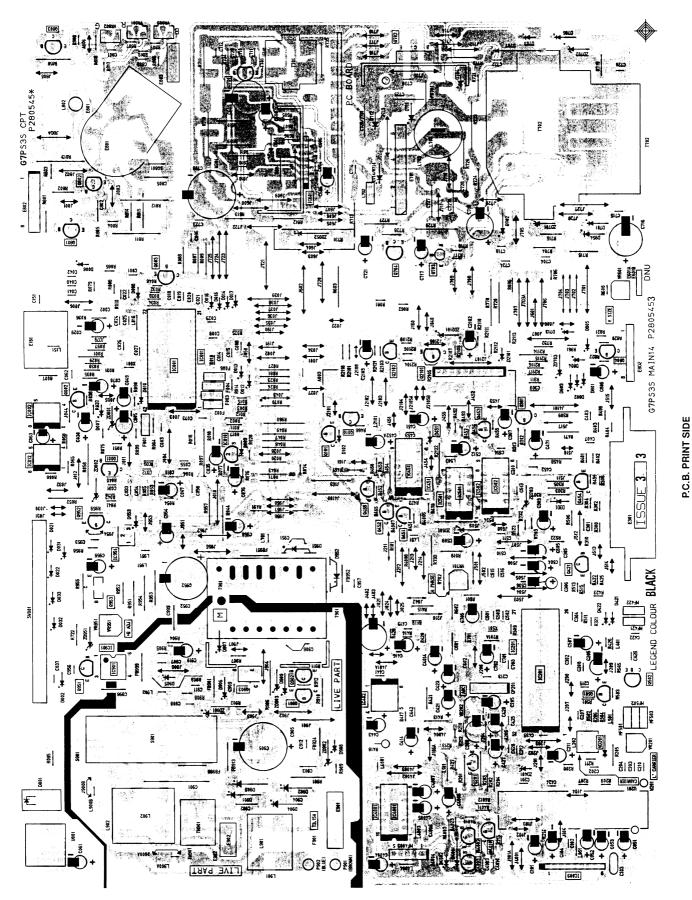

۲×

MAIN CIRCUIT DIAGRAM

PRESENTATION PARTS

⚠CRT Type A34EAC01X06Cabinet Back	2470781 X240257 X212431
HITACHI Badge	X640251
⚠Mains Lead (U.K. models) ⚠Mains Lead (Export Models) Mains Switch Knob	E846629 2972374 X320991
Operating Guide	X830892
Remote Control Window (cabinet)	X425010
MISCELLANEOUS PARTS A CRI Socket	2698711
⚠CRT Socket	2698711
Λ Degaussing Coil	2229931
∱Fuse Type T3.15AFuse Holder	E882368 2721792
⚠ON/OFF Switch	2633391
Phono Socket (black)	E826141 E826142
BNC Socket	E826143
S-VHS Socket	E826144
21 Pin Scart Socket	E826918

SW2101 3 Way Switch

Speaker

E114303

E511101

Resistor Abbreviation	Туре
CF	Carbon Film
MO	Metal Oxide
FF	Fusible Film
VR	Variable Control
MF	Metal Film
WW	Wire Wound

Capacitor Abbreviation	Туре
C PF FT MPO MPS MP TA	Ceramic Plastic Film Feed Through Met.Polyester Mica/Polystyrene Metallised paper Tantalum

	Ref No.	Part No.	Value	Туре	%Tol	Wattage
1	R047	0700054M	10K	CF	5	1/16
ł	R048	0700054M	10K	CF	5	1/16
l	R049	0700054M	10K	CF	5	1/16
İ	R052A	0700041M	1K0	CF	5	1/16
ı	R086	0700058M	22K	CF	5	1/16
	R097	R812330	82R	CF	5	1/4
1	R210 R212	0700054M	10K	CF	5 5	1/16
	R302	0700052M 0187038M	6K8 75R	CF CF	5	1/16 1/16
	R303	0700041M	1K0	CF	5	1/16
١	R304	0187038M	75R	CF	5	1/16
1	R305	0700041M	1K0	CF	5	1/16
1	R306	0187038M	75R	l ČF	5	1/16
	R307	0700041M	1K0	CF.	5	1/16
1	R311	0700032M	220R	CF	5	1/16
I	R313	0700041M	1K0	CF	5	1/16
	R321	0700036M	470R	CF	5	1/16
1	R403	0700051M	5K6	CF	5	1/16
ı	R404	0700051M	5K6	CF	5	1/16
	R413	0700054M	10K	CF	5	1/16
	R414	0700054M	10K	CF	5	1/16
ı	R416	0700033M	270R	CF	5	1/16
	R417	0700073M	270K	CF	5	1/16
7	R418 R427	R100551 0700041M	1R0 1K0	FF CF	5 5	1/2
l	R491	0110308S	30R	MO	5	1/16 3
١	R509	0700067M	100K	CF	5	1/16
l	R511	0700031M	180R	CF	5	1/16
١	R513	0700031M	180R	CF	5	1/16
	R515	0700031M	180R	CF	5	1/16
	R519	R120319	100R	CF	5	1/2
	R522	0700027M	100R	CF	5	1/16
1	R523	0700063M	47K	CF	5	1/16
	VR601	0160421	200R	VR	VERTICAL	SIZE
	R602	0179558M	820K	CF	5	1/16
	R604	0700051M	5K6	CF	5	1/16
	R605	0187098M	24K	CF	5	1/16
	R606	0187098M	24K	CF	5	1/16
l	R607	0700038M	680R	CF	5	1/16
	R608 R609	0700054M 0113687M	10K 3R0	CF CF	5 5	1/16
ı	R610	0113687M	3R0	CF	5	1/2 1/2
	R611	R227319	270R	CF	5	1/2
l	R612	R135319	1K5	CF	5	1/2
ı	R613	R822319	820R	CF	5	1/2
	VR701	0160215	10K	VR	HORIZ.	PHASE
ı	R701	0700061M	33K	CF	5	1/16
	R701A	0700061M	33K	CF	5	1/16
ı	R702	0179558M	820K	MF	5	1/16
	R703	0700034M	330R	CF	5	1/16
	R704	0700056M	15K	CF	5	1/16
	R706	0700054M	10K	CF	5	1/16
l	R710	0110261S	4K7	M0	5	2
	R711	0110253S	2K2	MO	5	2
l	R712	R457714	470K	MF	5	1/2
	R713 R714	R618319 R618319	68R 68R	CF CF	5 5	1/2
	R715	0119665M	270K	MF	1	1/2 1/8
	R716	0119648M	51K	MF	1	1/8
	R717	0700056M	15K	CF	5	1/16
	R718	0700046M	2K7	CF	5	1/16
	R719	R832330	8K2	CF CF	5	1/4
	R720	0700054M	10K	CF	5	1/16
L	R723	R152330	120K	CF	5	1/4

Ref No.	Part No.	Value	Туре	%Tol	Wattage
R724	R152330	120K	CF	5	1/4
R727	0188192M	1R2	CF	5	1/2
R728	R339330	3K9	CF	5	1/4
R729	R158330	180K	CF	5	1/4
R731	0147630	6R8	ww	10	7
R732	0700042M	1K2	CF	5	1/16
R733	0113722M	75R	CF CF	5	1/2
R734 VR801	0700037M 0160413	560R 500R	VR	5	1/16 KGROUND
R801	0700027M	100R	CF	5	1/16
VR802	0160413	500R	VR	1	CKGROUND
R802	0700027M	100R	CF	5	1/16
VR803	0160413	500R	VR		CKGROUND
R803	0700027M	100R	CF	5	1/16
R804	0700037M	560R	CF	5	1/16
R805	0700037M	560R	CF	5	1/16
R806	0700037M	560R	CF	5	1/16
R807	0700044M	1K8	CF	5	1/16
R808	0700044M	1K8	CF	5	1/16
R809	0700044M	1K8	CF	5	1/16
R811	0110273S	15K	MO	5	2
R812	0110273S	15K	M0	5	2
R813	0110273S	15K	M0 CF	5 5	2
R814 R815	R526319 R526319	560R 560R	CF CF	5	1/2 1/2
R816	R526319	560R	CF CF	5	1/2
R817	0700037M	560R	CF	5	1/16
R818	0700037M	560R	CF	5	1/16
R819	0700037M	560R	CF	5	1/16
R820	0700067M	100K	CF	5	1/16
R821	0700054M	10K	CF	5	1/16
R822	0700027M	100R	ČF	5	1/16
R901	R842319	82K	CF	5	1/2
R902	0110137S	470R	MO	5	1
R903	0110221S	100R	M0	5	1
R904	0700046M	2K7	CF	5	1/16
R905	0700051M	5K6	CF	5	1/16
R906	0700041M	1K0	CF	5	1/16
R907	0700048M	3K9	CF	5	1/16
R908 R909	0700024M 0700052M	56R	CF	5	1/16
R910	R115330	6K8 15R	CF CF	5 5	1/16
R911	R120330	100R	CF	5	1/4 1/4
R912	0700032M	220R	CF	5	1/16
VR951	0160211	1K0	VR	HT	PRESET
R951	R349319	39K	CF	5	1/2
R952	R237330	2K7	CF	5	1/4
R953	R447319	47K	CF	5	1/2
R954	R832319	8K2	CF	5	1/2
R955	0110131S	270R	MO	5	1
R957	R812330	82R	CF	5	1/4
R958	0700049M	4K7	CF	5	1/16
R959	0700049M	4K7	CF	5	1/16
R960	R132330	1K2	CF	5	1/4
R961	0700046M	2K7	CF	5	1/16
R999	R170727	10M	MF	5	1
VR2101	E311694	VR	10K		N CONTROL
VR2102	E311694	VR	10K		CONTROL
VR2103 R2103	E311694	VR	10K CF	CONTRASI	
R2103	0700063M 0700041M	47K 1K0	CF	5 5	1/16 1/16
112100	0700041101	INU	UF		0 PANEL)
VR2104	E311694	10K	VR		S CONTROL
R2105	0700027M	100R	CF	5	1/16
	J. 000E. 171	.00.1	- U		., .0

PRODUCT SAFETY NOTE: Components marked with a \triangle have special characteristics important to safety. Before replacing any of these components, read carefully the PRODUCT SAFETY NOTICE of this service manual. Don't degrade the safety of this receiver through improper servicing.

Ref No.	Part No.	Value	Туре	%Tol	Wattage
R2106 R2107 R2108 R2109 R2109	0700026M 0700065M 0700026M 0700041M 0700061M	82R 86K 82R 1K0 33K	CF CF CF CF	5 5 5 5 (A53072	1/16 1/16 1/16 1/16 1/16 1/16 P PANEL)
R2110 R2111 R2112 R2113 R2114 R2114	0700032M 0700036M 0700036M 0700036M 0700041M 0700041M	220R 470R 470R 470R 470R 1K0	CF CF CF CF CF	5 5 5 5 5	1/16 1/16 1/16 1/16 1/16 1/16 2D PANEL)
R2115 R2116 R2117 R2118 R2120 R2121 R2121	0187038M 0700058M 0700051M 0700041M 0700041M 0700067M 0700051M	75R 22K 5K6 1K0 1K0 100K 5K6	CF CF CF CF CF CF	5 5 5 5 5 5	1/16 1/16 1/16 1/16 1/16 1/16 1/16
R2124A R2125A R2126A	0700036M 0700065M 0700063M	470R 68K 47K	CF CF CF	5 5 5	730 PANEL) 1/16 1/16 1/16
		Value	Туре	%Tol	Voltage
Ref No.	Part No. 0800359R	Value 1000u	EL	70101	10
C206 C207 C208 C209 C303 C304 C305 C306 C413 C414 C416 C417 C421 C423 C425 C427 C428 C429 C435 C441 C442 C443 C452 C501 C502 C503 C504-07 C509 C510 C511 C515 C516 C601 C602 C604 C605 C606 C608 C609 C610 C701 C702 C703 C704 C705 C709 C711	0880057R 0880057R 0880057R 0880057R 0880057R 0880057R 0880057R 0880057R 0880057R 0880039R 0800049R 0800049R 080003R 0880044R 0800057R 080003R 0890083R 0890084R 080057R 0800057R	100n 100n 100n 100n 100n 100n 100n 100n	E (E F F F F F F F F F F F F F F F F F	- 10 10 10 10 10 10 10 10 10 10 10 10 10	50 50 50 10 16 50 50 16 10 50 50 50 50 50

Ref No.	Part No.	Value	Туре	%Tol	Voltage	
C712 C714 C716 C717 C718 C719 C720 C721 C725 C727 C727A C729 C730 C801 C802 C803 C805 C806 C901 C902 C903 C904 C905 C906 C907 C908 C909 C910 C911 C912 C951 C952 C954 C955 C956 C957 C958 C998 C999 C2101 C2102 C2103 C2104 C2105 C2106 C2107	0250511R 0276725R 0255031 0800048R 0243504R 0800337R 029993R 0800007R 0299726 0299932 0299931 0880048R 0246344 0890081R 0890081R 0890081R 0249395 0249498 0247974 0800015R 0890074R 0244505R 0244505R 0244505R 0244505R 0244505R 0244505R 0249498 0247974 0800015B 0890074B 0890074B 0890074B 0890074B 0890074B 0890074B 0890074B 0890074B 0890074B 0890079B	22n 470n 47u 100u 180p 220u 100n 3u3 6n8 330n 270n 22n 100p 330p 470p 4n7 220u 220n 10n 4n7 47u 2n2 10n 470n 1n0 10u 100p 1n0 330p 180u 330p 180u 330u 47u 2n2 10n 10u 10u 2n2 10u 10u 2n2 10u 10u 270p	FFELLC LIFE FFFFCCCCCCLCCFMFLCCCLLLLCCLLCCLLCCLLCCLL	10 5 - 10 10 10 10 10 10 10 10 10 10 10 10 10	250 50 200 10 500 35 100 50 200 50 200 50 50 200 50 250 AC 250 AC 250 AC 250 AC 200 63 50 50 200 63 50 50 200 63 50 50 63 50 50 63 50 50 50 63 50 50 50 50 63 50 50 63 50 50 63 50 50 63 50 50 50 60 50 50 60 60 60 60 60 60 60 60 60 6	

PRODUCT SAFETY NOTE: Components marked with a \triangle have special characteristics important to safety. Before replacing any of these components, read carefully the PRODUCT SAFETY NOTICE of this service manual. Don't degrade the safety of this receiver through improper servicing.

	Ref No.	Part No.	Description
	IC201	T900567	TDA8361-N3
	IC402	T900402	TBA820M
Λ	IC501	2003652	TDA4661
۷:۰	IC601 IC901	2003951	TA8427K CNX82A
	IC951	2000252	MC7809CT
	Q701	T633140	BF483
	Q702	2315161	BU2508DF
	Q703	T732013	TS0820-20
	Q704	T633138	BF423
	Q801 Q802	T633137 T633137	BF459 BF459
	Q803	T633137	BF459
	Q804	T631276	BC558B
	Q901	T631276	BC558B
	Q902	T631291	BC368
	Q903 Q951	2314791 T633138	BUT12AF BF423
	Q952	T631275	BC548B
	Q953	2315441	BD136-16
	Q2101	T631275	BC548B
	Q2102	T631275	BC548B
	Q2102 Q2103	T631276 T631275	BC558B (A530720 PANEL)
	Q2122	T631275	BC548B BC548B
	D001	2483551	SLP-155B-81
	D213	2343963M	MPG06J
	D601	T531063	IN4002
	D701	2343942M	RGP10J
	D702 D703	2343941M 2348921M	RGP10G I IN4531
	D703	2348921M	IN4531
	D706	2343962M	MPG06G
	D801-05	2348921M	IN4531
	D901-04 D905	2344111M	BY134GP
	D905	2348921M 2348921M	IN4531 IN4531
	D907	2343963M	MPG06J
	D908	2348921M	IN4531
	D909	2343963M	MPG06J
	D951 D952	2343952 2336612	RGP15J RU3AM
	D953	2348921M	IN4531
	D954	2343963M	MPG06J
	ZD001	T536201	BZX79B5V1
	ZD/C424	T536176	BZX79C10V
	ZD501 ZD701	T536185 2339251M	BZX79C5V6 HZS36-ILT
	ZD703	T536190	BZX79C2V7
	ZD901	T536190	BZX79C2V7
	ZD902	T536223	BZX79B4V7
	ZD903	T536223	BZX79B4V7
Ì	ZD951 ZD952	T536175 2344121M	BZX79C6V8 P6KE130A
i	ZD2101	T536176	BZX79C10V
	ZD/R2108	T536176	BZX79C10V
	ZD/R2110	T536176	BZX79C10V
	ZD/R2111	T536176	BZX79C10V
	ZD/R2119 L701	T536176 2123334	BZX79C10V 47uH FILTER COIL AND CORE
	L702	2123334 2123728R	3300uH FILTER COIL
	L802	2122093	56uH COIL
	L901	2122694	LINE FILTER COIL
	L902	2124531	LINE FILTER COIL
	L903 L951	2125596 2125579	820uH CHOKE COIL 47uH CHOKE COIL
	T701	2260291	HORIZ. DRIVE TRANSFORMER
	T702	2435085	FLYBACK TRANSFORMER
Δ	T901	2274971	SWITCH MODE TRANSFORMER
	MISCELLANEOUS ITEMS		
1			
-	SG801	2340037	SPARK GAP
-	TH901 X501	E441034 2168741	THERMISTOR 4.43MHz CRYSTAL
	2.001	2.55741	
- 1		1	

Ref No.	Part No.	Description