

# Service Manual



Colour Television

**TC-21S10R  
TC-2105RT  
TC-21S1  
MX-3 Chassis**

SPECIFICATIONS\ТЕХНИЧЕСКИЕ ХАРАКТЕРИСТИКИ  
MX-3 CHASSIS BLOCK DIAGRAM\БЛОК-СХЕМА ШАССИ МХ-3  
SERVICE HINTS\ПРИЕМЫ СЕРВИСНОГО ОБСЛУЖИВАНИЯ  
ADJUSTMENTS\НАСТРОЙКИ  
BLOCK DIAGRAMS FOR INTEGRATED CIRCUITS\БЛОК-СХЕМЫ  
ИНТЕГРАЛЬНЫХ СХЕМ  
TEST POINT WAVEFORMS\СИГНАЛЫ В КОНТРОЛЬНЫХ ТОЧКАХ  
SCHEMATIC DIAGRAMS\ПРИНЦИПИАЛЬНЫЕ СХЕМЫ  
PARTS LOCATION\РАСПОЛОЖЕНИЕ ЧАСТЕЙ  
REPLACEMENT PARTS LIST\СПИСОК ЗАПАСНЫХ ЧАСТЕЙ

©1995 Matsushita Electric Industrial Co., Ltd.  
All right reserved. Unauthorized copying and  
distribution is a violation of law.

Panasonic

# Specifications

**Power Source :** AC 110 – 240V, 50/60 Hz

**Power Consumption :** 82 W

**Aerial Impedance :** 75 Ω unbalanced,  
Coaxial type

**Receiving System :** 17 System

## Receiving Channels :

VHF	1 – 11 PAL B (Australia & N.Zealand) 1 – 12 PAL/SECAM D 1 – 12 NTSC M JAPAN 2 – 12 PAL/SECAM B,G 2 – 13 NTSC M U.S.A.
UHF	21 – 69 PAL G I/SECAM B, G, K1 28 – 69 PAL G (Australia) 13 – 56 PAL D 13 – 52 NTSC M JAPAN 14 – 69 NTSC M U.S.A.
CATV	S1 – S41 (Hyper)

## Intermediate Frequency :

Video	38.0 MHz
Sound	31.5 MHz (D, K, K1) 32.0 MHz (I) 32.5 MHz (B, G) 33.5 MHz (M)
Colour	33.57 MHz (PAL) 33.6 MHz (SECAM) 33.75 MHz (SECAM) 34.42 MHz (NTSC)

## Video / Audio Terminals :

FAV In	Video In	1 Vp-p 75 Ω
	Audio In	Approx. 400mVrms
RAV In	Video In	1 Vp-p 75 Ω
	Audio In	Approx. 400mVrms
Monitor Out	Video Out	1 Vp-p 75 Ω
	Audio Out	Approx. 400mVrms

**High Voltage :** 28.5 kV (+1.2, -1.5 )  
at zero beam current

**Picture Tube :** A51JXS95X  
54 cm ( 21 inches )  
Measured diagonally,  
90° deflection

**Audio Output :** 3.0 W

**Speaker :** 9.65 x 5cm, 8Ω,

**Dimensions :** Height : 477.0 mm  
Width : 518.0 mm  
Depth : 478.0 mm

**Mass :** 21.0 kg ( Net Wt.)

**Remote Controller :** 22 Functions infrared controller

Specifications are subject to change without notice.  
Mass and dimensions shown are approximate.

## X-Radiation

### Warning :

The potential sources of X-Radiation in TV sets are the EHT section and the picture tube.

When using a picture tube test jig for service, ensure that jig is capable of handling 29.7 kV without causing X-Radiation.

**Note :** It is important to use an accurate periodically calibrated high voltage meter.

1. Set the brightness to minimum.
2. Set the service switch to the SERVICE position.
3. Measure the EHT. The meter reading should indicate 28.5 (+1.2, -1.5) kV. If the meter indication is out of tolerance, immediate service and correction is required to prevent the possibility of premature component failure.
4. To prevent the possibility X-Radiation, it is essential to use the specified picture tube, if service replacement becomes necessary.


## Shut Down Circuit Test

This test must be made as a final check before the set is returned to the customer.

1. Operates the TV set.
2. Set Controls :
 

Screen ( on FBT )	.....	minimum
Contrast	.....	minimum
Colour	.....	minimum
3. Connect a DC voltmeter to cathode of D523, and confirm that the voltage reading is 24.6 V, or less.
4. Supply 25.72 V DC to cathode of D523 and confirm that the shut down circuit does not operate.
5. Supply 27.94 V DC to cathode of D523, and confirm that the shut down circuit operates.
6. Switch the set off and disconnect the DC supply. Switch the set on and Normalize the contrast and colour.

## MX-3 Chassis Block Diagram

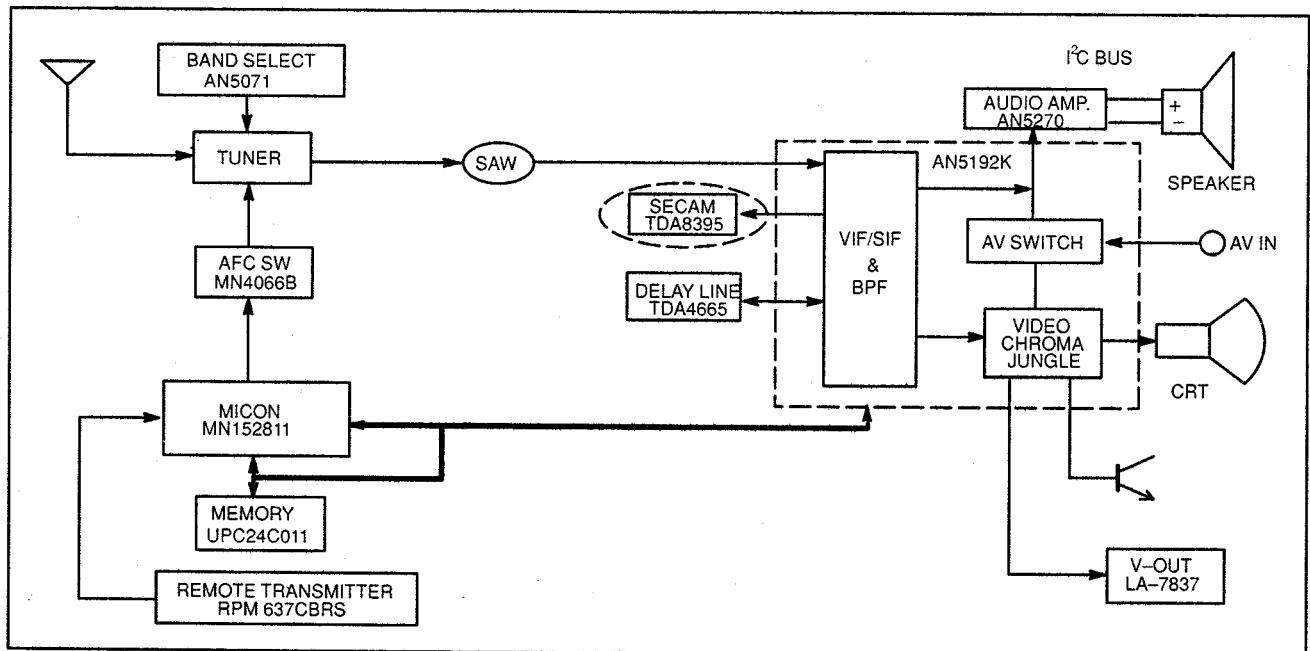

## The I<sup>2</sup>C Bus Concept :

### A. Features

1. The I<sup>2</sup>C bus is a 2 – wire serial bus consisting of a clock line (SCL) and a data line (SDA).
2. It allows bi – directional data transfer, between IC's.
3. It consists of a master and one or more slave IC's.
  - The master initiates transfer and generates clock signals.
  - The slave is the IC addressed by a master.

# TC-21S10R/2105RT/21S1

## B. Basic Format of the I<sup>2</sup>C Data transmission from the microcomputer (IC1101) to the IC601.

### 1. Transfer Timing

During transmission from the microcomputer to IC601, 12 bytes of each of the following types of information is transferred one at a time:

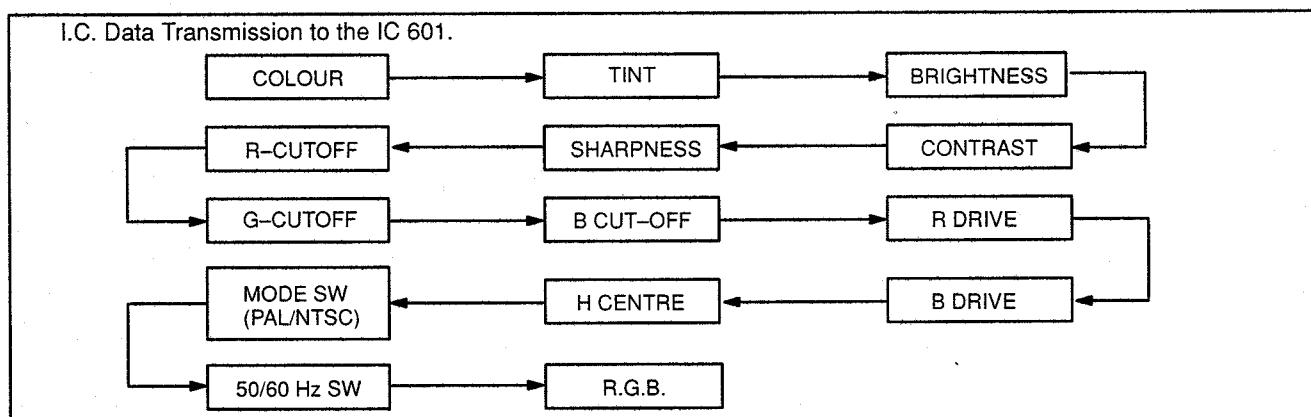


Fig. 4

### 2. Format

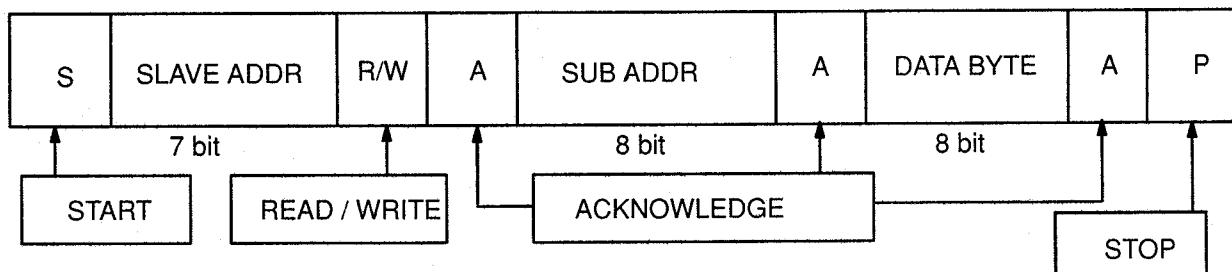


Fig. 5

## C. I<sup>2</sup>C Application in the MX-3 Chassis.

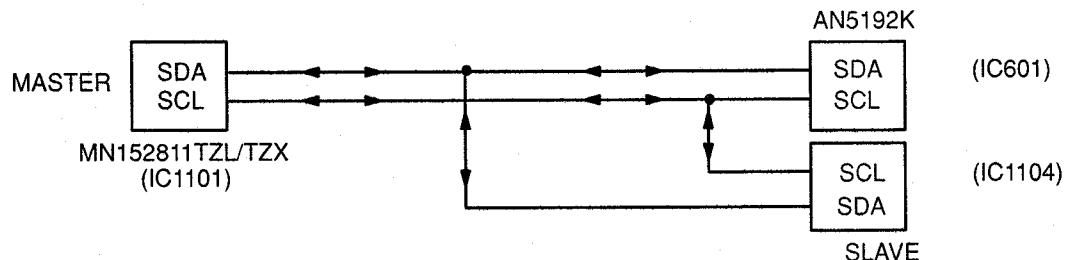


Fig. 6

During transfer the microcomputer IC1101 in the TV set is always the master device. IC601 and IC1104 are slave addressed by IC1101.

1. Various control functions are possible via the I<sup>2</sup>C bus from the microcomputer IC1101 to VCJ IC601, as shown in Fig. 4.
2. Data like position, BT voltage, band, AFC, skip, volume, recall, power and off timer setting, service mode setting, colour setting, function etc, are stored and read out from the EEPROM IC1104 via the I<sup>2</sup>C bus.

## Service Hints.

### 1. Service Position for E-Board.

1. Remove the back cover.
2. Stand the TV set as shown in fig. 7.
3. Remove the E-Board from the TV set by pulling the main board out as shown in figure 7.

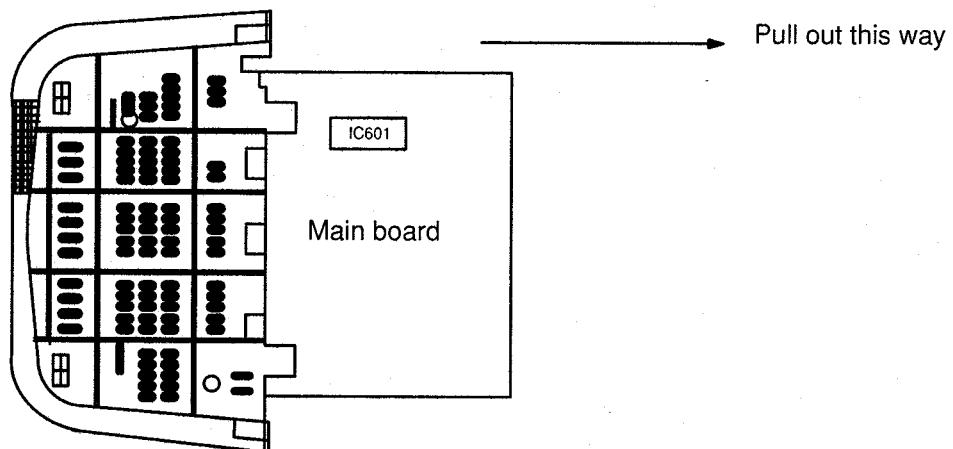


Fig.7

### Purpose Of Hotel Mode.

To limit the level of main functions of TV like Volume, Brightness, Tone, Sharpness, Colour and Contrast for hotel use, in order for hotel guest not to manoeuvre TV programme.

**How To Set :** To set the hotel mode, press CHANNEL ( $\wedge$ ) UP on the TV and OFF-TIMER on the remote control simultaneously as shown in figure. 8.

**How To Cancel :** To cancel the hotel mode, press VOLUME (-) DOWN on the TV and OFF-TIMER on the remote control simultaneously as shown in figure. 8.

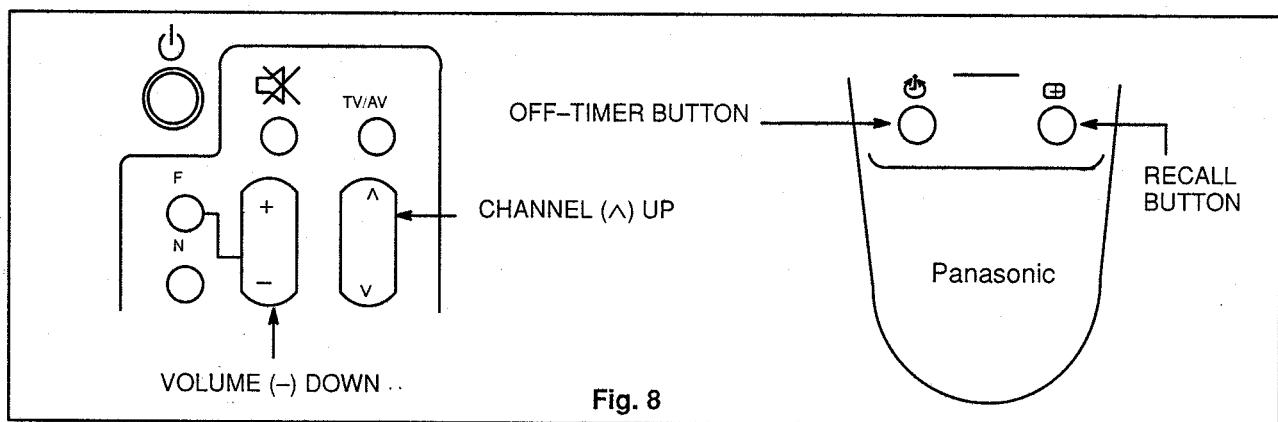


Fig. 8

# TC-21S10R/2105RT/21S1

## 2. How to set the Factory Mode for adjustment.

Follow the Steps shown in the block diagram below to set the Factory Mode for sub-colour; sub-bright; sub-contrast; RGB low-light and RGB high-light adjustments and return to Normal mode after adjustment.  
When the IC601(VCJ) or IC1104 are replaced, these adjustment must be done as below.

### The Sub Adjustment mode.

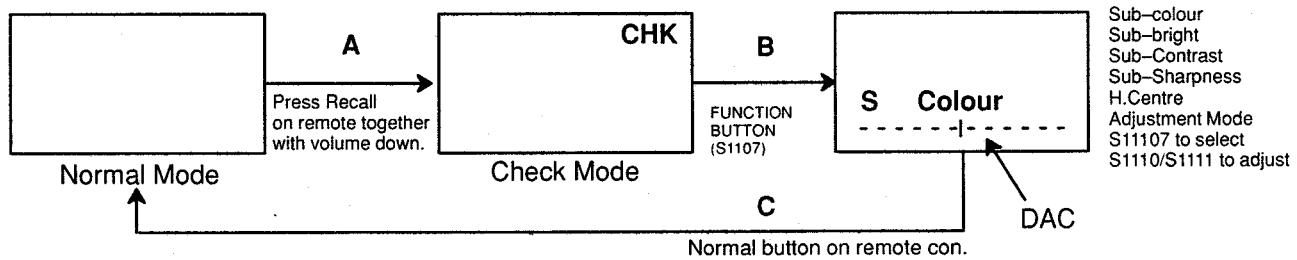


Fig. 9

### The CRT Adjustment mode.

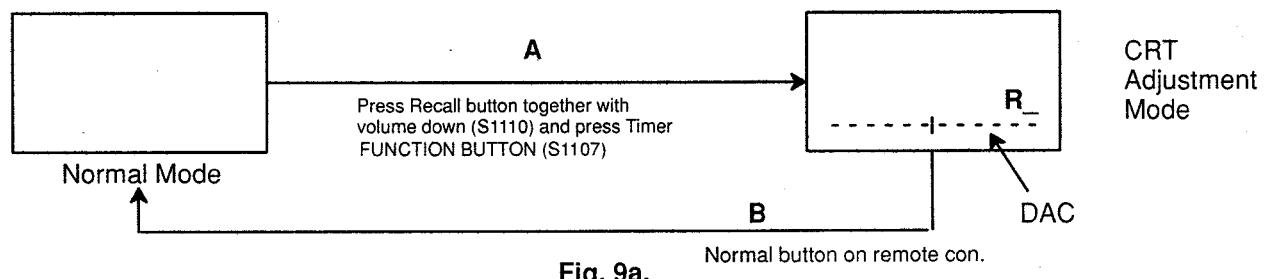


Fig. 9a.

- A:** Press the Recall button on the remote control together with volume down (S1110) on the TV. Then press "Timer" on the remote control. The TV in the Normal mode changes to the CRT Adjustment mode.  
Press the Function button (S1107) to select the required adjustment to be adjusted as shown in Fig. 9a.  
( Please refer to procedure on page 11 ).  
Press the Volume "up" or "down" button (S1111 & S1110) to change the DAC level.
- B:** Press the Normal button on the remote control transmitter twice to return to Normal mode.

### The White Balance Adjustment mode.

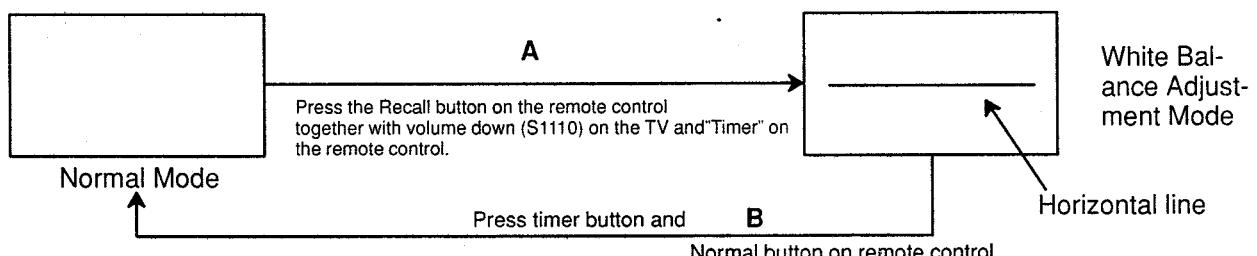



Fig. 9b





- A:** Press the Recall button on the remote control together with volume down (S1110) on the TV.  
Then press the Timer button on the remote control transmitter to enter White Balance Adjustment mode.  
( Please refer to procedure on page 11 ).  
Press the Volume "up" or "down" button (S1111 & S1110) to change the DAC level.
- B:** Press the Normal button on the remote control transmitter twice to return to Normal mode.

# Adjustment Procedure

Item / Preparation	Adjustment Procedure								
<b>B Voltage</b> <ol style="list-style-type: none"> <li>1. Operate the TV set.</li> <li>2. Set control as follow: Brightness ..... minimum Contrast ..... minimum</li> </ol>	<p>Confirm the DC voltages at the indicated test points, as follow:</p> <table> <tr> <td>TP1 : 90.0 ± 2.0 V</td> <td>TPE10 : 5.0 ± 0.5 V</td> </tr> <tr> <td>TPE8 : 12.0 ± 1.0 V</td> <td>D816 Cathode : 22.0 ± 2.0 V</td> </tr> <tr> <td>TPE9 : 9.0 ± 1.0 V</td> <td>D831 Cathode : 42.0 ± 2.5V</td> </tr> <tr> <td>E33-1 : 190.0 ± 15 V</td> <td></td> </tr> </table>	TP1 : 90.0 ± 2.0 V	TPE10 : 5.0 ± 0.5 V	TPE8 : 12.0 ± 1.0 V	D816 Cathode : 22.0 ± 2.0 V	TPE9 : 9.0 ± 1.0 V	D831 Cathode : 42.0 ± 2.5V	E33-1 : 190.0 ± 15 V	
TP1 : 90.0 ± 2.0 V	TPE10 : 5.0 ± 0.5 V								
TPE8 : 12.0 ± 1.0 V	D816 Cathode : 22.0 ± 2.0 V								
TPE9 : 9.0 ± 1.0 V	D831 Cathode : 42.0 ± 2.5V								
E33-1 : 190.0 ± 15 V									
<b>RF AGC</b> <p><b>A. Workshop</b></p> <ol style="list-style-type: none"> <li>1. Receive a colour bar signal at an RF level of <math>61 \pm 2 \text{dB}\mu\text{V}</math> with <math>75\Omega</math> loaded.</li> <li>2. Connect an oscilloscope to TPE 23, set to DC mode.</li> </ol> <p><b>B. Field</b></p> <ol style="list-style-type: none"> <li>1. Receive the television broadcast channel known to have the weakest RF signal strength.</li> </ol>	<ol style="list-style-type: none"> <li>1. Select "RF" indication on screen by using remote control at factory mode.</li> <li>2. Set RF AGC by using remote control volume (+) or volume (-) button until voltage at TPE 23 starts decreasing or until less than 0.2V from max.</li> <li>3. Increase RF signal strength by 2dB, confirm that TPE 23 voltage drops more than 1V.</li> </ol>								
<b>High Voltage</b> <ol style="list-style-type: none"> <li>1. Operate the TV set.</li> <li>2. Set control as follow: Brightness ..... minimum Contrast ..... minimum</li> </ol>	<ol style="list-style-type: none"> <li>1. Connect a DC voltage meter to Pin 1 of IC801 and confirm the voltage is <math>90.0 \pm 2.0 \text{ V}</math>.</li> <li>2. Connect a high voltage meter to anode of the picture tube.</li> <li>3. Confirm that the high voltage is within the range of <math>28.5 (+ 1.2, -1.5) \text{ kV}</math>.</li> <li>4. Normalize the brightness and contrast.</li> </ol>								

# TC-21S10R/2105RT/21S1

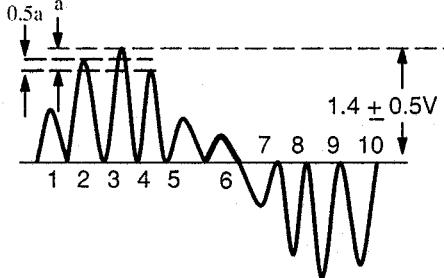Item / Preparation	Adjustment Procedure	Waveform
<p><b>M-NTSC Sub-Tint Adjustment</b></p> <p>Apply NTSC rainbow pattern.</p> <p>Connect an oscilloscope to TPE28.</p> <p>Connect a short jumper between TPE3 and TPE10.</p> <p>Press S1107 (FUNC.) and set System to NTSC 4.43 .</p> <p>Colour .....NORMAL or CENTRE</p> <p>Bright ..... NORMAL or CENTRE</p> <p>Contrast .....NORMAL or MAX.</p> <p>Tint .....NORMAL or CENTRE</p> <p>Press RECALL button on remote control, then press S1110 (VOL. DOWN) to Sub-Tint.</p> <p>Confirm CHK display on screen.</p>	<p>Confirm the amplitude of waveform:  <math>1.4 \pm 0.5V</math></p> <ol style="list-style-type: none"> <li>1. Adjust Sub-Tint so that No.2,3 and 4 becomes level waveform is similiar to Fig.10.</li> <li>2. Confirm TPE 28 ( R-out ) is <math>1.4 \pm 0.5V</math>. Return to user mode.</li> <li>3. Confirm phase at Tint is changed more than <math>\pm 30</math> by Tint control.</li> <li>4. Confirm that colour level is maximum when colour DAC is adjusted to maximum position.</li> </ol> <p>Note: Use Remote control only when adjusting User Control.</p>	 <p>Fig.10</p>

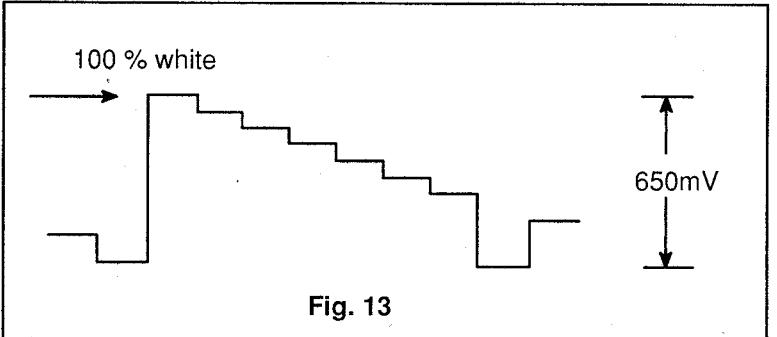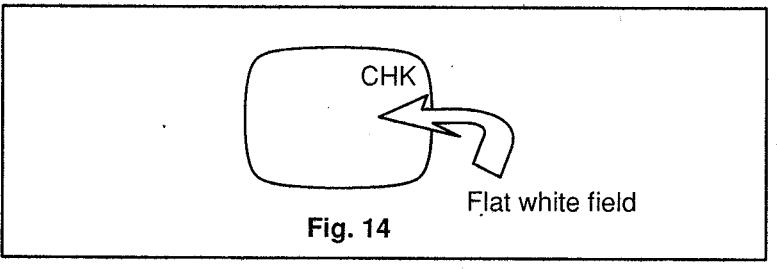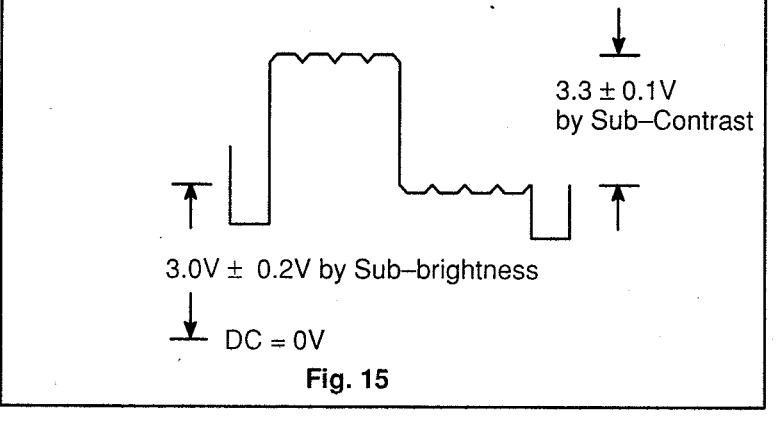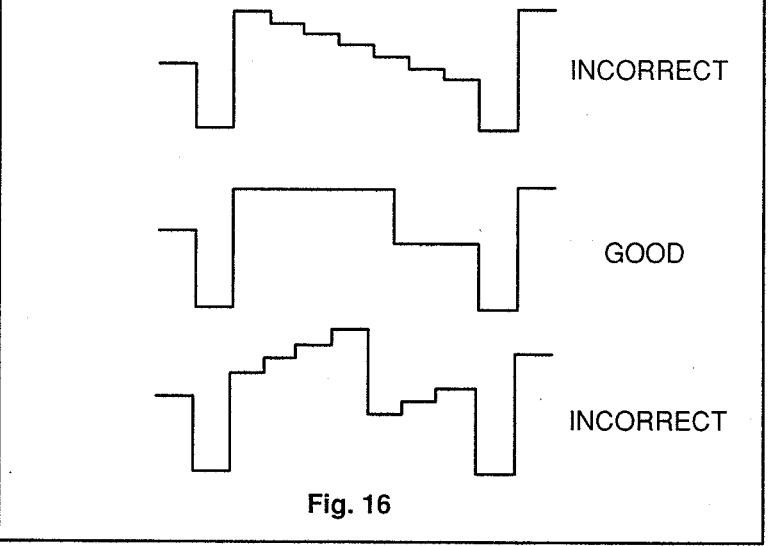Item / Preparation	Waveforms
<p><b>Video-input, Sub-Contrast, Sub-Brightness and Sub-colour</b></p> <ol style="list-style-type: none"> <li>Input a colour bar signal with white at 100% of peak level. Connection can be made via A/V and this may enable adjustment of the pattern generator video output level to obtain the correct black to white amplitude ( at TPH 9 ).</li> <li>Confirm that the Sync tip to white amplitude is <math>650\text{mV} \pm 50\text{ mV}</math> at Pin 43 ( under IC601 ) as shown in Fig. 13.</li> <li>Receive a colour bar pattern. Connect an oscilloscope to pin 3 of E-32 on the E-board and chassis earth.</li> <li>Set Colour, Brightness and Contrast to Normal ( Colour and Brightness at centre, Contrast at max. )</li> <li>Connect a short jumper between TPE3 and TPE10 ( chassis ). Note that this step disable the ABL, so avoid operation in this condition for long periods at high beam current.</li> <li>Press the RECALL button on remote control together with volume down button. The screen should then show a flat whitish field, with the OSD message " CHK " possibly visible at the top as shown in Fig. 14.</li> <li>Press the Function button ( S1107 ) to select the required function to be adjusted ( in this case " Contrast " ).</li> <li>Now press either the Volume " up or down " buttons ( S1110 or S1111 ). " S " and " Contrast " will be displayed on the screen, indicating " Sub " Contrast, and the Sub-Contrast level will be changed. Note that the Volume " up or down " buttons must be pressed while the Function ( i.e. Contrast ) OSD is still on screen.</li> <li>Press the Function button ( S1107 ) to select Brightness and then the Volume " up or down " buttons ( S1110 or S1111 ) will similarly permit Sub-Brightness to be altered and adjusted.</li> <li>Adjust the Sub-Brightness ( first ) and Sub-Contrast ( second ) to produce the waveform shown in Fig. 15.</li> <li>Using the Function button ( S1107 ) and Volume " up and down " buttons ( S1110 and S1111 ). Select Sub-colour and adjust to produce the waveform shown in Fig. 16.</li> <li>Cancel the " CHK " mode by pressing the NORMAL button on remote control transmitter and remove the TPE3 to TPE10 jumper.</li> </ol>	 <p>Fig. 13</p>  <p>Fig. 14</p>  <p>Fig. 15</p>  <p>Fig. 16</p>

# TC-21S10R/2105RT/21S1

## ADJUSTMENTS PROCEDURE FOR WHITE BALANCE

Item / Preparation	Adjustment Procedure		
<b>CRT CUT-OFF</b>			
1. Input a flat white Field signal, and set Contrast to maximum.	PRESS S1107	OSD	MEANING
2. Connect an oscilloscope to TPY 1 ( Green CRT drive ) and TPY 2 ( Ground ). TPY 1 and TPY 2 are located on the Y-PCB ( CRT neck panel ).	1	R_	RED LOWLIGHT
3. Push the Volume Down ( S1110 ) together with RECALL button to enter factory mode & press "TIMER" button on the remote control to select CRT ADJUSTMENT Mode ( shown in Fig. 9a on page 7 ). "CHK" will appear on the screen.	2	G_	GREEN LOWLIGHT
4. Press the Function button ( S1107 ) FOUR times to select "BR" ( meaning " brightness " ). Note that repeated pushing of the Function button cycles through the CRT adjustment as shown in Fig. 16.	3	B_	BLUE LOWLIGHT
5. WHILE " BR " IS STILL ON SCREEN, set the screen control to minimum by turning it anti-clockwise, and use the Volume " up " or " down " button - ( S1110 and S1111 ) to set the DC=0V to video level at 140V, as shown in Fig. 17.	4	BR	SUB BRIGHTNESS
6. Advance the screen control sufficiently to see the OSD. WHILE " BR " IS STILL ON SCREEN, ( push the Function button to bring it up again if necessary), push the "TIMER" button on the remote control. This will collapse the vertical scan.	5	R_	RED HIGHLIGHT
7. Slowly adjust the screen control such that one of the R, G or B beams just appears, across the centre of the screen, ( Fig. 19 ). THIS IS THE SETTING POINT FOR THE SCREEN CONTROL. Note which colour appeared, and DO NOT ADJUST THE LOW-LIGHT SETTING FOR THIS PARTICULAR COLOUR IN THE FOLLOWING PROCEDURE.	6	B_	BLUE HIGHLIGHT

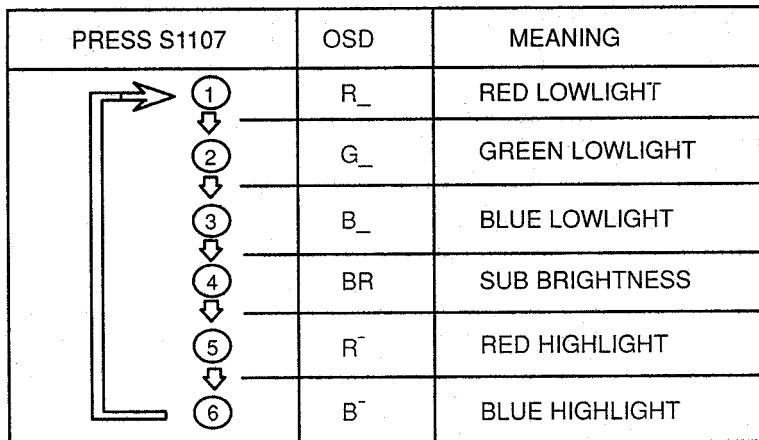


Fig. 16

### Operation of the Function Button ( S1107 ) in CRT Adjustment Mode


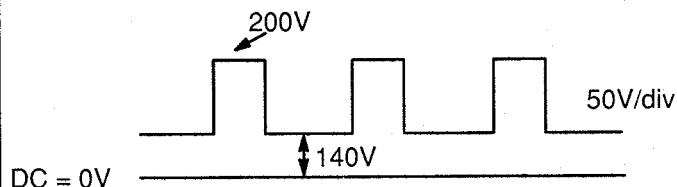



Fig. 17

### Sub – bright adjustment

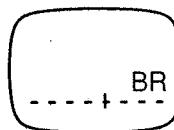

PUSH "TIMER" BUTTON ( S1101 ) WHILE " BR " IS STILL ON SCREEN TO COLLAPSE THE FRAME SCAN.

Fig. 18

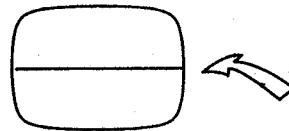

ADJUST SCREEN UNTIL ONE COLOUR JUST APPEAR.

Fig. 19

Item / Preparation	Adjustment Procedure
<p><b>R, G, B LOW LIGHT ADJUSTMENT</b></p> <p>8. Complete steps 1 to 7 of the CRT cut-off procedure, and do not adjust the screen control from here on.</p> <p>9. Press the "TIMER" button ( S1101 ) to return to full field scan, and use the Function Switch ( S1107 ) to select the lowlight setting for one of the two colour ( R, G or B ) that did not appear at step 7. Fig. 16 shows the selection sequence of the Function Switch ( S1107 ).</p> <p>10. With the R_, B_, or G_ OSD still on screen, press the "TIMER" button again to collapse the vertical scan.</p> <p>11. Use the Volume " up " and " down " buttons ( S1110 and S1111 ) to match the levels of the two colours now on screen.</p> <p>12. Repeat Steps 9 to 11 for the remaining colour, to achieve a white line on screen.</p> <p>13. Press the "TIMER" button ( S1101 ) to return to full frame scan.</p> <p><b>R, B HIGH LIGHT ADJUSTMENT</b></p> <p>14. Press the Normal Button on the remote control transmitter twice to return to Normal Mode, after completing the preceding CRT cut-off and lowlight adjustments.</p> <p>15. Set Contrast to Normal ( max. ), and continue using the flat white field input as per Step 1.</p> <p>16. Press the RECALL button together with Volume down button. Then press the "TIMER" button. ( S1101 ) TWICE.</p> <p>17. Use the Function Button ( S1107 ) to select R_ ( red highlight ) and B_ ( blue highlight ) as necessary ( refer to Fig. 16 for the Function Button sequence ).</p> <p>18. With R_ or B_ STILL ON SCREEN, press the Volume " up " and " down " buttons ( S1110 and S1111 ) as necessary to achieve a uniform white field.</p> <p>19. Press the Normal Button on the remote control transmitter twice to return to Normal Mode.</p> <p>20. Input a greyscale pattern, and confirm correct lowlight and highlight white balance.</p>	<p>EXAMPLE: If a green line appeared at Step 7.</p> <pre>     graph TD       A["TIMER button ( S1110 )"] --&gt; B["Function ( S1107 ) to select R_"]       A --&gt; C["Function ( S1107 ) to select B_"]       B --&gt; D["R_"]       C --&gt; E["B_"]       D --&gt; F["TIMER button ( S1101 )"]       E --&gt; F       F --&gt; G["COLLAPSE SCAN"]       G --&gt; H["Volume ▲ or ▼"]       H --&gt; I["ADJUST LOWLIGHT"]       I --&gt; J["White line on screen after the R,G,B lowlight adjustment."]       J --&gt; K["TIMER button ( S1101 )"]       K --&gt; L["FULL SCAN"]       L --&gt; M["Repeat for the remaining colour."]       M --&gt; N["Repeat the procedure if necessary to improve white balance of the collapsed field line."]       N --&gt; O["TIMER button ( S1101 )"]       O --&gt; P["FULL SCAN"]       P --&gt; Q["Normal button on remote control transmitter"]       Q --&gt; R["NORMAL MODE"]   </pre>

# TC-21S10R/2105RT/21S1

*Before Colour Purity, Convergence and White Balance adjustments are attempted, V. Height, H. Centre and Focus adjustments must be completed.*

## Colour Purity

- Set the Brightness and Contrast controls to their maximum positions.
- Operate the TV set for 30 minutes.
- Fully degauss the picture tube by using an external degaussing coil.
- Apply a crosshatch pattern signal and adjust the static convergence magnets to the approximately correct position.
- Receive a black and white signal.
- Set the controls as following :  
 Red ..... minimum  
 Green ..... maximum  
 Blue ..... minimum  
 Press the SHIPPING button on the remote control twice to select CRT Adjustment Mode and then the Function button ( S1107 ) as per Fig. 16 to select low lights.
- Loosen the clamp screw for the deflection yoke A in Fig. 24 and move the deflection yoke as close to the purity magnet as possible.
- Adjust the purity magnetic rings so that a vertical green field is obtained at the centre of the screen.

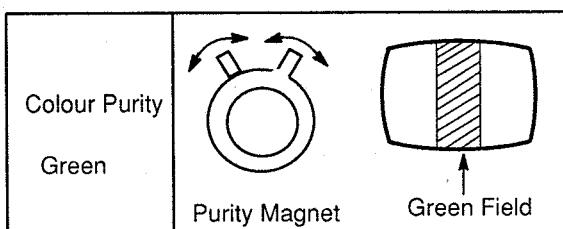


Fig. 20

- Slowly push the deflection yoke and set it where a uniform green field is obtained.

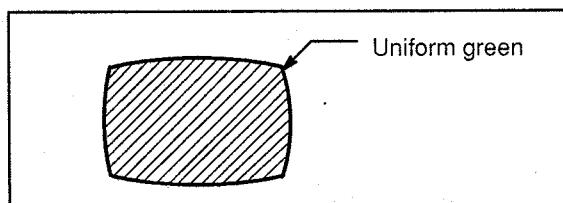


Fig. 21

- Re-adjust the Low Light controls to their correct settings and make sure that a uniform white field is obtained.
- Tighten the clamp screw A in Fig. 24.

## Convergence

- Apply a crosshatch pattern signal and Normalize Contrast control to the maximum position.
- Adjust Brightness until the grey portion of the crosshatch pattern just becomes black.
- Adjust the Red and Blue line at the centre of the screen by rotating the R-B static convergence magnetic rings.

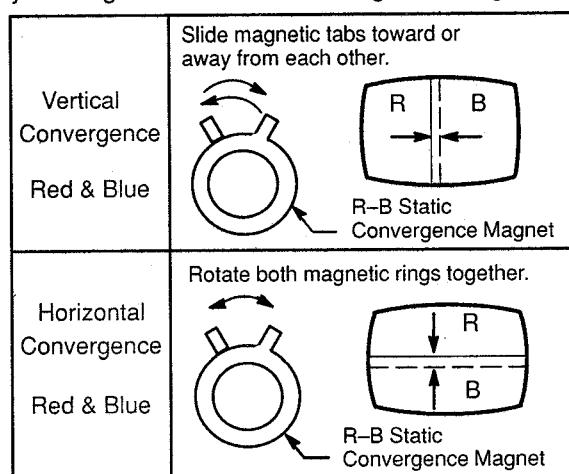


Fig. 22

- Adjust Red and Blue with the Green line at centre of the screen by rotating ( RB ) – G static convergence magnetic rings.
- Lock convergence magnets with silicone sealer.
- Remove the DY wedges and slightly tilt the deflection yoke vertically and horizontally to obtain the good overall convergence.

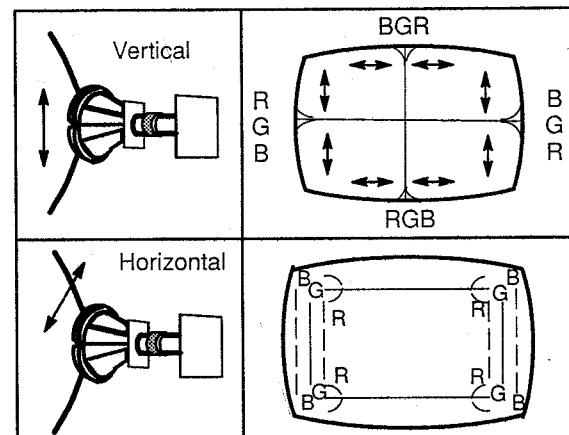


Fig. 23

- Fix the deflection yoke by re-inserting the DY wedges. Refer to Fig. 24.
- If purity error is found, repeat "Colour Purity" adjustment.

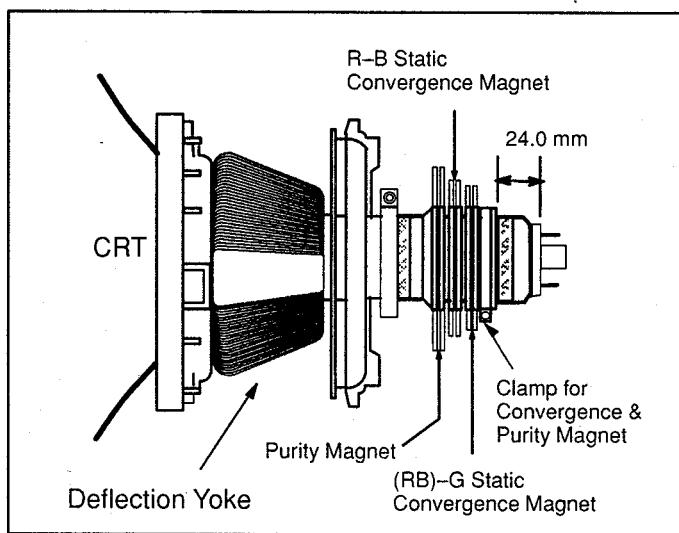


Fig. 24


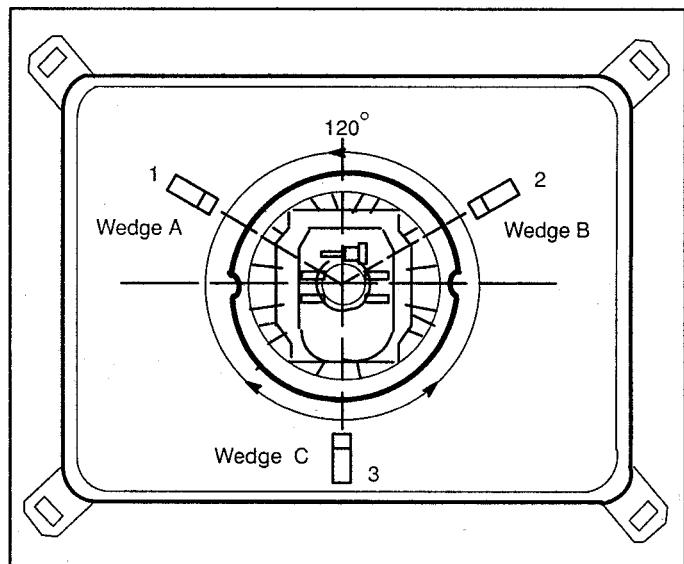


Fig. 25


**Notes :**

1. Wedge A, B, and C should be inserted following the sequence of 1, 2, and 3 shown in Fig. 25.
2. The wedges should be set  $120^\circ$  apart from each other.
3. Be certain that the four wedges are firmly fixed and the Deflection Yoke is tightly clamped in place. Otherwise the Deflection Yoke may shift its position and cause a loss of convergence and purity.

## TEST POINT WAVEFORMS

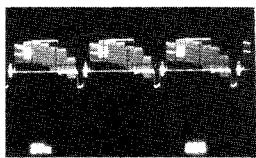

1. IC101 Pin 11 (E-PCB)  
Composite Video Signal  
4.0V. 20 $\mu$ s / Div

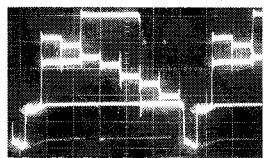

2. IC601 Pin 43 (E-PCB)  
Y In  
0.6V. 20 $\mu$ s / Div




3. IC601 Pin 48 (E-PCB)  
Chroma In  
0.9V. 20 $\mu$ s / Div




4. IC601 Pin 63 (E-PCB)  
B – Y In  
1.4V. 20 $\mu$ s / Div




5. IC601 Pin 64 (E-PCB)  
R – Y In  
1.1V. 20 $\mu$ s / Div

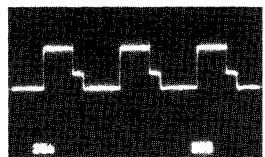

6. IC601 Pin 56 (E-PCB)  
Horizontal Out  
3.9V. 20 $\mu$ s / Div

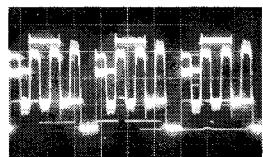


7. TPE 26 (IC601 PIN 17)  
(E-PCB)  
6.5V. 20 $\mu$ s / Div

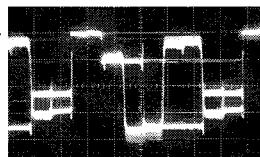

8. TPE 28 (IC601 PIN 15)  
(E-PCB)  
6.3V. 20 $\mu$ s / Div




9. E-32 (E-PCB)  
Green Output From IC601 Pin 16.  
5.5V. 20 $\mu$ s / Div

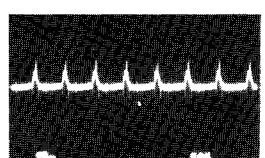


10. FBT Pin 4 (E-PCB)  
316V. 50 $\mu$ s / Div




11. FBT Pin 6 (E-PCB)  
273V. 20 $\mu$ s / Div

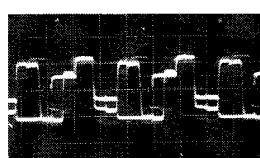

12. Q351 Collector  
(Y-PCB)  
124V. 20 $\mu$ s / Div

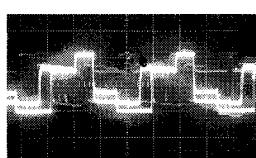


13. Q352 Collector  
(Y-PCB)  
109V. 20 $\mu$ s / Div

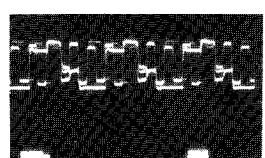

14. Q353 Collector  
(Y-PCB)  
125V. 20 $\mu$ s / Div




15. IC401 PIN 12 (E-PCB)  
Vertical Out  
48.2V. 5ms / Div

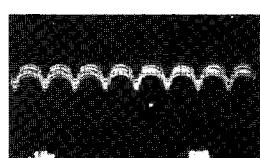

16. Q566 Base (E-PCB)  
Horizontal Out  
57V. 50 $\mu$ s / Div




17. Q566 Collector (E-PCB)  
Horizontal Out  
800V. 50 $\mu$ s / Div

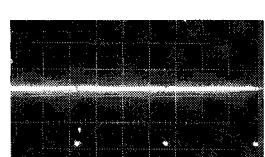

18. IC601 Pin 58 (E-PCB)  
Vertical Out  
4.4V. 5ms / Div




19. TPH 10 (E-PCB)  
Video Output Terminal  
3.88V. 20 $\mu$ s / Div

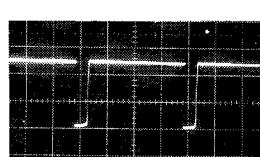


20. IC601 Pin 57 (E-PCB)  
50Hz / 60Hz  
0.1V. 5ms / Div




21. IC601 Pin 21 (E-PCB)  
S D A  
4.8V. 20 $\mu$ s / Div

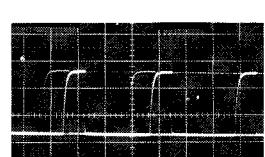


22. IC601 Pin 22 (E-PCB)  
S C L  
5.0V. 20 $\mu$ s / Div

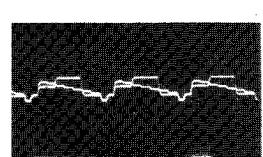

23. IC601 Pin 45 (E-PCB)  
Vertical Separator  
2.0V. 20 $\mu$ s / Div

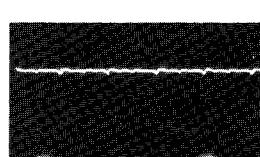

24. IC1101 Pin 12 (E-PCB)  
Band 1  
0.5V. 1 $\mu$ s / Div

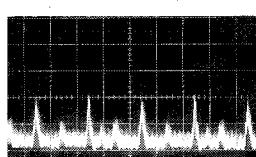


25. IC1101 Pin 10 (E-PCB)  
Band 2  
0.4V. 1 $\mu$ s / Div




26. IC401 Pin 2 (E-PCB)  
Vertical Trigger Input  
4.3V. 5ms / Div

# TC-21S10R/2105RT/21S1


## Block Diagram for Integrated Circuits

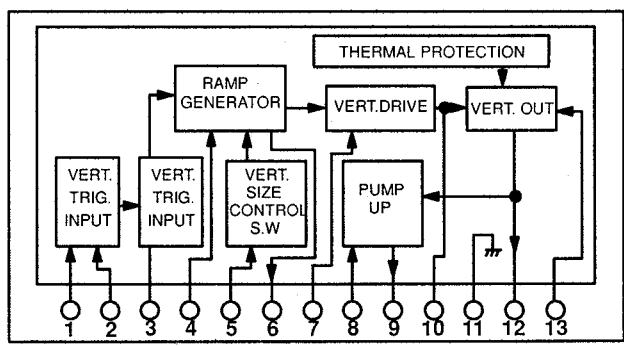


IC401 ( LA 7837 )

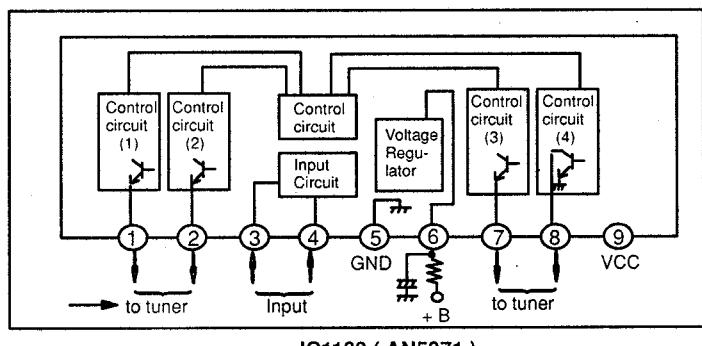


IC1103 ( AN5071 )

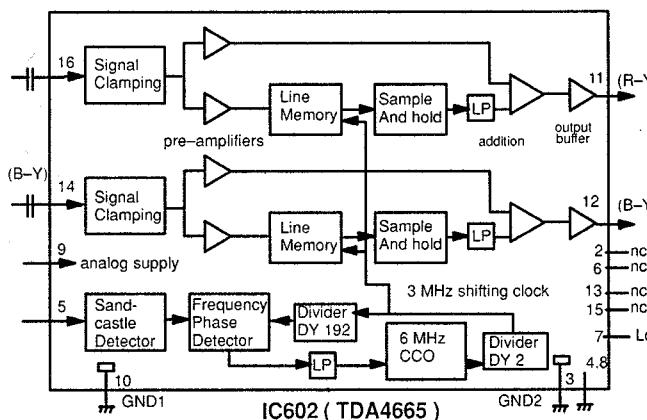

IC602 ( TDA4665 )

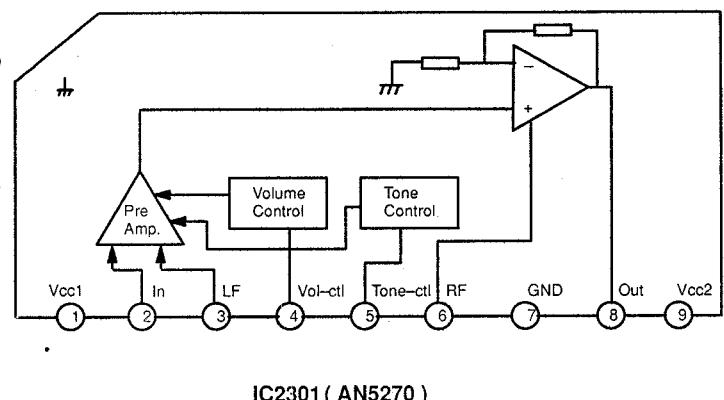


IC2301 ( AN5270 )

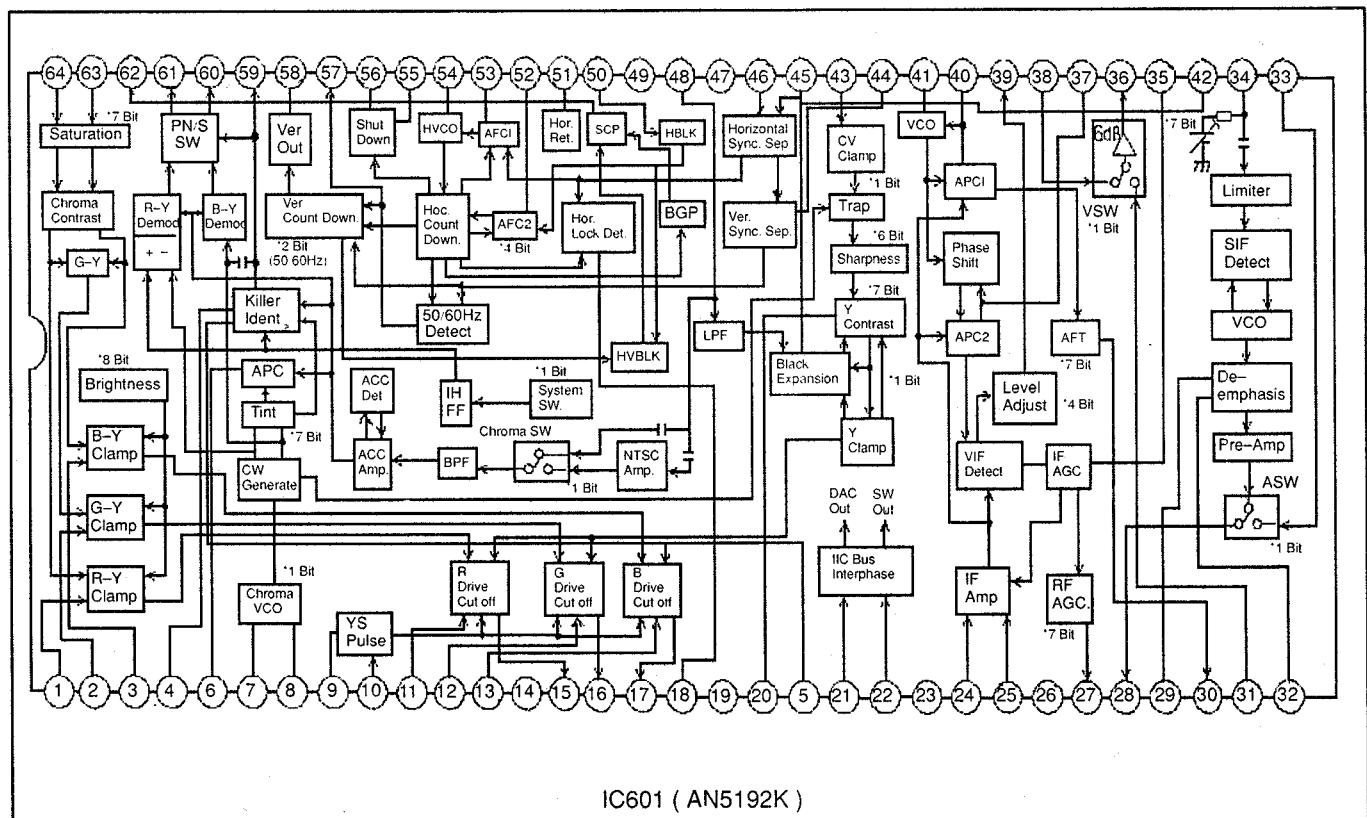

IC601 ( AN5192K )

# TC-21S10R/2105RT/21S1

Remote Control EUR501310

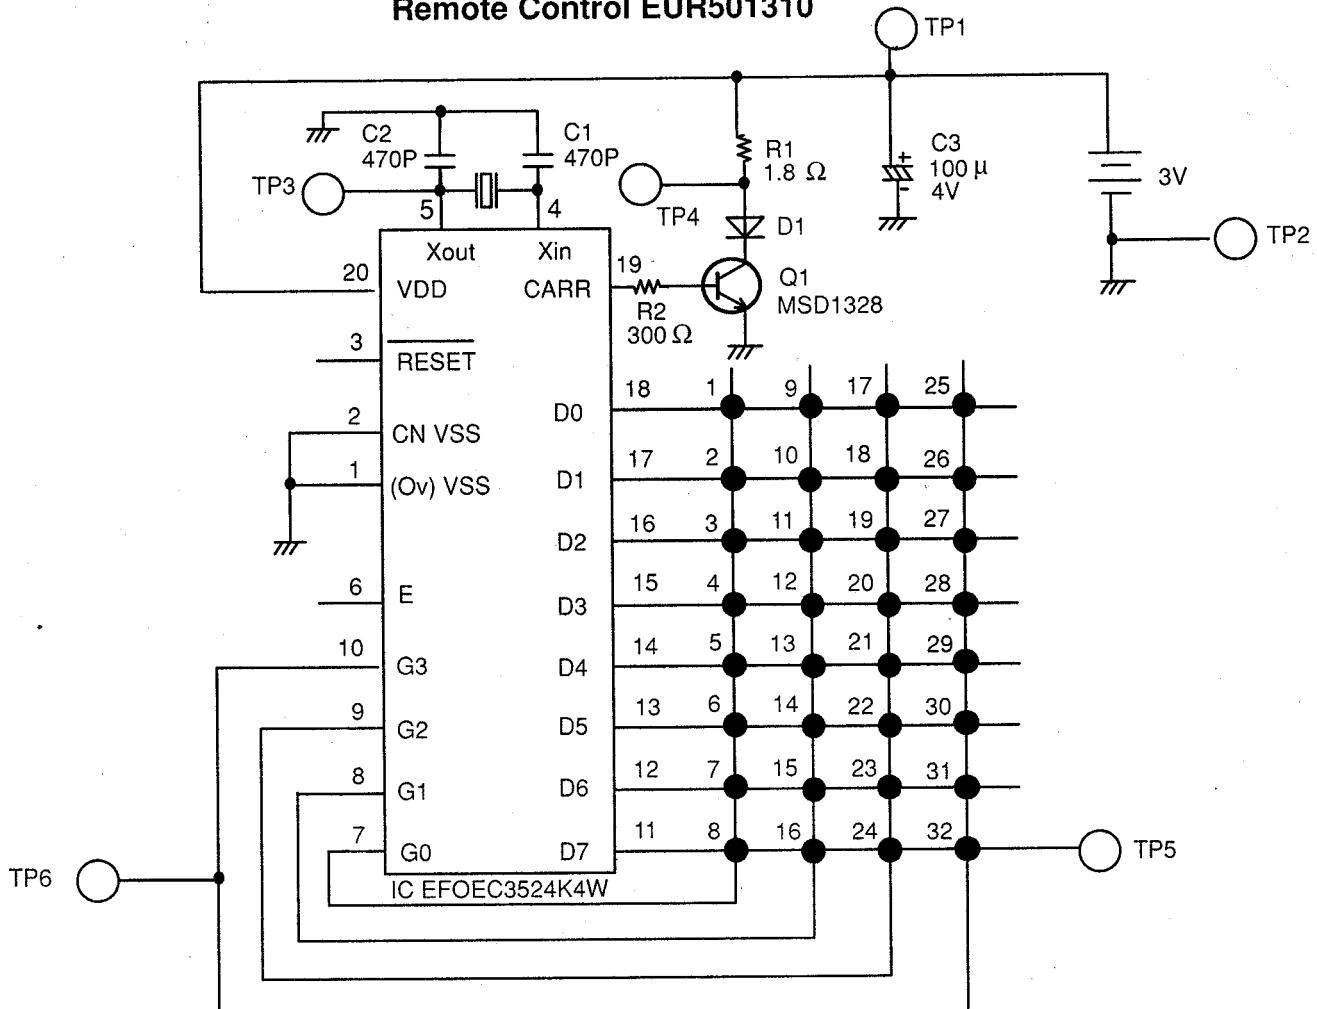



\* Parts listed here are not suppliable.



Fig.26




Shows user key




KEY NO.	FUNCTION	DATA CODE		KEY NO.	FUNCTION	DATA CODE	
		ON	OFF			ON	OFF
1	TV/VIDEO	05		12	CH 8	17	
2	FUNCTION	06		13	CH 9	18	
3	NORMAL	0C		14	CH 0	19	
4	OFF TIMER	0F		15	VOLUME UP	20	
5	CH 1	10		16	VOLUME DOWN	21	
6	CH 2	11		17	MUTE	32	
7	CH 3	12		18	CH UP	34	
8	CH 4	13		19	CH DOWN	35	
9	CH 5	14		20	RECALL (STATUS)	39	
10	CH 6	15		21	2 DIGIT	3B	
11	CH 7	16		22	TV POWER	3D	


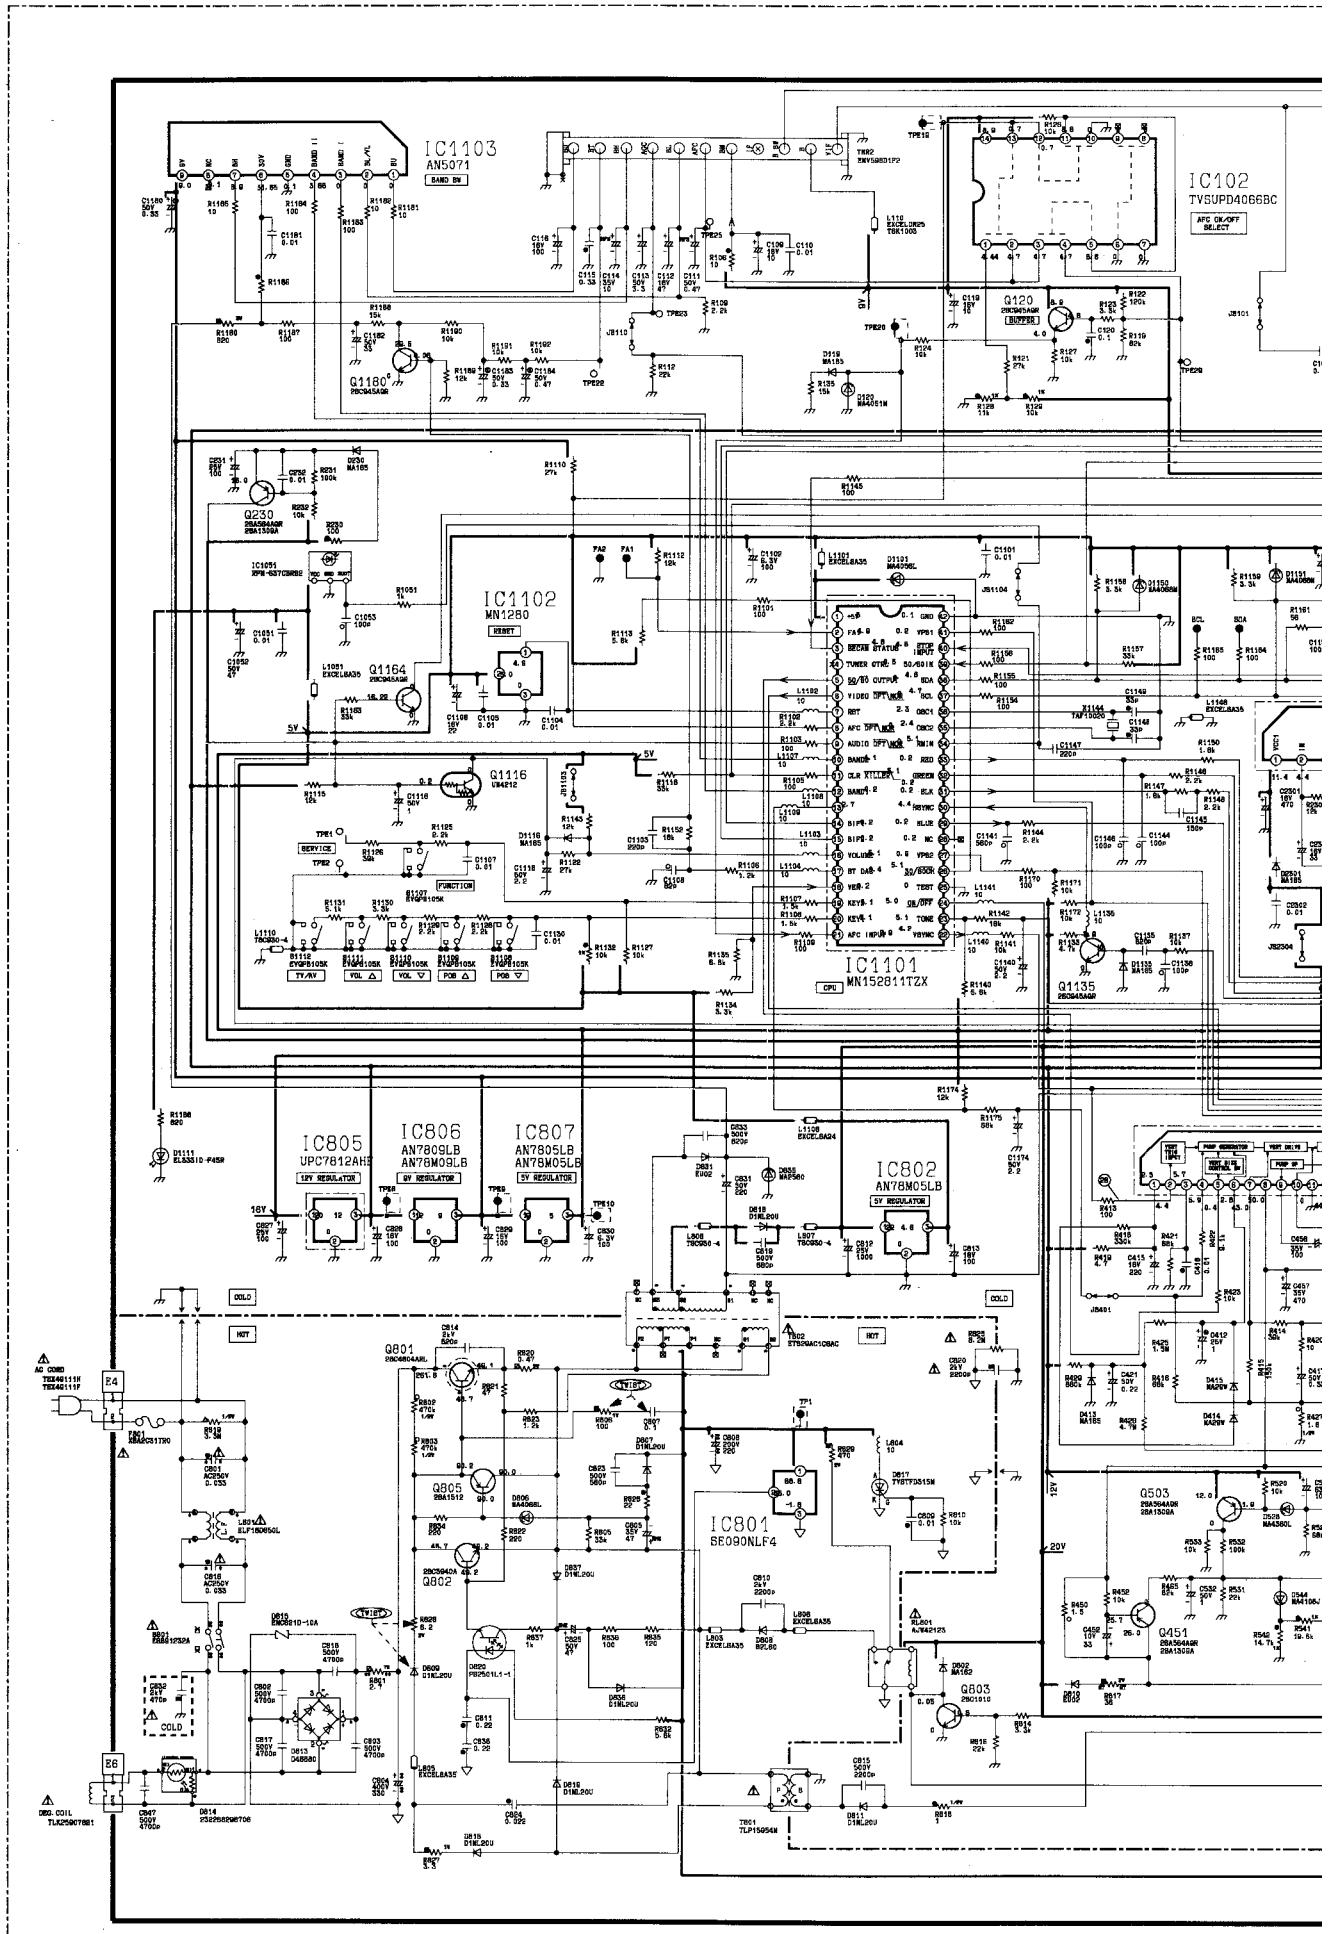


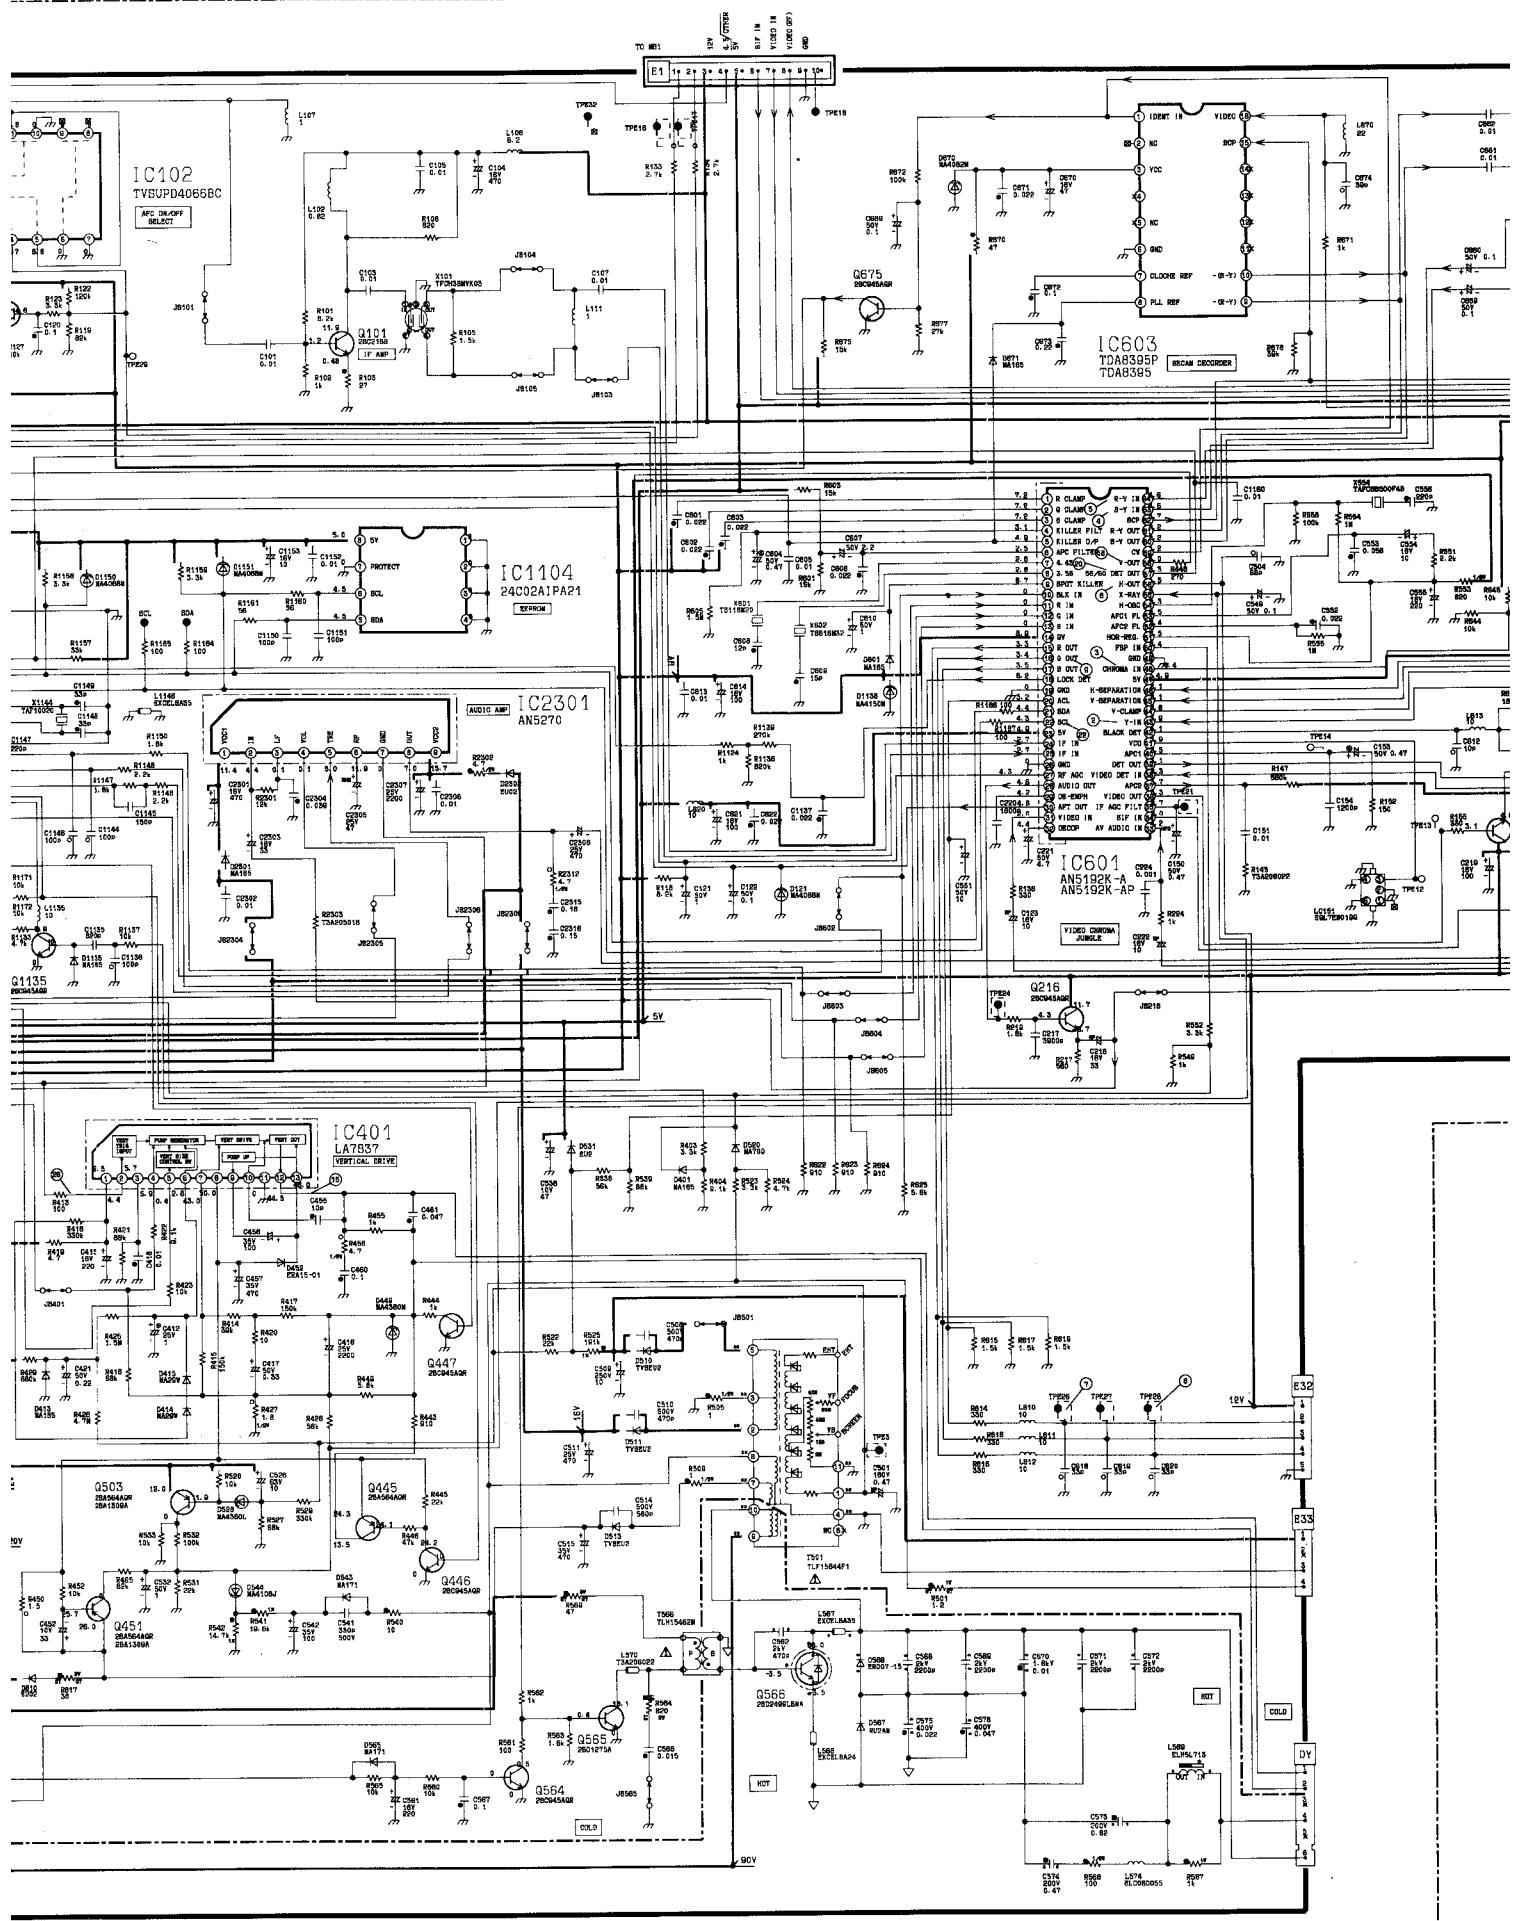

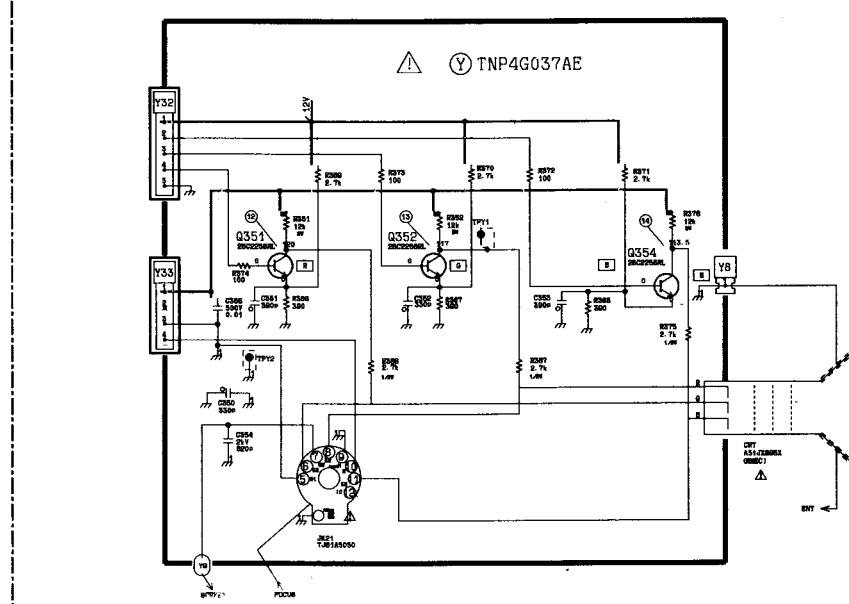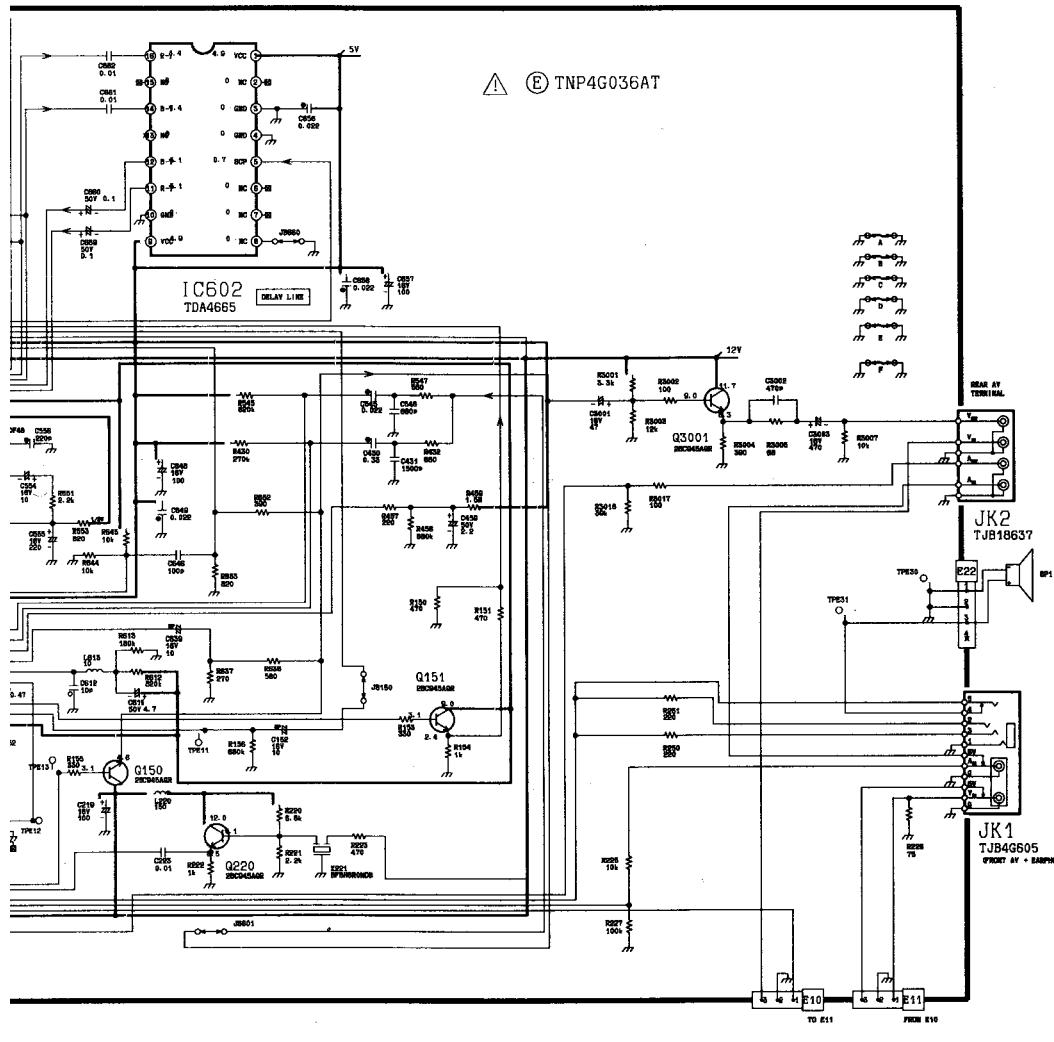




⚠ MS TNP4G008AG

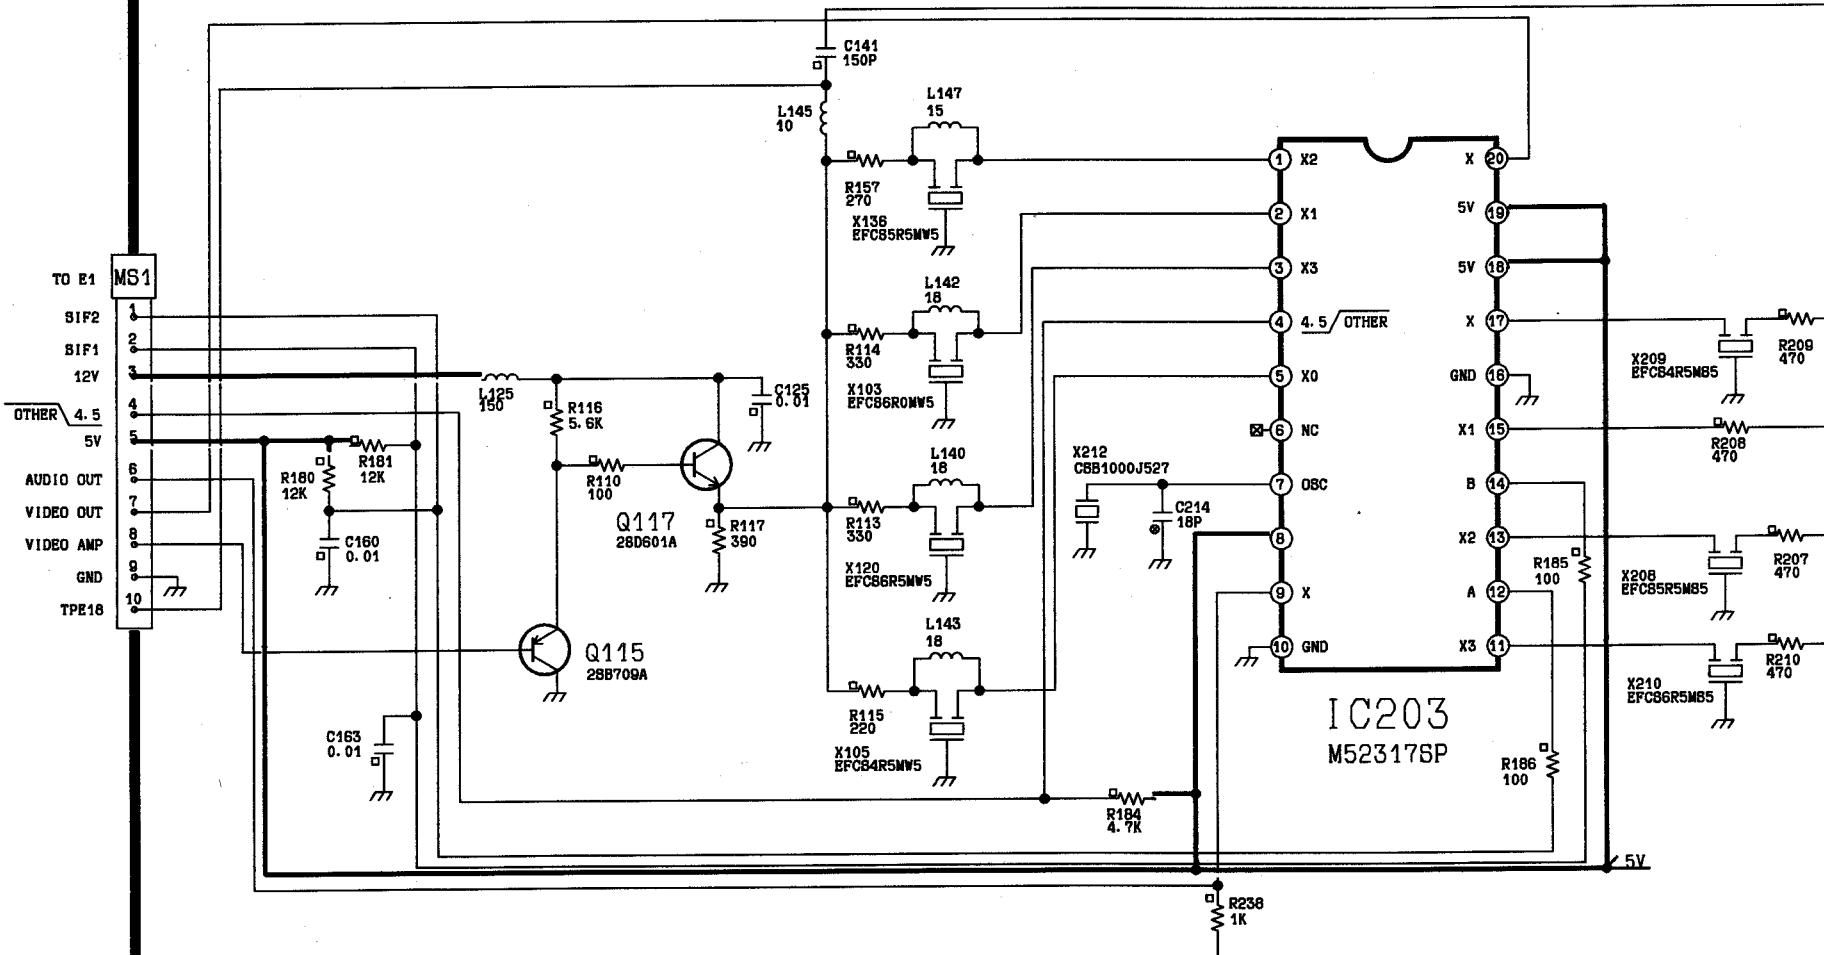

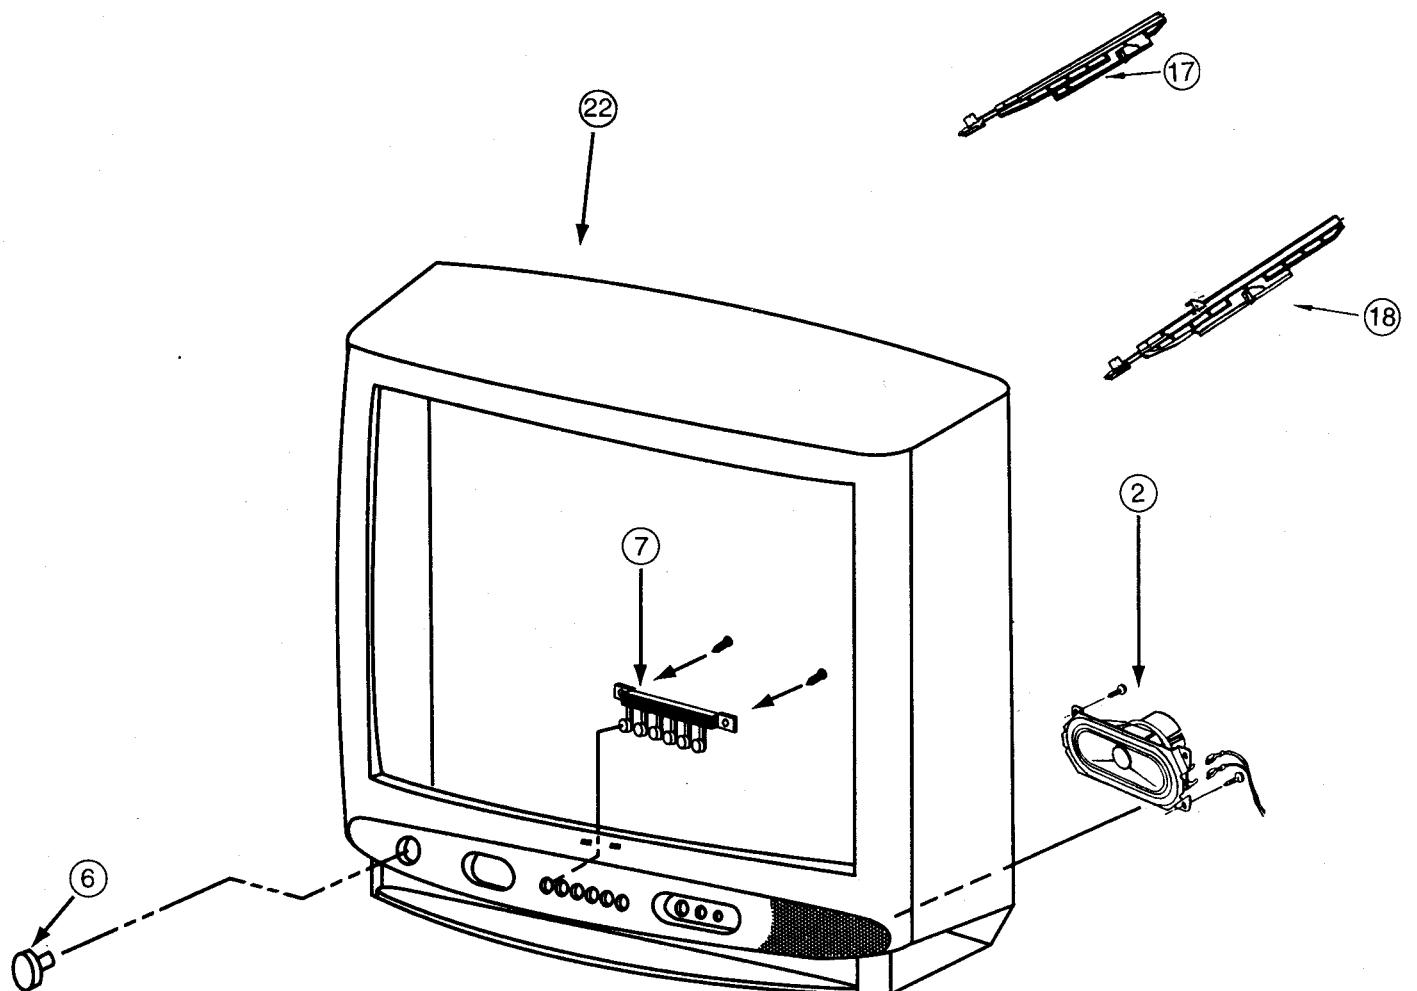






## PARTS LOCATION

**Note:** The number on mechanical parts indicates Ref. No. of Replacement Parts List.

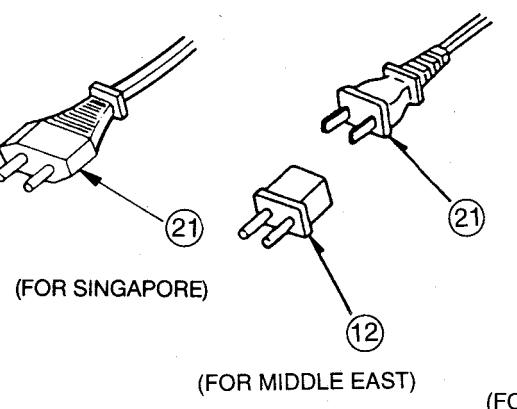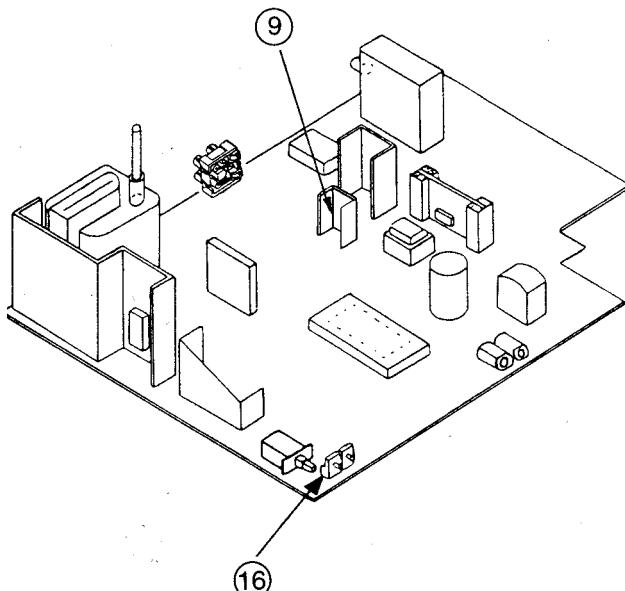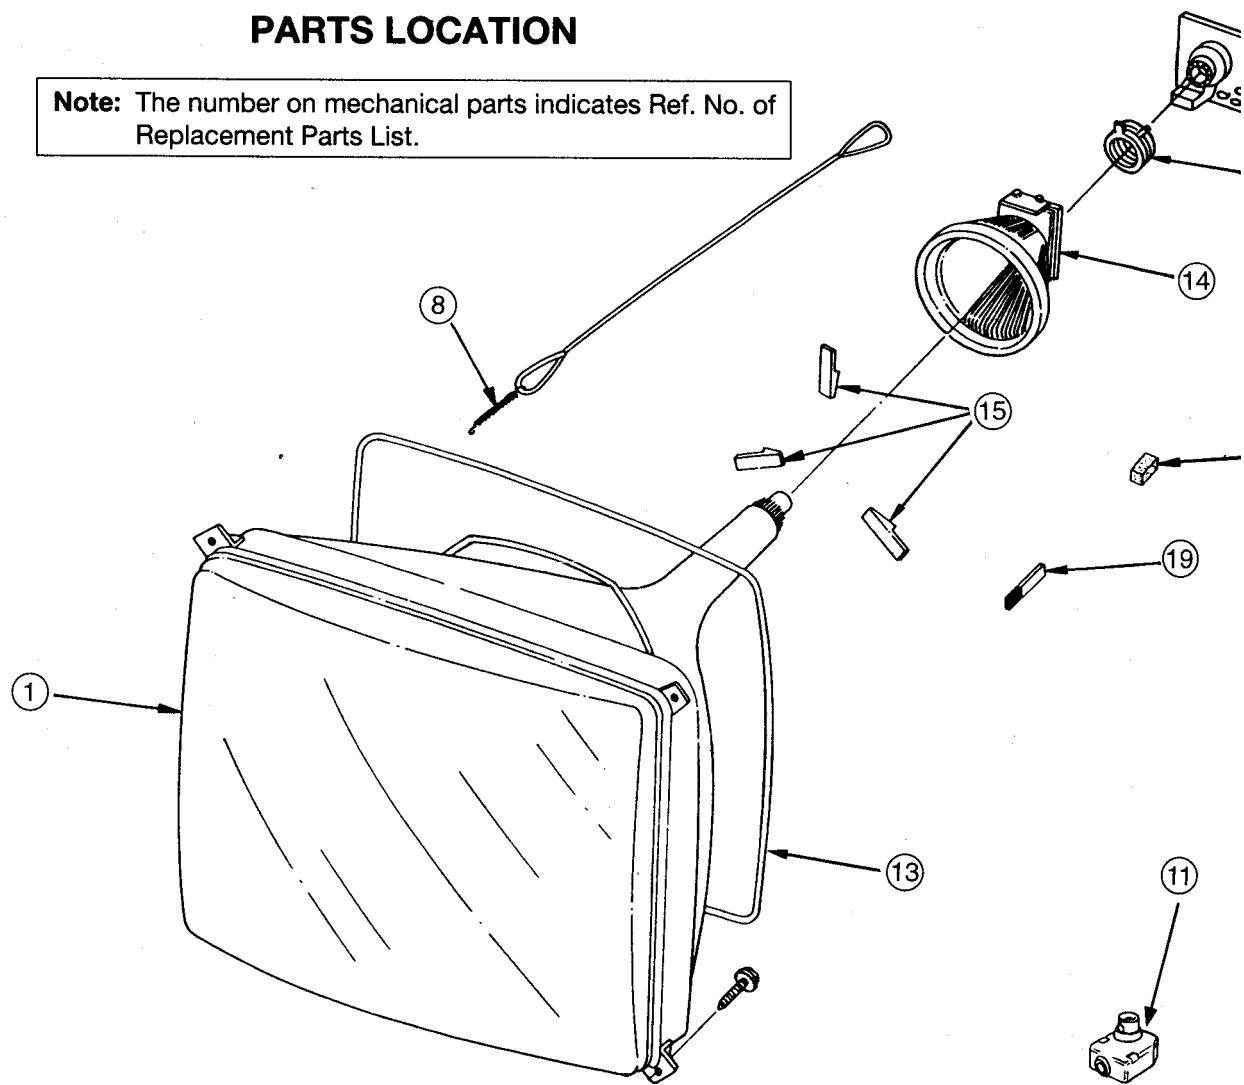

(FOR



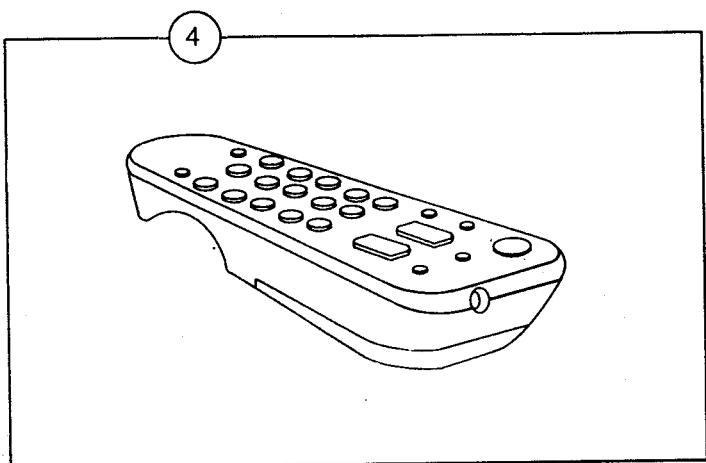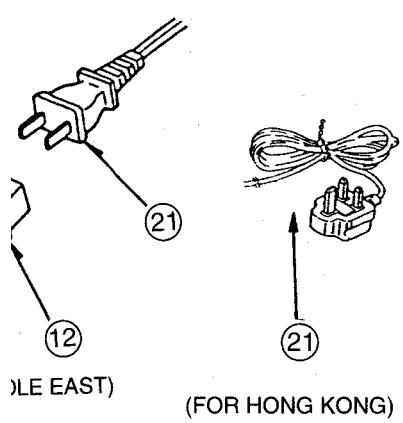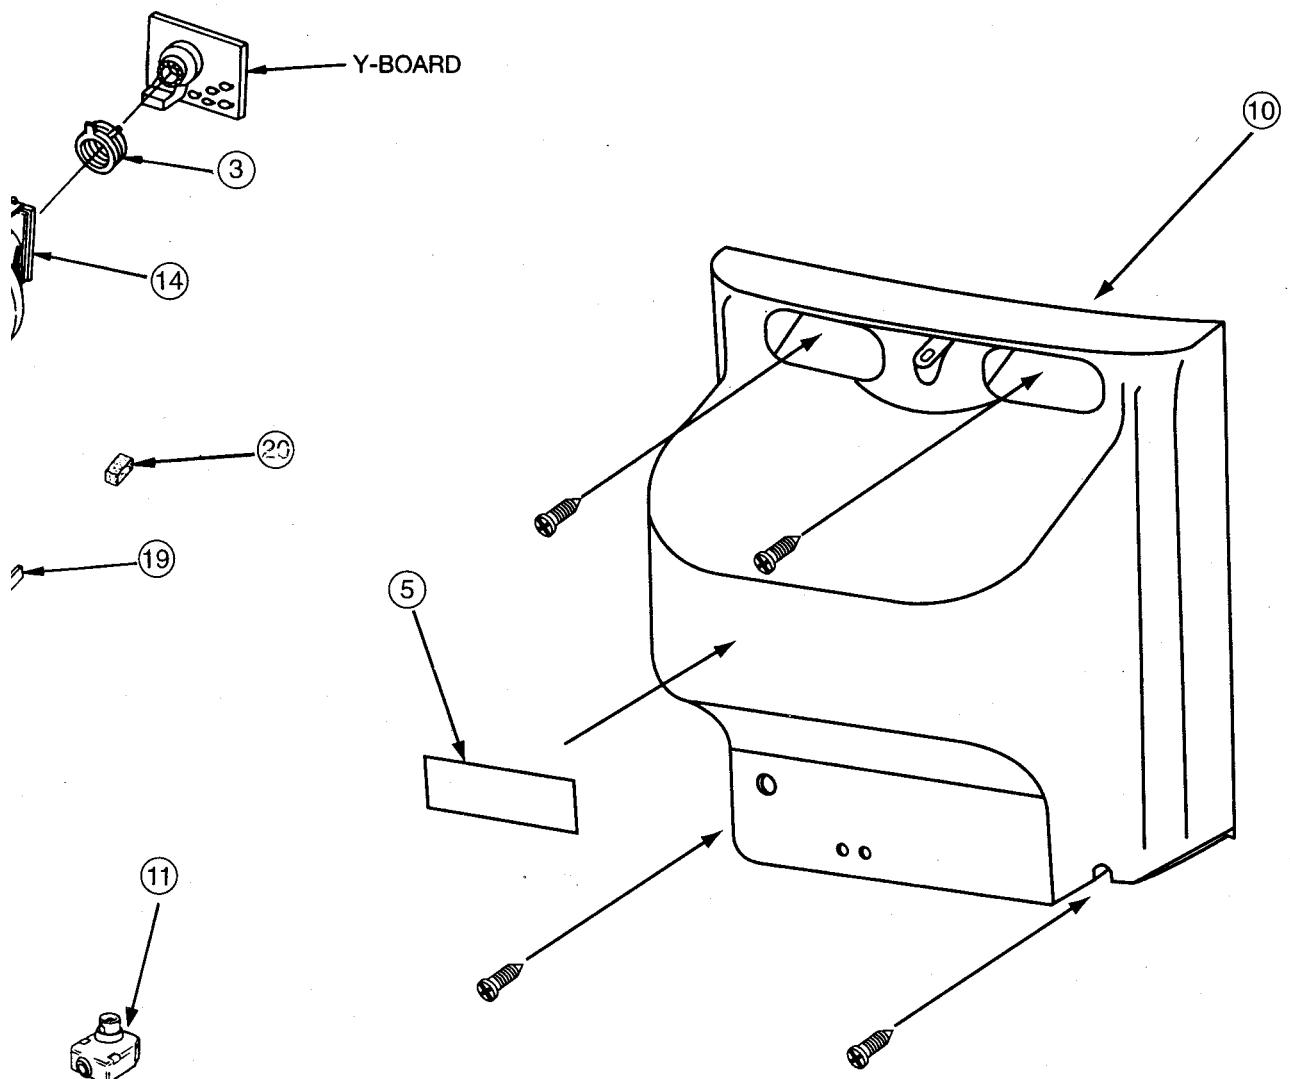

# TC-21S10R/2105RT/21S1

## Replacement Parts List

Ref.No.	Part No.	Description
<b>MECHANICAL PARTS</b>		
1	A51JXS95X	PICTURE TUBE <span style="color: red;">⚠</span>
2	EASG12D123H2	SPEAKER MTV
3	ETC33X8NA	CONVERGENCE YOKE MTV
4	EUR501310	REMOTE CONTROLTRANS. MTV
5	TBM4G0166	MODEL NAME PLATE (FOR SINGAPORE ONLY) MTV
5	TBM4G0167	MODEL NAME PLATE (FOR MIDDLE EAST ONLY) MTV
5	TBM4G0168	MODEL NAME PLATE (FOR CIS ONLY) MTV
5	TBM4G0169	MODEL NAME PLATE (FOR HONG KONG ONLY) MTV
6	TBX2685900	POWER BUTTON MTV
7	TBX2685900	KEY BUTTON MTV
8	TES4223	SPRING
9	TES4537	SPRING
10	TKU4G2001	BACK COVER MTV
11	TJB1726400	ADAPTOR MTV
12	TJS2A8420	AC PLUG ADAPTOR (FOR MIDDLE EAST ONLY)
13	TLK259078S1	DEGAUSSING COIL
14	TLY4G307F	DEFLECTION YOKE MTV <span style="color: red;">⚠</span>
15	TMM27523	DY WEDGE
16	TMW15947	BRACKET
17	TMZ4G9805	CHASSIS RAIL (L) MTV
18	TMZ4G9806	CHASSIS RAIL (R) MTV
NLA	TNP4G008AG	MS BOARD MTV <span style="color: red;">⚠</span>
NLA	TNP4G036AT	E BOARD MTV <span style="color: red;">⚠</span>
NLA	TNP4G037AE	Y BOARD MTV <span style="color: red;">⚠</span>
	TPC4G41111	CARTON (FOR SINGAPORE ONLY) MTV
	TPC4G41112	CARTON (FOR MIDDLE EAST ONLY) MTV
	TPC4G41113	CARTON (FOR CIS ONLY) MTV
	TPC4G41114	CARTON (FOR HONG KONG ONLY) MTV
	TPE4G14002	SET COVER MTV
	TPE4G14003	LAMI BAG MTV
	TQB4G1126	FAN BAG (FOR KUWAIT & U.A.E. ONLY) MTV
	TQB4G1127	FAN BAG (FOR HONG KONG ONLY) MTV
	TQB4G1123	FAN BAG (FOR S.ARABIA ONLY) MTV
	TQB4G1124	FAN BAG (FOR CIS ONLY) MTV
	TQB4G1132	FAN BAG (FOR SINGAPORE ONLY) MTV
19	TSM10032-2	MAGNET
20	TSN63115-4	PURITY MAGNET MTV
21	TSX4G111H	AC POWER CORD (FOR SINGAPORE & CIS ONLY) MTV <span style="color: red;">⚠</span>
21	TSX4G112F	AC POWER CORD (FOR MIDDLE EAST ONLY) MTV <span style="color: red;">⚠</span>
21	TSX4G117H	AC POWER CORD (FOR HONG KONG ONLY) MTV <span style="color: red;">⚠</span>
22	TXFKY01AH2S	CABINET ASSY (FOR SINGAPORE & H.KONG ONLY) MTV
22	TXFKY01AH2P	CABINET ASSY (FOR KUWAIT, U.A.E., & S.ARABIA ONLY) MTV

Ref.No.	Part No.	Description
22	TXFKY01AH4V	CABINET ASSY (FOR CIS ONLY) MTV
	TXFPD01AB2S	CUSHION (TOP) MTV
	TXFPD02AB2S	CUSHION (BOTTOM) MTV
<b>RESISTORS</b>		
R101	ERDS2TJ822	C 8.2KOHM. J.1/4W
R102	ERDS2TJ102	C 1KOHM. J.1/4W
R103	ERQ14AJ270P	F 270OHM. J.1/4W <span style="color: red;">⚠</span>
R105	ERDS2TJ152	C 1.5KOHM. J.1/4W
R106	ERQ14AJ100P	F 100OHM. J.1/4W <span style="color: red;">⚠</span>
R108	ERDS2TJ821	C 820OHM. J.1/4W
R109	ERDS2TJ222	C 2.2KOHM. J.1/4W
R110	ERJ6GEYJ101	M 100OHM.J.1/10W
R112	ERDS2TJ223	C 22KOHM. J.1/4W
R113	ERJ6GEYJ331	M 330OHM.J.1/10W
R114	ERJ6GEYJ331	M 330OHM.J.1/10W
R115	ERJ6GEYJ221	M 220OHM.J.1/10W
R116	ERJ6GEYJ562	M 5.6KOHM.J.1/10W
R117	ERJ6GEYJ101	M 100OHM.J.1/10W
R118	ERDS2TJ822	C 8.2KOHM. J.1/4W
R119	ERDS2TJ823	C 82KOHM. J.1/4W
R121	ERDS2TJ273	C 27KOHM. J.1/4W
R122	ERDS2TJ124	C 120KOHM. J.1/4W
R123	ERDS2TJ332	C 3.3KOHM. J.1/4W
R124	ERDS2TJ103	C 10KOHM. J.1/4W
R126	ERDS2TJ103	C 10KOHM. J.1/4W
R127	ERDS2TJ103	C 10KOHM. J.1/4W
R128	ER0S2CKF1102	M 11KOHM. F.1/4W
R129	ER0S2CKF1002	M 10KOHM. F.1/4W
R133	ERDS2TJ272	C 2.7KOHM. J.1/4W
R134	ERDS2TJ272	C 2.7KOHM. J.1/4W
R135	ERDS2TJ153	C 15KOHM. J.1/4W
R136	ERDS2TJ331	C 330OHM. J.1/4W
R147	ERDS2TJ564	C 560KOHM. J.1/4W
R150	ERDS2TJ471	C 470OHM. J.1/4W
R151	ERDS2TJ471	C 470OHM. J.1/4W
R152	ERDS2TJ151	C 150OHM. J.1/4W
R153	ERDS2TJ331	C 330OHM. J.1/4W
R154	ERDS2TJ102	C 1KOHM. J.1/4W
R155	ERDS2TJ331	C 330OHM. J.1/4W
R156	ERDS2TJ684	C 680KOHM. J.1/4W
R157	ERJ6GEYJ271	M 270OHM.J.1/10W
R180	ERJ6GEYJ123	M 12KOHM.J.1/10W
R181	ERJ6GEYJ123	M 12KOHM.J.1/10W
R184	ERJ6GEYJ472	M 4.7KOHM.J.1/10W
R185	ERJ6GEYJ101	M 100OHM.J.1/10W
R186	ERJ6GEYJ101	M 100OHM.J.1/10W
R207	ERJ6GEYJ471	M 470OHM.J.1/10W
R208	ERJ6GEYJ471	M 470OHM.J.1/10W
R209	ERJ6GEYJ471	M 470OHM.J.1/10W
R210	ERJ6GEYJ471	M 470OHM.J.1/10W
R217	ERDS2TJ561	C 560OHM. J.1/4W
R219	ERDS2TJ182	C 1.8KOHM. J.1/4W
R220	ERDS2TJ682	C 6.8KOHM. J.1/4W
R221	ERDS2TJ222	C 2.2KOHM. J.1/4W

# TC-21S10R/2105RT/21S1

Ref.No.	Part No.	Description	Ref.No.	Part No.	Description
R222	ERDS2TJ102	C 1KOHM, J.1/4W	R456	ERDS1FJ4R7	C 4.7OHM, J.1/2W
R223	ERDS2TJ471	C 470OHM, J.1/4W	R457	ERDS2TJ221	C 220OHM, J.1/4W
R224	ERD25TJ102	C 1KOHM, J.1/4W	R458	ERDS2TJ684	C 680KOHM, J.1/4W
R225	ERDS2TJ103	C 10KOHM, J.1/4W	R459	ERDS2TJ155	C 1.5MOHM, J.1/4W
R227	ERDS2TJ104	C 100KOHM, J.1/4W	R465	ERD25TJ823	C 82KOHM, J.1/4W
R228	ERDS2TJ750	C 75OHM, J.1/4W	R501	ERQ1CJP1R2S	F 1.2OHM, J. 1W <span style="color: red;">⚠</span>
R230	ERQ14AJ101P	F 100OHM, J.1/4W <span style="color: red;">⚠</span>	R505	ERQ12HJ1R0	F 1OHM, J.1/2W <span style="color: red;">⚠</span>
R231	ERDS2TJ104	C 100KOHM, J.1/4W	R509	ERQ12AJ1R0E	F 1OHM, J.1/2W MTV <span style="color: red;">⚠</span>
R232	ERDS2TJ103	C 10KOHM, J.1/4W	R520	ERDS2TJ103	C 10KOHM, J.1/4W
R238	ERJ6GEYJ102	M 1KOHM,J.1/10W	R522	ERDS2TJ223	C 22KOHM, J.1/4W
R250	ERDS2TJ221	C 220OHM, J.1/4W	R523	ERD25TJ332	C 3.3KOHM, J.1/4W
R251	ERDS2TJ221	C 220OHM, J.1/4W	R524	ERDS2TJ472	C 4.7KOHM, J.1/4W
R351	ERG2ANJ123	M 12KOHM, J. 2W	R525	ER025CKF1913	M 191KOHM, F.1/4W MTV
R352	ERG2ANJ123	M 12KOHM, J. 2W	R527	ERDS2TJ683	C 68KOHM, J.1/4W
R366	ERDS2TJ391	C 390OHM, J.1/4W	R529	ERDS2TJ334	C 330KOHM, J.1/4W
R367	ERDS2TJ391	C 390OHM, J.1/4W	R531	ERDS2TJ223	C 22KOHM, J.1/4W
R368	ERDS2TJ391	C 390OHM, J.1/4W	R532	ERDS2TJ104	C 100KOHM, J.1/4W
R369	ERDS2TJ272	C 2.7KOHM, J.1/4W	R533	ERDS2TJ103	C 10KOHM, J.1/4W
R370	ERDS2TJ272	C 2.7KOHM, J.1/4W	R538	ERDS2TJ563	C 56KOHM, J.1/4W
R371	ERDS2TJ272	C 2.7KOHM, J.1/4W	R539	ERDS2TJ683	C 68KOHM, J.1/4W
R372	ERDS2TJ101	C 100OHM, J.1/4W	R540	ERQ14AJ100P	F 10OHM, J.1/4W
R373	ERDS2TJ101	C 100OHM, J.1/4W	R541	ER0S2CKF1962	M19.6KOHM, F.1/4W
R374	ERDS2TJ101	C 100OHM, J.1/4W	R542	ER0S2CKF1472	M14.7KOHM, F.1/4W
R375	ERDS1TJ272	C 2.7KOHM, J.1/2W	R545	ERDS2TJ824	C 820KOHM, J.1/4W
R376	ERG2ANJ123	M 12KOHM, J. 2W	R547	ERDS2TJ561	C 560OHM, J.1/4W
R386	ERDS1TJ272	C 2.7KOHM, J.1/2W	R549	ERDS2TJ102	C 1KOHM, J.1/4W
R387	ERDS1TJ272	C 2.7KOHM, J.1/2W	R551	ERDS2TJ222	C 2.2KOHM, J.1/4W
R403	ERD25TJ332	C 3.3KOHM, J.1/4W	R552	ERD25TJ332	C 3.3KOHM, J.1/4W
R404	ERDS2TJ912	C 9.1KOHM, J.1/4W	R553	ERDS1TJ821	C 820OHM, J.1/2W
R413	ERDS2TJ101	C 100OHM, J.1/4W	R554	ERDS2TJ105	C 1MOHM, J.1/4W
R414	ERDS2TJ393	C 39KOHM, J.1/4W	R555	ERDS2TJ105	C 1MOHM, J.1/4W
R415	ERDS2TJ154	C 150KOHM, J.1/4W	R558	ERDS2TJ104	C 100KOHM, J.1/4W
R416	ERDS2TJ683	C 68KOHM, J.1/4W	R560	ERDS2TJ103	C 10KOHM, J.1/4W
R417	ERDS2TJ154	C 150KOHM, J.1/4W	R561	ERDS2TJ101	C 100OHM, J.1/4W
R418	ERDS2TJ334	C 330KOHM, J.1/4W	R562	ERD25TJ102	C 1KOHM, J.1/4W
R419	ERDS2TJ4R7	C 4.7OHM, J.1/4W	R563	ERDS2TJ182	C 1.8KOHM, J.1/4W
R420	ERDS2TJ100	C 10OHM, J.1/4W	R564	ERG2ANJ821	M 470QHM, J. 2W MTV
R421	ERDS2TJ683	C 68KOHM, J.1/4W	R565	ERD25TJ103	C 10KOHM, J.1/4W
R422	ERDS2TJ912	C 9.1KOHM, J.1/4W	R567	ERQ1CJP102S	F 1KOHM, J. 1W <span style="color: red;">⚠</span>
R423	ERDS2TJ103	C 10KOHM, J.1/4W	R568	ERQ12AJ101E	F 100OHM, J.1/2W MTV <span style="color: red;">⚠</span>
R425	ERDS2TJ155	C 1.5MOHM, J.1/4W	R569	ERG3ANJ470H	M 270HM, J. 2W
R426	ERDS2TJ475	C 4.7MOHM, J.1/4W	R601	ERDS2TJ153	C 15KOHM, J.1/4W
R427	ERDS1FJ1R8	C 1.8OHM, J.1/2W	R603	ERDS2TJ153	C 15KOHM, J.1/4W
R428	ERDS2TJ563	C 56KOHM, J.1/4W	R605	ERDS2TJ155	C 1.5MOHM, J.1/4W
R429	ERDS2TJ684	C 680KOHM, J.1/4W	R612	ERDS2TJ824	C 820KOHM, J.1/4W
R430	ERDS2TJ274	C 270KOHM, J.1/4W	R613	ERDS2TJ184	C 180KOHM, J.1/4W
R432	ERDS2TJ681	C 680OHM, J.1/4W	R614	ERDS2TJ331	C 330OHM, J.1/4W
R443	ERDS2TJ911	C 910OHM, J.1/4W	R615	ERDS2TJ152	C 1.5KOHM, J.1/4W
R444	ERDS2TJ102	C 1KOHM, J.1/4W	R616	ERDS2TJ331	C 330OHM, J.1/4W
R445	ERDS2TJ223	C 22KOHM, J.1/4W	R617	ERDS2TJ152	C 1.5KOHM, J.1/4W
R446	ERDS2TJ473	C 47KOHM, J.1/4W	R618	ERDS2TJ331	C 330OHM, J.1/4W
R448	ERDS2TJ271	C 270OHM, J.1/4W	R619	ERDS2TJ152	C 1.5KOHM, J.1/4W
R449	ERDS2TJ562	C 5.6KOHM, J.1/4W	R622	ERDS2TJ911	C 910OHM, J.1/4W
R450	ERD2FAVJ1R5T	C 1.5OHM, J.1/4W MTV	R623	ERDS2TJ911	C 910OHM, J.1/4W
R452	ERD25TJ103	C 10KOHM, J.1/4W	R624	ERDS2TJ911	C 910OHM, J.1/4W
R455	ERDS2TJ102	C 1KOHM, J.1/4W	R625	ERDS2TJ562	C 5.6KOHM, J.1/4W

# TC-21S10R/2105RT/21S1

Ref.No.	Part No.	Description	Ref.No.	Part No.	Description
R637	ERDS2TJ271	C 270OHM. J.1/4W	R1128	ERDS2TJ222	C 2.2KOHM. J.1/4W
R638	ERD25TJ561	C 560OHM. J.1/4W	R1129	ERDS2TJ222	C 2.2KOHM. J.1/4W
R644	ERDS2TJ103	C 10KOHM. J.1/4W	R1130	ERDS2TJ332	C 3.3KOHM. J.1/4W
R645	ERDS2TJ103	C 10KOHM. J.1/4W	R1131	ERDS2TJ512	C 5.1KOHM. J.1/4W
R652	ERD25TJ391	C 390OHM. J.1/4W	R1132	ER025CKF1002	M 10KOHM. F.1/4W
R653	ERDS2TJ821	C 820OHM. J.1/4W	R1133	ERDS2TJ472	C 4.7KOHM. J.1/4W
R670	ERQ14AJ470P	F 47OHM. J.1/4W	R1134	ERDS2TJ332	C 3.3KOHM. J.1/4W
R671	ERDS2TJ332	C 3.3KOHM. J.1/4W	R1135	ERDS2TJ682	C 6.8KOHM. J.1/4W
R672	ERD25TJ104	C 100KOHM. J.1/4W	R1135	ERDS2TJ392	C 3.9KOHM. J.1/4W ( FOR S.ARABIA ONLY )
R675	ERDS2TJ153	C 15KOHM. J.1/4W	R1136	ERDS2TJ824	C 820KOHM. J.1/4W
R677	ERDS2TJ273	C 27KOHM. J.1/4W	R1137	ERDS2TJ103	C 10KOHM. J.1/4W
R678	ERDS2TJ393	C 39KOHM. J.1/4W	R1139	ERDS2TJ274	C 270KOHM. J.1/4W
R801	ERF7ZK2R7	W 2.7OHM. K. 7W	R1140	ERDS2TJ562	C 5.6KOHM. J.1/4W
R802	ERD50FJ474	C 470KOHM. J.1/2W	R1141	ERDS2TJ103	C 10KOHM. J.1/4W
R803	ERD50FJ474	C 470KOHM. J.1/2W	R1142	ERDS2TJ183	C 18KOHM. J.1/4W
R805	ERDS2TJ333	C 33KOHM. J.1/4W	R1143	ERDS2TJ123	C 12KOHM. J.1/4W
R806	ERG1SJ101P	M 100OHM. J. 1W	R1144	ERD25TJ222	C 2.2KOHM. J.1/4W
R810	ERDS2TJ103	C 10KOHM. J.1/4W	R1145	ERDS2TJ101	C 100OHM. J.1/4W
R814	ERD25TJ332	C 3.3KOHM. J.1/4W	R1146	ERD25TJ222	C 2.2KOHM. J.1/4W
R816	ERDS2TJ223	C 22KOHM. J.1/4W	R1147	ERDS2TJ182	C 1.8KOHM. J.1/4W
R817	ERG2ANJ360	M 36OHM. J. 2W	R1148	ERD25TJ222	C 2.2KOHM. J.1/4W
R818	ERQ12AJ1R0E	F 10OHM. J.1/2W	R1150	ERD25TJ182	C 1.8KOHM. J.1/4W
R819	ERC12ZGK335	S 3.3MOHM. K.1/2W	R1152	ERDS2TJ183	C 18KOHM. J.1/4W
R820	ERW2PKR47	W 0.47OHM. 2W	R1154	ERD25TJ101	C 100OHM. J.1/4W
R821	ERD25TJ470	C 47OHM. J.1/4W	R1155	ERD25TJ101	C 100OHM. J.1/4W
R822	ERDS2TJ221	C 220OHM. J.1/4W	R1156	ERD25TJ101	C 100OHM. J.1/4W
R823	ERDS2TJ122	C 1.2KOHM. J.1/4W	R1157	ERD25TJ333	C 33KOHM. J.1/4W
R825	ERD75TAJ825	C 8.2MOHM. J.3/4W	R1158	ERDS2TJ332	C 3.3KOHM. J.1/4W
R826	ERQ14AJ220P	F 22OHM. J.1/4W	R1159	ERDS2TJ332	C 3.3KOHM. J.1/4W
R827	ERX1SJ3R3P	M 3.3OHM. J. 1W	R1160	ERDS2TJ560	C 56OHM. J.1/4W
R828	ERX1SJ6R2E	M 6.2OHM. J. 1W	R1161	ERDS2TJ560	C 56OHM. J.1/4W
R829	ERG2ANJ471H	M 470OHM. J. 2W	R1162	ERD25TJ101	C 100OHM. J.1/4W
R832	ERDS2TJ562	C 5.6KOHM. J.1/4W	R1163	ERDS2TJ333	C 33KOHM. J.1/4W
R834	ERDS2TJ221	C 220OHM. J.1/4W	R1164	ERDS2TJ101	C 100OHM. J.1/4W
R835	ERDS2TJ121	C 120OHM. J.1/4W	R1165	ERDS2TJ101	C 100OHM. J.1/4W
R836	ERDS2TJ101	C 100OHM. J.1/4W	R1166	ERDS2TJ101	C 100OHM. J.1/4W
R837	ERDS2TJ102	C 1KOHM. J.1/4W	R1167	ERDS2TJ101	C 100OHM. J.1/4W
R1051	ERD25TJ102	C 1KOHM. J.1/4W	R1168	ERDS2TJ821	C 820OHM. J.1/4W
R1101	ERDS2TJ101	C 100OHM. J.1/4W	R1170	ERD25TJ101	C 100OHM. J.1/4W
R1102	ERDS2TJ222	C 2.2KOHM. J.1/4W	R1171	ERDS2TJ103	C 10KOHM. J.1/4W
R1103	ERD25TJ101	C 100OHM. J.1/4W	R1172	ERDS2TJ103	C 10KOHM. J.1/4W
R1105	ERD25TJ101	C 100OHM. J.1/4W	R1174	ERD25TJ123	C 12KOHM. J.1/4W
R1106	ERD25TJ122	C 1.2KOHM. J.1/4W	R1175	ERDS2TJ683	C 68KOHM. J.1/4W
R1107	ERD25TJ152	C 1.5KOHM. J.1/4W	R1180	ERG3ANJ821H	M 820OHM. J. 3W
R1108	ERD25TJ152	C 1.5KOHM. J.1/4W	R1181	ERDS2TJ100	C 10OHM. J.1/4W
R1109	ERD25TJ101	C 100OHM. J.1/4W	R1182	ERDS2TJ100	C 10OHM. J.1/4W
R1110	ERDS2TJ273	C 27KOHM. J.1/4W	R1183	ERDS2TJ101	C 100OHM. J.1/4W
R1112	ERDS2TJ123	C 12KOHM. J.1/4W	R1184	ERDS2TJ101	C 100OHM. J.1/4W
R1113	ERDS2TJ562	C 5.6KOHM. J.1/4W	R1185	ERDS2TJ100	C 10OHM. J.1/4W
R1115	ERDS2TJ123	C 12KOHM. J.1/4W	R1186	ER0S2CKF1800	M 180OHM. F.1/4W
R1116	ERDS2TJ333	C 33KOHM. J.1/4W	R1187	ERDS2TJ101	C 100OHM. J.1/4W
R1122	ERDS2TJ273	C 27KOHM. J.1/4W	R1188	ERDS2TJ153	C 15KOHM. J.1/4W
R1124	ERDS2TJ102	C 1KOHM. J.1/4W	R1189	ERDS2TJ123	C 12KOHM. J.1/4W
R1125	ERDS2TJ222	C 2.2KOHM. J.1/4W	R1190	ERDS2TJ103	C 10KOHM. J.1/4W
R1126	ERDS2TJ393	C 39KOHM. J.1/4W	R1191	ERDS2TJ103	C 10KOHM. J.1/4W
R1127	ERD25TJ103	C 10KOHM. J.1/4W	R1192	ERDS2TJ103	C 10KOHM. J.1/4W

# TC-21S10R/2105RT/21S1

Ref.No.	Part No.	Description	Ref.No.	Part No.	Description
R2301	ERDS2TJ123	C 12KOHM. J.1/4W	C412	ECSF1EE105V	T 1UF. 25V MTV
R2302	ERQ12AJ4R7P	F 4.7OHM. J.1/2W	C415	ECEA1CU221	E 220UF. 16V
R2312	ERDS1FJ4R7	C 4.7OHM. J.1/2W	C416	ECA1EM222G	E 2200UF. 25V
R3001	ERDS2TJ332	C 3.3KOHM. J.1/4W	C417	ECEA1HUR33	E 0.33UF. 50V
R3002	ERDS2TJ101	C 100OHM. J.1/4W	C418	ECQB1H103KF	P 0.01UF. K. 50V
R3003	ERDS2TJ123	C 12KOHM. J.1/4W	C421	ECEA1HUR22	E 0.22UF. 50V
R3004	ERDS2TJ391	C 390OHM. J.1/4W	C430	ECQV1H334JZ	P 0.33UF. J. 50V
R3005	ERDS2TJ680	C 68OHM. J.1/4W	C431	ECKF1H152KB	C 1500PF. K. 50V
R3007	ERDS2TJ103	C 10KOHM. J.1/4W	C452	ECEA1AU330	E 33UF. 10V
R3017	ERDS2TJ101	C 100OHM. J.1/4W	C455	ECCF1H100FC	C 10PF. F. 50V MTV
R3018	ERDS2TJ393	C 39KOHM. J.1/4W	C456	ECEA1VU101	E 100UF. 35V
<b>CAPACITORS</b>			C457	ECA1VM471G	E 470UF. 35V
C101	ECKF1H103ZF	C 0.01UF. Z. 50V	C459	ECEA1HU2R2	E 2.2UF. 50V
C103	ECKF1H103ZF	C 0.01UF. Z. 50V	C460	ECQV1H104JZ	P 0.1UF. J. 50V
C104	ECA1CM471G	E 470UF. 16V	C461	ECQB1H473KF	P 0.047UF. K. 50V
C105	ECKF1H103ZF	C 0.01UF. Z. 50V	C501	ECEA2CNR47S	E 0.47UF. 160V
C107	ECKF1H103ZF	C 0.01UF. Z. 50V	C504	ECCF1H680J	C 68PF. J. 50V
C109	ECEA1CU100	E 10UF. 16V	C508	ECKD2H471KB2	C 470PF. K.500V
C110	ECKF1H103ZF	C 0.01UF. Z. 50V	C509	ECEA2EU100	E 10UF. 250V
C111	ECEA1HFSR47	E 0.47UF. 50V	C510	ECKD2H471KB2	C 470PF. K.500V
C112	ECEA1CU470	E 47UF. 16V	C511	ECA1EM471G	E 470UF. 25V
C113	ECEA1HU3R3	E 3.3UF. 50V	C514	ECKD2H561KB2	C 560PF. K.500V
C114	ECEA1VFS100	E 10UF. 35V	C515	ECA1VM471G	E 470UF. 35V
C115	ECQV1H334JZ	P 0.33UF. J. 50V	C526	ECEA1JU100	E 10UF. 63V
C116	ECEA1CU101	E 100UF. 16V	C532	ECEA1HU010	E 1UF. 50V
C119	ECEA1CU100	E 10UF. 16V	C538	ECEA1AU470	E 47UF. 10V
C120	ECQV1H104JZ	P 0.1UF. J. 50V	C541	ECKD2H331KB2	C 330PF. K.500V
C121	ECEA1HU010	E 1UF. 50V	C542	ECEA1VU101	E 100UF. 35V
C122	ECEA1HU0R1	E 0.1UF. 50V	C545	ECQB1H223KF	P 0.022UF. K. 50V
C123	ECEA1CN100S	E 10UF. 16V	C546	ECKF1H681KB	C 680PF. K. 50V
C125	ECUX1H103ZFX	C 0.01UF. Z. 50V MTV	C549	ECEA1HU0R1	E 0.1UF. 50V
C141	ECUX1H151JX	C 150PF. J. 50V MTV	C551	ECEA1HU100	E 10UF. 50V
C150	ECEA1HFSR47	E 0.47UF. 50V	C552	ECQB1H223KF	P 0.022UF. K. 50V
C151	ECKF1H103ZF	C 0.01UF. Z. 50V	C553	ECQB1H563JF	P 0.056UF. J. 50V
C152	ECEA1CN100S	E 10UF. 16V	C554	ECEA1CU100	E 10UF. 16V
C153	ECEA50ZR47	E 0.47UF. 50V	C555	ECEA1CU221	E 220UF. 16V
C154	ECKF1H122KB	C 1200PF. K. 50V	C556	ECCF1H221JU	C 220PF. J. 50V
C160	ECUX1H103ZFX	C 0.01UF. Z. 50V MTV	C561	ECEA1CU221	E 220UF. 16V
C163	ECUX1H103ZFX	C 0.01UF. Z. 50V MTV	C562	ECKD3D471JBN	C 470PF. J. 2KV
C214	ECCF1H180JC	C 18PF. J. 50V	C564	ECQB1H153KF	P 0.015UF. K. 50V
C216	ECEA1CN330S	E 33UF. 16V	C566	ECQB1H153KF	P 0.015UF. K. 50V
C217	ECKF1H392KB	C 3900PF. K. 50V	C567	ECQV1H104JZ	P 0.1UF. J. 50V
C219	ECEA1CU101	E 100UF. 16V	C568	ECKD3D222JBN	C 2200PF. J. 2KV
C220	ECKF1H182KB	C 1800PF. K. 50V	C569	ECKD3D222JBN	C 2200PF. J. 2KV
C221	ECEA1HU4R7	E 4.7UF. 50V	C570	4R3W103JSF	P 0.01UF.J.1.2KV MTV
C222	ECEA1CN100S	E 10UF. 16V	C571	ECKD3D222JBN	C 2200PF. J. 2KV
C223	ECKF1H103ZF	C 0.01UF. Z. 50V	C572	ECKD3D222JBN	C 2200PF. J. 2KV
C224	ECKF1H102KB	C 1000PF. K. 50V	C573	7A2D824JSF	P 0.82UF. J.200V MTV
C231	ECEA1EU101	E 100UF. 25V	C574	7A2D474JSF	P 0.47UF. J.200V MTV
C232	ECKF1H103ZF	C 0.01UF. Z. 50V	C575	ECQM4223JZ	P 0.022UF. J.400V
C350	ECCF1H331J	C 330PF. J. 50V	C576	ECQM4473JZ	P 0.047UF. J.400V
C351	ECCF1H391J	C 390PF. J. 50V	C601	ECQB1H223JF	P 0.022UF. J. 50V
C352	ECCF1H331J	C 330PF. J. 50V	C602	ECQB1H223JF	P 0.022UF. J. 50V
C353	ECCF1H391J	C 390PF. J. 50V	C603	ECQB1H223JF	P 0.022UF. J. 50V
C354	ECKD3D821KBN	C 820PF. K. 2KV	C604	ECEA50ZR47	E 0.47UF. 50V
C356	ECKD2H103PU	C 0.01UF.P.500V	C605	ECKF1H103ZF	C 0.01UF. Z. 50V

# TC-21S10R/2105RT/21S1

Ref.No.	Part No.	Description	Ref.No.	Part No.	Description
C606	ECQB1H223JF	P 0.022UF, J. 50V	C830	ECEA0JU101	E 100UF, 6.3V
C607	ECEA1HU2R2	E 2.2UF, 50V	C831	ECA1HM221G	E 220UF, 50V MTV
C608	ECCF1H120JU	C 12PF, J. 50V	C832	ECKDNS471MBJ	C 470PF, M.
C609	ECCF1H150JU	C 15PF, J. 50V	C833	ECKD2H821KB2	C 820PF, K.500V
C610	ECEA1HU100	E 10UF, 50V	C838	ECQV1H224JZ	P 0.22UF, J. 50V
C612	ECCF1H100D	C 10PF, D. 50V	C847	ECKD2H472PU	C 4700PF, P.500V
C613	ECKF1H103ZF	C 0.01UF, Z. 50V	C1051	ECKF1H103ZF	C 0.01UF, Z. 50V
C614	ECEA1CU101	E 100UF, 16V	C1052	ECEA1HU470	E 47UF, 50V
C615	ECEA1HU4R7	E 4.7UF, 50V	C1053	ECCF1H101J	C 100PF, J. 50V
C618	ECCF1H330J	C 33PF, J. 50V	C1101	ECKF1H103ZF	C 0.01UF, Z. 50V
C619	ECCF1H330J	C 33PF, J. 50V	C1102	ECEA0JU101	E 100UF, 6.3V
C620	ECCF1H330J	C 33PF, J. 50V	C1103	ECKF1H221KB	C 220PF, K. 50V
C621	ECEA1CU101	E 100UF, 16V	C1104	ECKF1H103ZF	C 0.01UF, Z. 50V
C622	ECQB1H223KF	P 0.022UF, K. 50V	C1105	ECKF1H103ZF	C 0.01UF, Z. 50V
C639	ECEA1CN100S	E 10UF, 16V	C1106	ECEA1CU220	E 22UF, 16V
C646	ECKF1H101KB	C 100PF, K. 50V	C1107	ECKF1H103ZF	C 0.01UF, Z. 50V
C648	ECEA1CU101	E 100UF, 16V	C1108	ECCF1H820J	C 82PF, J. 50V
C649	ECQB1H223KF	P 0.022UF, K. 50V	C1116	ECEA1HU2R2	E 2.2UF, 50V
C656	ECQB1H223KF	P 0.022UF, K. 50V	C1118	ECEA1HU2R2	E 2.2UF, 50V
C657	ECEA1CU101	E 100UF, 16V	C1130	ECKF1H103ZF	C 0.01UF, Z. 50V
C658	ECQB1H223KF	P 0.022UF, K. 50V	C1135	ECKF1H821KB	C 820PF, K. 50V
C659	ECEA1HU0R1	E 0.1UF, 50V	C1136	ECCF1H101J	C 100PF, J. 50V
C660	ECEA1HU0R1	E 0.1UF, 50V	C1137	ECQB1H223KF	P 0.022UF, K. 50V
C661	ECKF1H103ZF	C 0.01UF, Z. 50V	C1140	ECEA1HU2R2	E 2.2UF, 50V
C662	ECKF1H103ZF	C 0.01UF, Z. 50V	C1141	ECCF1H561J	C 560PF, J. 50V
C669	ECEA1HU0R1	E 0.1UF, 50V	C1144	ECCF1H101J	C 100PF, J. 50V
C670	ECEA1CU470	E 47UF, 16V	C1145	ECKF1H151KB	C 150PF, K. 50V
C671	ECQB1H223KF	P 0.022UF, K. 50V	C1146	ECCF1H101J	C 100PF, J. 50V
C672	ECQV1H104JZ	P 0.1UF, J. 50V	C1147	ECKF1H221KB	C 220PF, K. 50V
C673	ECQV1H224JZ	P 0.22UF, J. 50V	C1148	ECCF1H330JP	C 33PF, J. 50V
C674	ECCF1H390J	C 39PF, J. 50V	C1149	ECCF1H330JP	C 33PF, J. 50V
C801	ECQU2A333MN	P 0.033UF, M.250V	C1150	ECKF1H101KB	C 100PF, K. 50V
C802	ECKD2H472KB2	C 4700PF, K.500V	C1151	ECKF1H101KB	C 100PF, K. 50V
C803	ECKD2H472KB2	C 4700PF, K.500V	C1152	ECKF1H103ZF	C 0.01UF, Z. 50V
C804	EC0S2GP331DB	E 330UF, 400V MTV	C1153	ECEA1CU100	E 10UF, 16V
C805	ECEA1VU470	E 47UF, 35V	C1160	ECKF1H103ZF	C 0.01UF, Z. 50V
C807	ECHS1H104JZ	P 0.1UF, J. 50V	C1174	ECEA1HU2R2	E 2.2UF, 50V
C808	ECES2DU221E	E 220UF, 200V	C1180	ECEA50ZR33	E 0.33UF, 50V
C809	ECQB1H103JF	P 0.01UF, 50V	C1181	ECKF1H103ZF	C 0.01UF, Z. 50V
C810	ECKD3D222JBN	C 2200PF, J. 2KV	C1182	ECEA1HU330	E 33UF, 50V
C811	ECQV1H224JZ	P 0.22UF, J. 50V	C1183	ECEA50ZR33	E 0.33UF, 50V
C812	ECA1EM102G	E 1000UF, 25V	C1184	ECEA50ZR47	E 0.47UF, 50V
C813	ECEA1CU101	E 100UF, 16V	C2301	ECA1CM471G	E 470UF, 16V
C814	ECKD3D821KBP	C 820PF, K. 2KV	C2302	ECKF1H103ZF	C 0.01UF, Z. 50V
C815	ECKD2H222KB2	C 2200PF, K.500V	C2303	ECEA1CU330	E 33UF, 16V
C816	ECQU2A333MN	P 0.033UF, M.250V	C2304	ECQB1H393JF	P 0.039UF, J. 50V
C817	ECKD2H472KB2	C 4700PF, K.500V	C2305	ECEA1EGE470	E 47UF, 25V
C818	ECKD2H472KB2	C 4700PF, K.500V	C2306	ECA1EM471G	E 470UF, 25V
C819	ECKD2H681KB2	C 680PF, K.500V	C2307	ECEA1EU222	E 2200UF, 25V
C820	ECKDNS222MEJ	C 2200PF, M.	C2308	ECKF1H103ZF	C 0.01UF, Z. 50V
C823	ECKD2H561KB2	C 560PF, K.500V	C2315	ECQV1H184JZ	P 0.18UF, J. 50V
C824	ECQB1H223JF	P 0.022UF, J. 50V	C2316	ECQV1H154JZ	P 0.15UF, J. 50V
C825	ECEA1HU470	E 47UF, 50V	C3001	ECEA1CU470	E 47UF, 16V
C827	ECEA1EU101	E 100UF, 25V	C3002	ECKF1H471KB	C 470PF, K. 50V
C828	ECEA1CU101	E 100UF, 16V	C3003	ECA1CM471G	E 470UF, 16V
C829	ECEA1CU101	E 100UF, 16V		COILS	

# TC-21S10R/2105RT/21S1

Ref.No.	Part No.	Description		Ref.No.	Part No.	Description	
L102	TLTACTR82K	PEAKING COIL	MTV	D414	MA29WA	DIODE	
L106	TLTACC8R2K	PEAKING COIL 8.2U		D415	MA29WA	DIODE	
L107	TLTACC1R0K	PEAKING COIL		D449	MA4360M	DIODE	
L110	EXCELDR25V	CORE		D452	ERA15-01	DIODE	
L111	TLTACC1R0K	PEAKING COIL		D510	TVSEU2	DIODE	
L125	TLTACC151K	PEAKING COIL		D511	TVSEU2	DIODE	
L140	TLTACC180K	PEAKING COIL 18U		D513	TVSEU2	DIODE	
L142	TLTACC180K	PEAKING COIL 18U		D520	MA700	DIODE	
L143	TLTACC180K	PEAKING COIL 18U		D528	MA4360L	DIODE	
L145	TLTACC100K	PEAKING COIL 10U		D531	TVSEU2	DIODE	
L147	TLTACC150K	PEAKUNG COIL 15U		D543	MA171	DIODE	
L220	TLTACC151K	PEAKING COIL		D544	MA4108J	DIODE	
L567	EXCELSA35T	BEADS CORE	MTV	D565	MA171	DIODE	
L568	TSK1002	COIL		D566	ERD07-15	DIODE	
L569	ELH5L713	COIL	MTV	D567	TVSRU2AM	DIODE	
L574	ELC08D055	COIL		D601	MA165	DIODE	
L610	TLUABTA100	PEAKING COIL	MTV	D670	MA4082M	DIODE	
L611	TLUABTA100	PEAKING COIL	MTV	D671	MA165	DIODE	
L612	TLUABTA100	PEAKING COIL	MTV	D802	MA162	DIODE	
L613	TLTACC100K	PEAKING COIL 10U		D806	MA4068L	I.C	
L620	TLTACC100K	PEAKING COIL 10U		D807	D1NL20UV70	DIODE MTV	
L670	TLTACC220K	PEAKING COIL 22U		D808	S2L60V61	DIODE MTV	
L801	ELF18D650L	LINE FILTER		D809	D1NL20UV70	DIODE MTV	
L803	EXCELSA35T	BEADS CORE	MTV	D810	EU02	DIODE	
L804	ELEIE100KA	PEAKING COIL		D811	D1NL20UV70	DIODE MTV	
L805	EXCELSA35T	BEADS CORE	MTV	D813	D4SB80Z	DIODE	
L806	TSC930-4	CHOKE COIL		D814	TRPW5B0N120D	POSISTOR MTV	
L807	TSC930-4	CHOKE COIL		D815	ENC621D-10A	RESISTOR MODULATOR MTV	
L808	EXCELSA35T	BEADS CORE	MTV	D816	D1NL20UV70	DIODE MTV	
L1051	EXCELSA35T	BEADS CORE	MTV	D817	TVSTFD315M	THYRISTOR	
L1101	EXCELSA35T	BEADS CORE	MTV	D818	D1NL20UV70	DIODE MTV	
L1102	TLUABTA100	PEAKING COIL	MTV	D819	D1NL20UV70	DIODE MTV	
L1103	TLUABTA100	PEAKING COIL	MTV	D820	PS2501-1	PHOTO COUPLER	
L1104	TLUABTA100	PEAKING COIL	MTV	D831	EU02	DIODE	
L1106	TSK1002	COIL		D835	TVSRM25	DIODE	
L1107	TLUABTA100	PEAKING COIL	MTV	D836	D1NL20UV70	DIODE MTV	
L1108	TLUABTA100	PEAKING COIL	MTV	D837	D1NL20UV70	DIODE MTV	
L1109	TLUABTA100	PEAKING COIL	MTV	D1101	MA4056L	DIODE	
L1110	TSC930-4	CHOKE COIL		D1111	EL333ID-F45R	LED MTV	
L1135	TLUABTA100	PEAKING COIL	MTV	D1116	MA165	DIODE	
L1140	TLUABTA100	PEAKING COIL	MTV	D1135	MA165	DIODE	
L1141	TLUABTA100	PEAKING COIL	MTV	D1136	MA4150M	DIODE	
L1146	EXCELSA35T	BEADS CORE	MTV	D1150	MA4068M	DIODE	
LC151	EQL7EN019P	COIL		D1151	MA4068M	DIODE	
<b>TRANSFORMERS</b>							
T501	TLF15644F1	FLYBACK TRANSFORMER	MTV	D2301	MA165	DIODE	
T566	TLH15462M	COIL		D2302	EU02	DIODE	
T801	TLP15954M	INDUCTOR COIL		<b>INTEGRATED CIRCUITS</b>			
T802	ETS29AC1C6AC	SWITCHING TRANSFORMER	MTV	IC102	TVSUPD4066BC	C-MOS LOGIC IC	
<b>DIODES</b>							
D119	MA165	DIODE		IC203	M52317SP	LINEAR IC MTV	
D120	MA4051M	DIODE		IC401	LA7837	LINEAR IC MTV	
D121	MA4068M	DIODE		IC601	AN5192K-A	LINEAR IC MTV	
D230	MA165	DIODE		IC602	TDA4665	LINEAR IC	
D401	MA165	DIODE		IC603	TDA8395P	LINEAR IC MTV	
D413	MA165	DIODE		IC801	SE090N	IC	
				IC802	AN78M05LB	LINEAR IC	
				IC805	UPC7812AHF	IC MTV	

# TC-21S10R/2105RT/21S1

Ref.No.	Part No.	Description	Ref.No.	Part No.	Description
IC806	AN7809	LINEAR IC	JK.21	TJS1A5050	CRT SOCKET
IC807	AN7805	LINEAR IC	RL801	AJW42123	RELAY MTV
IC1051	RPM-637CBRS	REMOTE CONTROL RECEIVER	S801	ESB91232A	SWITCH
IC1101	MN152811TZX	IC (MICRO PROCESSOR) MTV	S1107	EVQPB105K	SWITCH
IC1102	MN1280R	IC (MOS IC)	S1108	EVQPB105K	SWITCH
IC1103	AN5071	LINEAR IC	S1109	EVQPB105K	SWITCH
IC1104	24C02AIPA21	IC MTV	S1110	EVQPB105K	SWITCH
IC2301	AN5270	LINEAR IC	S1111	EVQPB105K	SWITCH
<b>TRANSISTORS</b>			S1112	EVQPB105K	SWITCH
Q101	2SC2188	TRANSISTOR	TNR2	ENV598D1F2	TUNER 
Q115	2SB709ATX	TRANSISTOR MTV	X101	TFCH38MVK03	SAW FILTER 
Q117	2SD601ATX	TRANSISTOR MTV	X103	EFCS6R0MW5	CERAMIC FILTER
Q120	2SC945AQR-T	TRANSISTOR MTV	X105	EFCS4R5MW5	CERAMIC FILTER
Q150	2SC945AQR-T	TRANSISTOR MTV	X120	EFCS6R5MW5	CERAMIC FILTER
Q151	2SC945AQR-T	TRANSISTOR MTV	X136	EFCS5R5MW3	CERAMIC TRAP
Q216	2SC945AQR-T	TRANSISTOR MTV	X208	EFCS5R5MS5	CERAMIC FILTER
Q220	2SC945AQR-T	TRANSISTOR MTV	X209	EFCS4R5MS5	FILTER
Q230	2SA564A-R	TRANSISTOR	X210	EFCS6R5MS5	CERAMIC FILTER
Q351	2SC2258	TRANSISTOR	X212	CSB1000J527	CRYSTAL OSC MTV
Q352	2SC2258	TRANSISTOR	X221	SFSH6R0MDB	CERAMIC FILTER MTV
Q354	2SC2258	TRANSISTOR	X554	TAFCSB500F48	CRYSTAL OSC
Q445	2SA564A-R	TRANSISTOR	X601	TS116M20	CRYSTAL OSC MTV
Q446	2SC945AQR-T	TRANSISTOR MTV	X602	TS816M32	CRYSTAL OSC MTV
Q447	2SC945AQR-T	TRANSISTOR MTV	X1144	TAF10020	CERAMIC FILTER MTV
Q451	2SA564A-R	TRANSISTOR			
Q503	2SA564A-R	TRANSISTOR			
Q564	2SC945AQR-T	TRANSISTOR MTV			
Q565	2SD1275A	TRANSISTOR			
Q566	2SD2499	TRANSISTOR MTV			
Q675	2SC945AQR-T	TRANSISTOR MTV			
Q801	2SC4804ARL	TRANSISTOR MTV			
Q802	2SC3940A	TRANSISTOR			
Q803	2SD1010	TRANSISTOR			
Q805	2SA1512	TRANSISTOR			
Q1116	UN4212	TRANSISTOR			
Q1135	2SC945AQR-T	TRANSISTOR MTV			
Q1164	2SC945AQR-T	TRANSISTOR MTV			
Q1180	2SC945AQR-T	TRANSISTOR MTV			
Q3001	2SC945AQR-T	TRANSISTOR MTV			
<b>OTHERS</b>					
E.10	TJS118600	3P CONNECTOR			
E.11	TJS118600	3P CONNECTOR			
E.22	TJS118610	4P CONNECTOR			
E.32	TJS118620	5P CONNECTOR			
E.33	TJS118610	4P CONNECTOR			
F801	XBA2C31TR0	FUSE 250V 3.15A 			
JA.1	ERJ6GEY0R00	M 0OHM.J.1/10W			
JA.2	ERJ6GEY0R00	M 0OHM.J.1/10W			
JA.3	ERJ6GEY0R00	M 0OHM.J.1/10W			
JA.4	ERJ6GEY0R00	M 0OHM.J.1/10W			
JA.5	ERJ6GEY0R00	M 0OHM.J.1/10W			
JA.6	ERJ6GEY0R00	M 0OHM.J.1/10W			
JA.7	ERJ6GEY0R00	M 0OHM.J.1/10W			
JA.8	ERJ6GEY0R00	M 0OHM.J.1/10W			
JK.1	TJB4G605	FRONT AV TERMINAL MTV			
JK.2	TJB18637	AV TERMINAL			