

JVC

SERVICE MANUAL

TV/VCR COMBO

TV-13142
TV-13142W

VHS
SQPB
4 HEAD



NOTE FOR THE REPLACING OF MEMORY IC

If a service repair is undertaken where it has been required to change the MEMORY IC, the following steps should be taken to ensure correct data settings while making reference to TABLE 1.

NOTE: Initial Data setting will not be possible if clock has been set. To reset clock, either unplug AC cord and allow at least 5 seconds before Power On.

INI	+0	+1	+2	+3	+4	+5	+6	+7	+8	+9	+A	+B	+C	+D	+E	+F
00	88	1B	C2	63	43	14	34	09	5F	38	38	92	19	4E	26	17
10	B6	9E	95	93	00	00	D0	05	85	00	A9	54	04	42	06	04
20	06	29	01	15	10	60	32	3A	BA	B5	10	15	20	25	26	27
30	28	29	2A	2C	2E	30	32	34	36	38	3A	3C	3E	40	41	42
40	43	44	45	46	47	48	49	4A	4B	4C	4D	4E	4F	50	51	52
50	53	54	55	56	57	58	59	5A	5B	5C	5D	5E	5F	60	61	62
60	63	64	66	69	6D	74	79	7C	7E	7F	---	---	---	---	---	---

Table 1

1. Enter DATA SET mode by setting VOLUME to minimum.
2. While holding down VOLUME button on front cabinet, press key 6 on remote control simultaneously. ADDRESS and DATA should appear as FIG 1.

	ADDRESS	DATA
INIT	00	83
POWER ON	0010	
PLAY/REC	0003	

Fig. 1

3. ADDRESS is now selected and should "blink". Using the SET + or - keys on the remote, step through the ADDRESS until required ADDRESS to be changed is reached.
4. Press ENTER to select DATA. When DATA is selected, it will "blink".
5. Again, step through the DATA using SET + or - until required DATA value has been selected.
6. Pressing ENTER will take you back to ADDRESS for further selection if necessary.
7. Repeat steps 3 to 6 until all data has been checked.
8. When satisfied correct DATA has been entered, turn POWER off (return to STANDBY MODE) to finish DATA input. The unit will now have the correct DATA for the new MEMORY IC.

ELECTRICAL ADJUSTMENTS

1. BEFORE MAKING ELECTRICAL ADJUSTMENTS

Read and perform these adjustments when repairing the circuits or replacing electrical parts or PCB assemblies.

CAUTION

- Use an isolation transformer when performing any service on this chassis.
- Before removing the anode cap, discharge electricity because it contains high voltage.
- When removing a PCB or related component, after unfastening or changing a wire, be sure to put the wire back in its original position.
Inferior silicon grease can damage IC's and transistors.
- When replacing IC's and transistors, use only specified silicon grease (YG6260M).
Remove all old silicon before applying new silicon.

On-Screen Display Adjustment

1. Unplug the AC plug for more than 5 seconds to set the clock to the non-setting state. Then, set the volume level to minimum.
2. Press the VOL. DOWN button on the set and the Channel button **(9)** on the remote control simultaneously to appear the adjustment mode on the screen as shown in **Fig. 1-1**.

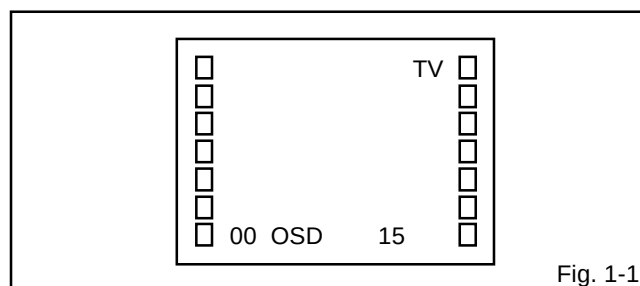


Fig. 1-1

3. Use the Channel UP/DOWN button or Channel button **(0-9)** on the remote control to select the options shown in **Fig. 1-2**.
4. Press the MENU button on the remote control to end the adjustments.

NO.	FUNCTION	NO.	FUNCTION
00	OSD H	13	BRIGHTNESS
01	CUT OFF	14	CONTRAST
02	RF DELAY	15	COLOR
03	VIF VCO	16	TINT
04	H VCO	17	SHARPNESS
05	H PHASE	18	FM LEVEL
06	V SIZE	19	LEVEL
07	V SHIFT	20	SEPARATION 1
08	R DRIVE	21	SEPARATION 2
09	B DRIVE	22	TEST MONO
10	R CUT OFF	23	TEST STEREO
11	G CUT OFF	24	X-RAY TEST
12	B CUT OFF		

Fig. 1-2

2. BASIC ADJUSTMENTS (VCR SECTION)

2-1: PG SHIFTER

1. Connect CH-1 on the oscilloscope to **TP1002** and CH-2 to **pin 4 of CP1003**.
2. Playback the alignment tape.
3. Press and hold the Tracking-Auto button on the remote control more than 2 seconds to set tracking to center.
4. Press the VOL. DOWN button on the set and the channel button **(3)** on the remote control simultaneously until the indicator REC disappears. If the indicator REC disappears, adjustment is completed.

(If the above adjustments doesn't work well:)

5. Press the VOL. DOWN button on the set and the channel button **(3)** on the remote control simultaneously until the indicator REC disappears.
6. When the REC indicator is blinking, press both VOL. DOWN button on the set and the channel button **(4)** on the remote control simultaneously and adjust the Tracking +/- button until the arising to the down of Head Switching Pulse becomes $6.5 \pm 0.5H$.
(Refer to Fig. 2-1-A, B)
7. Press the Tracking Auto button.

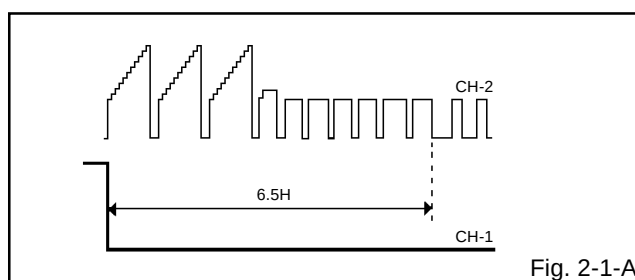


Fig. 2-1-A

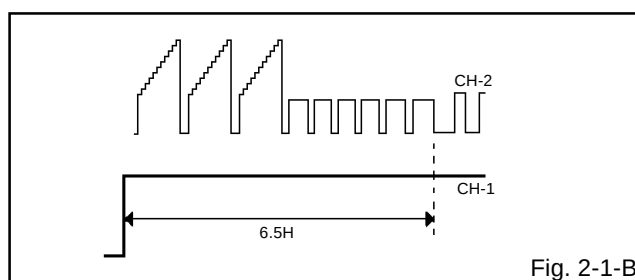


Fig. 2-1-B

2-2: VCO FREERUN

1. Receive the VHF HIGH.
2. Place the set with Aging Test for more than 10 minutes.
3. Connect the digital voltmeter between the **pin 5 of CP351** and the **pin 1 (GND) of CP351**.
4. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(03)** on the remote control to select "VIF VCO".
5. Press the VOL. UP/DOWN button on the remote control until the digital voltmeter is 2.5V.
6. After the 2.5V adjustment, countdown the VIF VCO step No. by 1 step with the VOL. DOWN button.

ELECTRICAL ADJUSTMENTS

2-3: RF AGC

1. Receive the VHF HIGH (63dB).
2. Connect the digital voltmeter between the **pin 5 of CP351** and the **pin 1 (GND) of CP351**.
3. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(02)** on the remote control to select "RF DELAY".
4. Press the VOL. UP/DOWN button on the remote control until the digital voltmeter is $2.9 \pm 0.1V$.

(TV SECTION)

2-4: CONSTANT VOLTAGE

1. Connect the digital voltmeter to the **TP601**.
2. Set condition is AV MODE without signal.
3. Using the remote control, set the brightness and contrast to normal position.
4. Adjust the **VR502** until the digital voltmeter is $135 \pm 0.5V$.

2-5: CUT OFF

1. Adjust the unit to the following settings.
R CUT OFF=128, G CUT OFF=128, B CUT OFF=128,
BRIGHTNESS=128, CONTRAST=100
2. Place the set with Aging Test for more than 15 minutes.
3. Set condition is AV MODE without signal.
4. Using the remote control, set the brightness and contrast to normal position.
5. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(01)** on the remote control to select "CUT OFF".
6. Adjust the **Screen Volume** until a dim raster is obtained.

2-6: WHITE BALANCE

NOTE: Adjust after performing CUT OFF adjustment.

1. Place the set with Aging Test for more than 15 minutes.
2. Receive the color bar pattern.
3. Using the remote control, set the brightness and contrast to normal position.
4. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(10)** on the remote control to select "R CUT OFF".
5. Using the VOL. UP/DOWN button on the remote control, adjust the R CUT OFF.
6. Press the CH. UP/DOWN button on the remote control to select the "R DRIVE", "B DRIVE", "G CUT OFF" or "B CUT OFF".
7. Using the VOL. UP/DOWN button on the remote control, adjust the R DRIVE, B DRIVE, G CUT OFF or B CUT OFF.
8. Perform the above adjustments 6 and 7 until the white color is looked like a white.

2-7: FOCUS

1. Receive the monoscope pattern.
2. Using the remote control, set the brightness and contrast to normal position.
3. Turn the Focus Volume fully counterclockwise once.
4. Adjust the **Focus Volume** until picture is distinct.

2-8: HORIZONTAL PHASE

1. Receive the center cross signal from the Pattern Generator.
2. Using the remote control, set the brightness and contrast to normal position.
3. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(05)** on the remote control to select "H PHASE".
4. Press the VOL. UP/DOWN button on the remote control until the right and left screen size of the vertical line becomes the same.

2-9: VERTICAL SHIFT

1. Receive the center cross signal from the Pattern Generator.
2. Using the remote control, set the brightness and contrast to normal position.
3. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(07)** on the remote control to select "V SHIFT".
4. Press the VOL. UP/DOWN button on the remote control until the horizontal line becomes fit to the notch of the shadow mask.

2-10: VERTICAL SIZE

1. Receive the cross hatch signal from the Pattern Generator.
2. Using the remote control, set the brightness and contrast to normal position.
3. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(06)** on the remote control to select "V SIZE".
4. Press the VOL. UP/DOWN button on the remote control until the rectangle on the center of the screen becomes square.
5. Receive a broadcast and check if the picture is normal.

2-11: SUB BRIGHTNESS

1. Receive the monoscope pattern.
2. Using the remote control, set the brightness and contrast to normal position.
3. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(13)** on the remote control to select "BRIGHTNESS".
4. Press the VOL. UP/DOWN button on the remote control until the white 10% is starting to be visible
5. Receive the monoscope pattern. (Audio Video Input)
6. Press the INPUT button on the remote control to set to the AV mode. Then perform the above adjustments 2~4.


2-12: SUB CONTRAST

1. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(14)** on the remote control to select "CONTRAST".
2. Press the VOL. UP/DOWN button on the remote control until the contrast step No. becomes "102"
3. Press the INPUT button on the remote control to set to the AV mode.
4. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(14)** on the remote control.
5. Press the VOL. UP/DOWN button on the remote control until the contrast step No. becomes "100"

ELECTRICAL ADJUSTMENTS


2-13: SUB TINT

1. Receive the color bar pattern. (RF Input)
2. Connect the synchro scope to **TP801**.
3. Using the remote control, set the brightness, contrast, color and tint to normal position.
4. Activate the adjustment mode display of **Fig. 1-1** and press the channel button (**16**) on the remote control to select "TINT".
5. Press the VOL. UP/DOWN button on the remote control until the waveform becomes as shown in **Fig. 2-2**.
6. Receive the color bar pattern. (Audio Video Input)
7. Press the INPUT button on the remote control to set to the AV mode. Then perform the above adjustments 2~5.

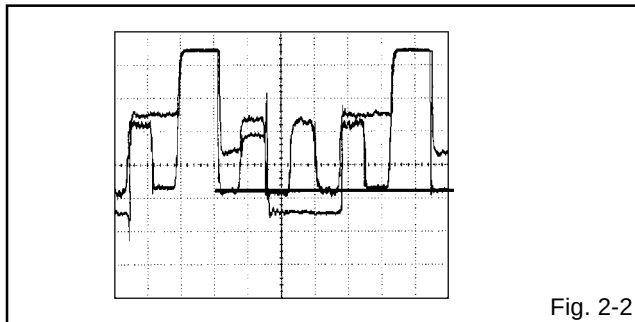


2-14: SUB COLOR

1. Receive the color bar pattern. (RF Input)
2. Connect the synchro scope to **TP803**.
3. Using the remote control, set the brightness, contrast, color and tint to normal position.
4. Activate the adjustment mode display of **Fig. 1-1** and press the channel button (**15**) on the remote control to select "COLOR".
5. Adjust the VOLTS RANGE VARIABLE knob of the oscilloscope until the range between white 100% and 0% is set to 4 scales on the screen of the oscilloscope.
6. Press the VOL. UP/DOWN button on the remote control until the red color level is adjusted to 110% of the white level. (**Refer to Fig. 2-3**)
7. Receive the color bar pattern. (Audio Video Input)
8. Press the INPUT button on the remote control to set to the AV mode. Then perform the above adjustments 2~6.

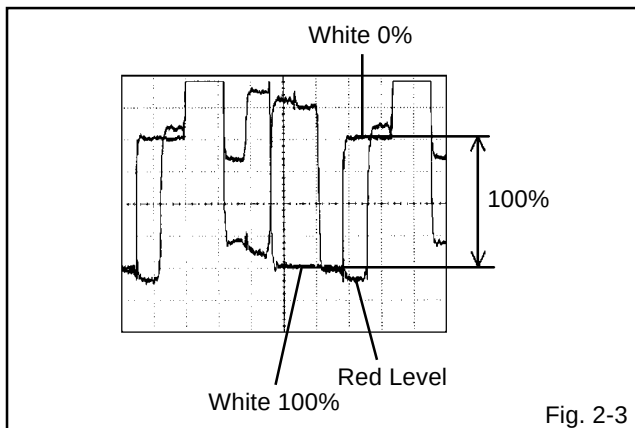


2-15: OSD HORIZONTAL


1. Activate the adjustment mode display of **Fig. 1-1**.
2. Press the VOL. UP/DOWN button on the remote control until the difference of A and B becomes minimum. (**Refer to Fig. 2-4**)

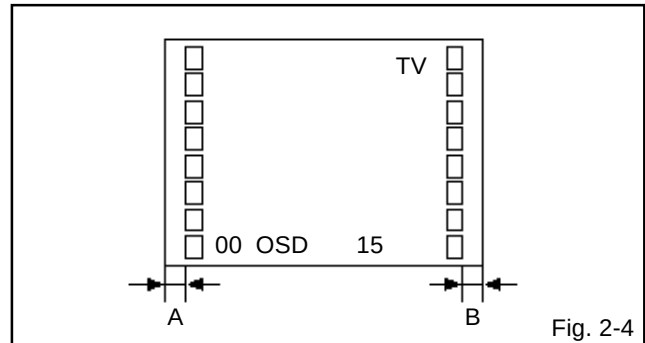

TV BLOCK DIAGRAM

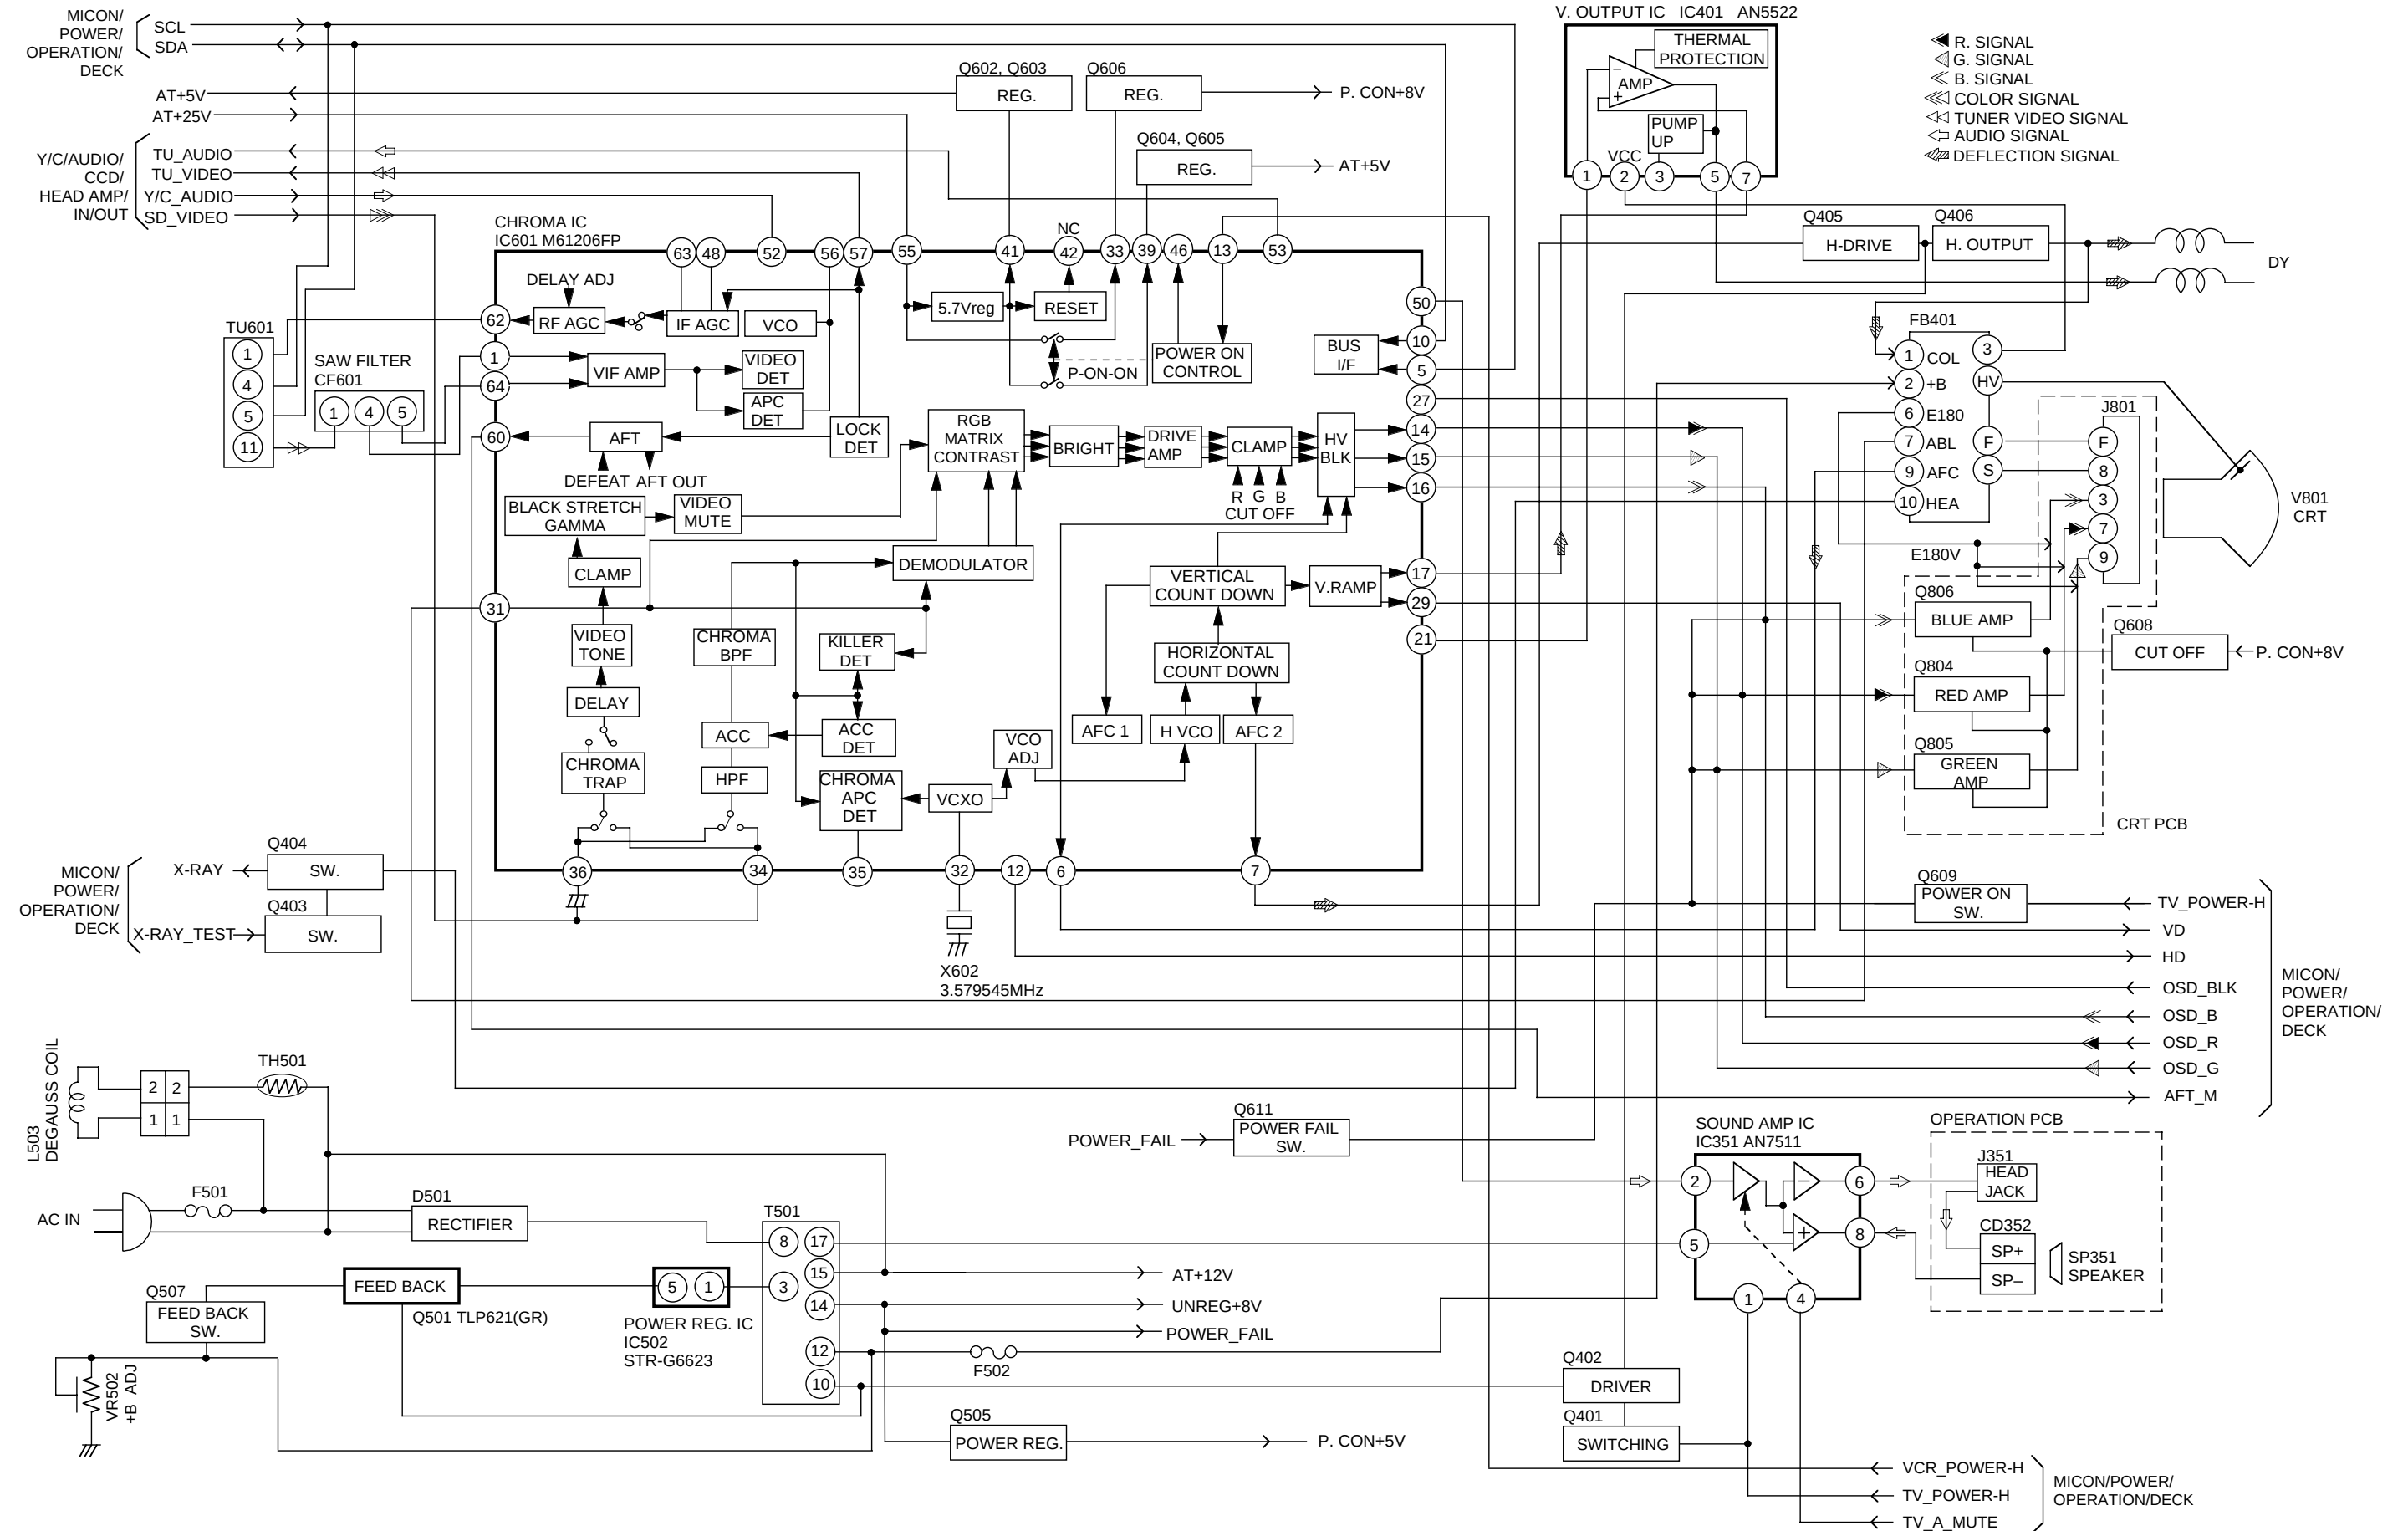

4001



TIMER SYSCON MICON IC
IC1001 OEC7059A


50 TAB SW

RESET-L


34

3 OUT


SYSTEM RESET IC
IC1003
R3111N311A/C




WIRING CONNECTION DIAGRAM

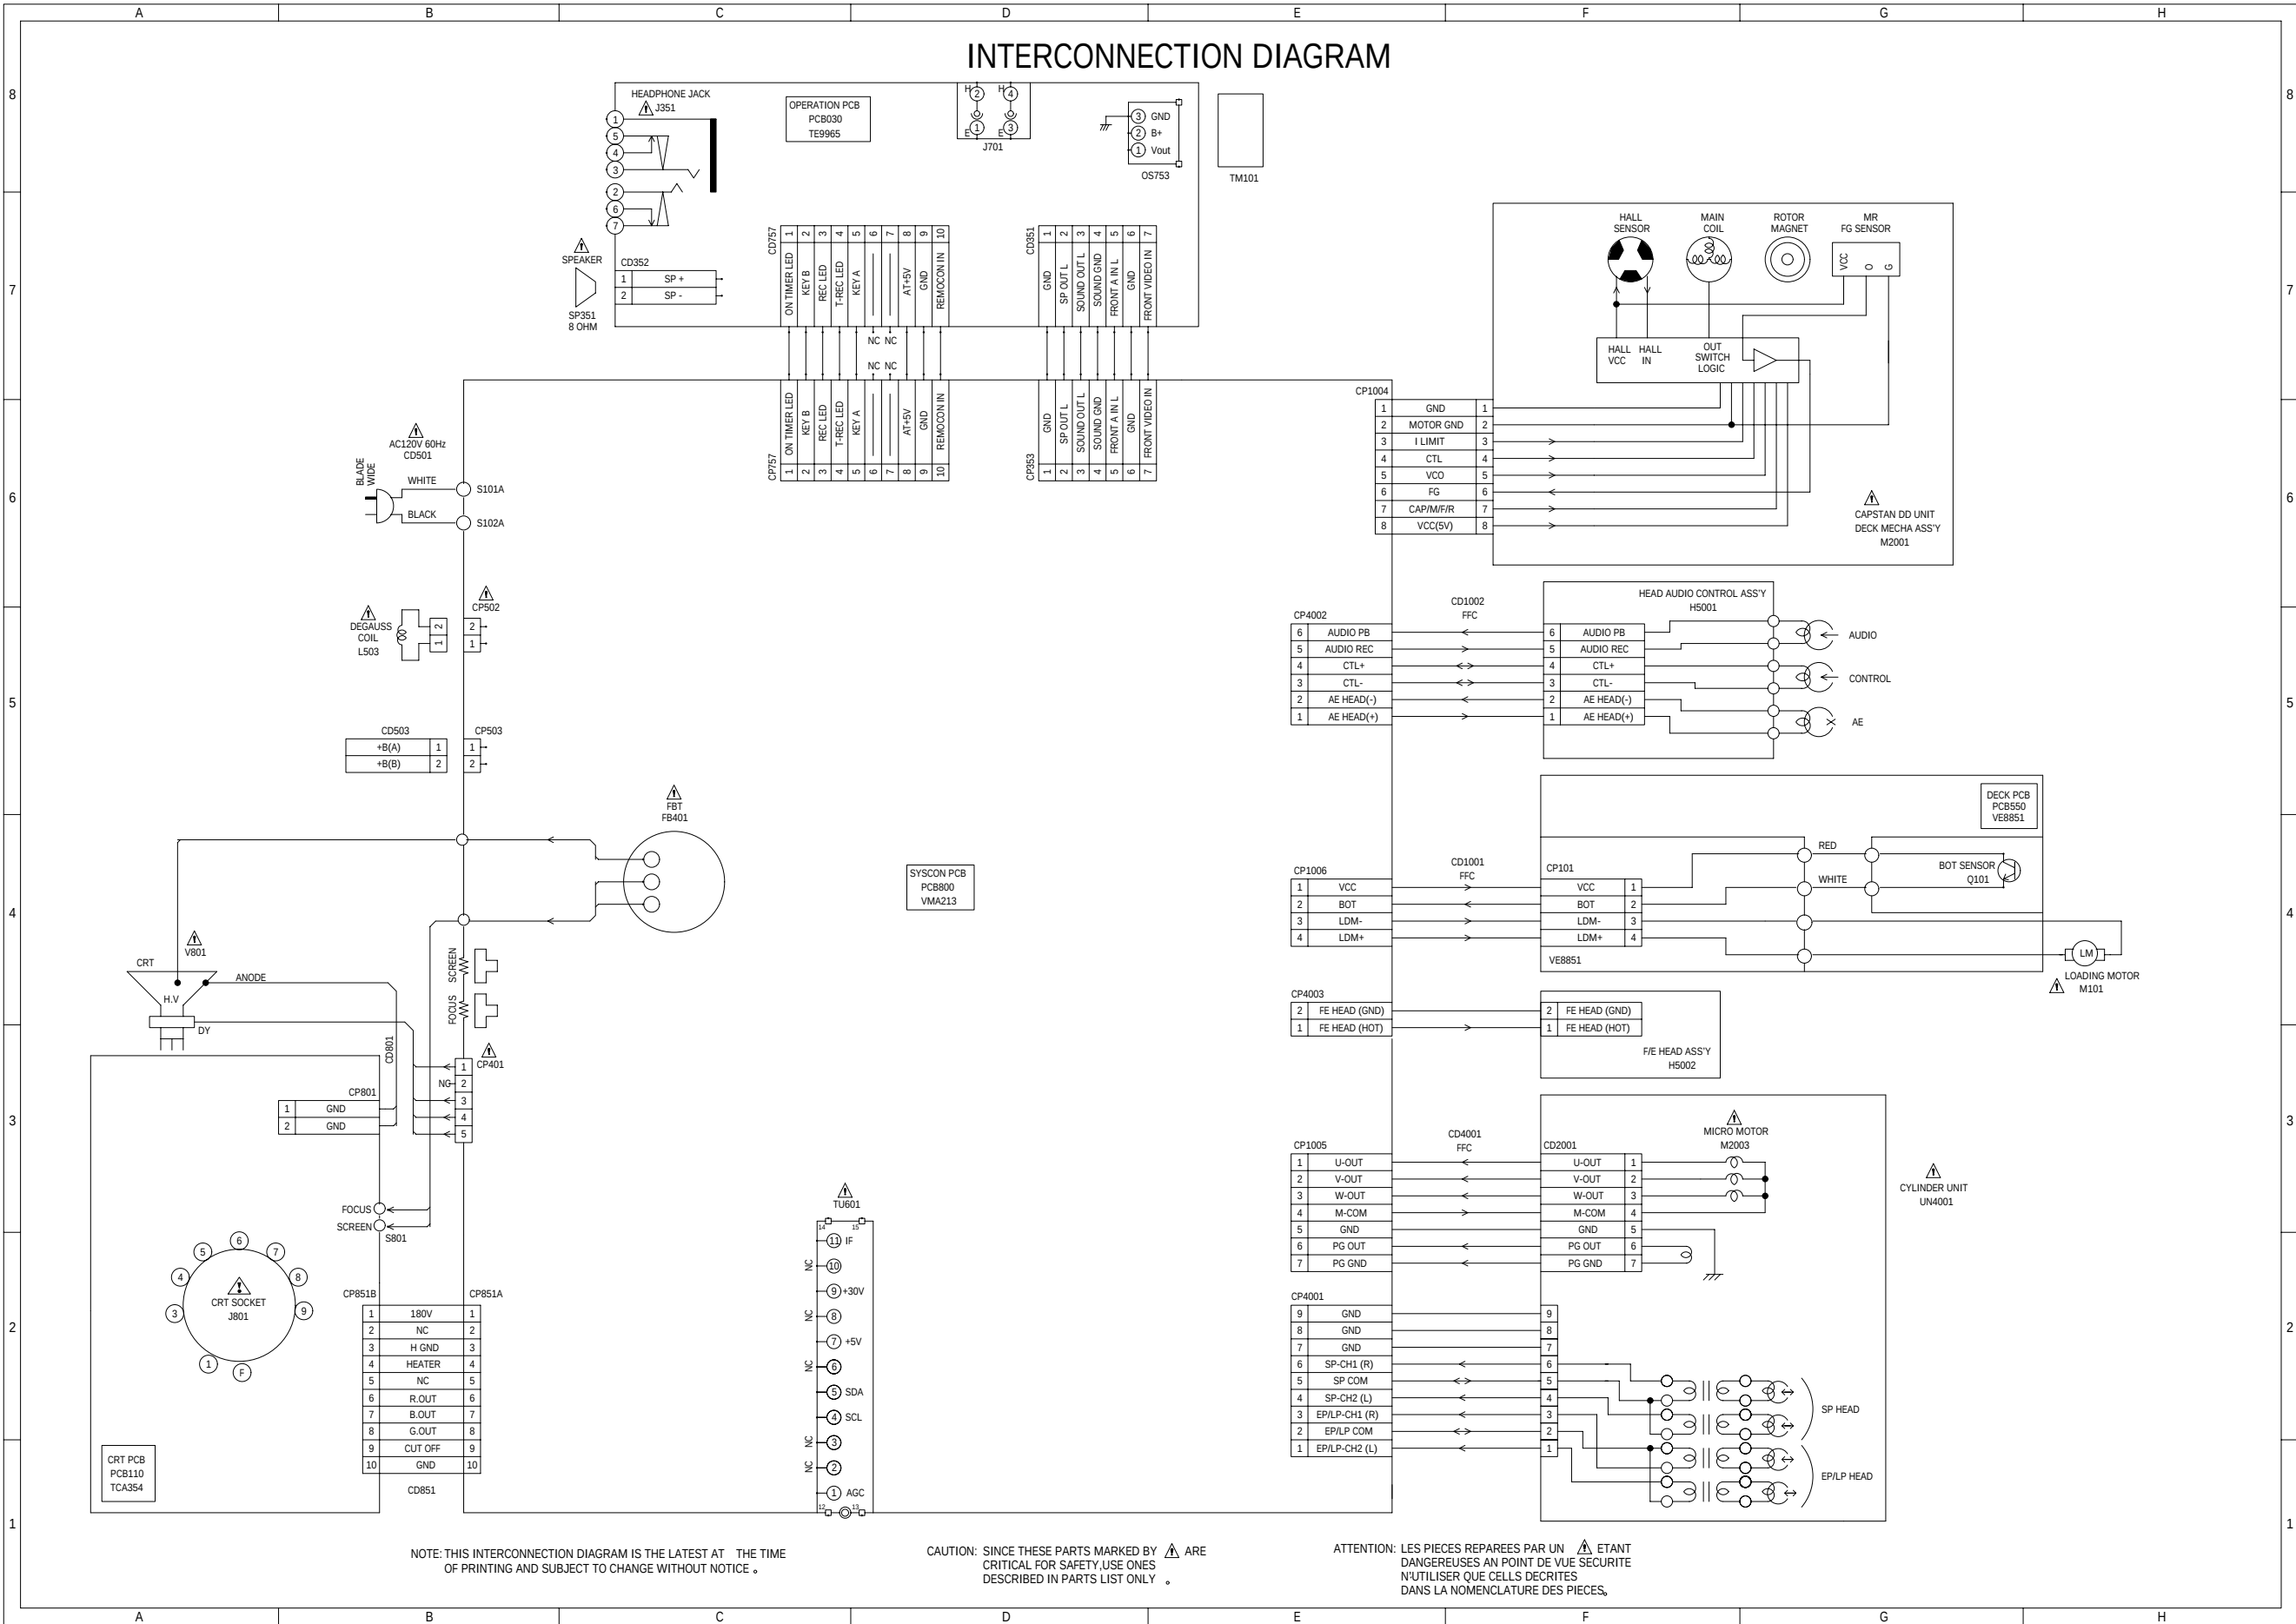


[SYSCON PWB(IN/OUT) CIRCUIT DIAGRAM]

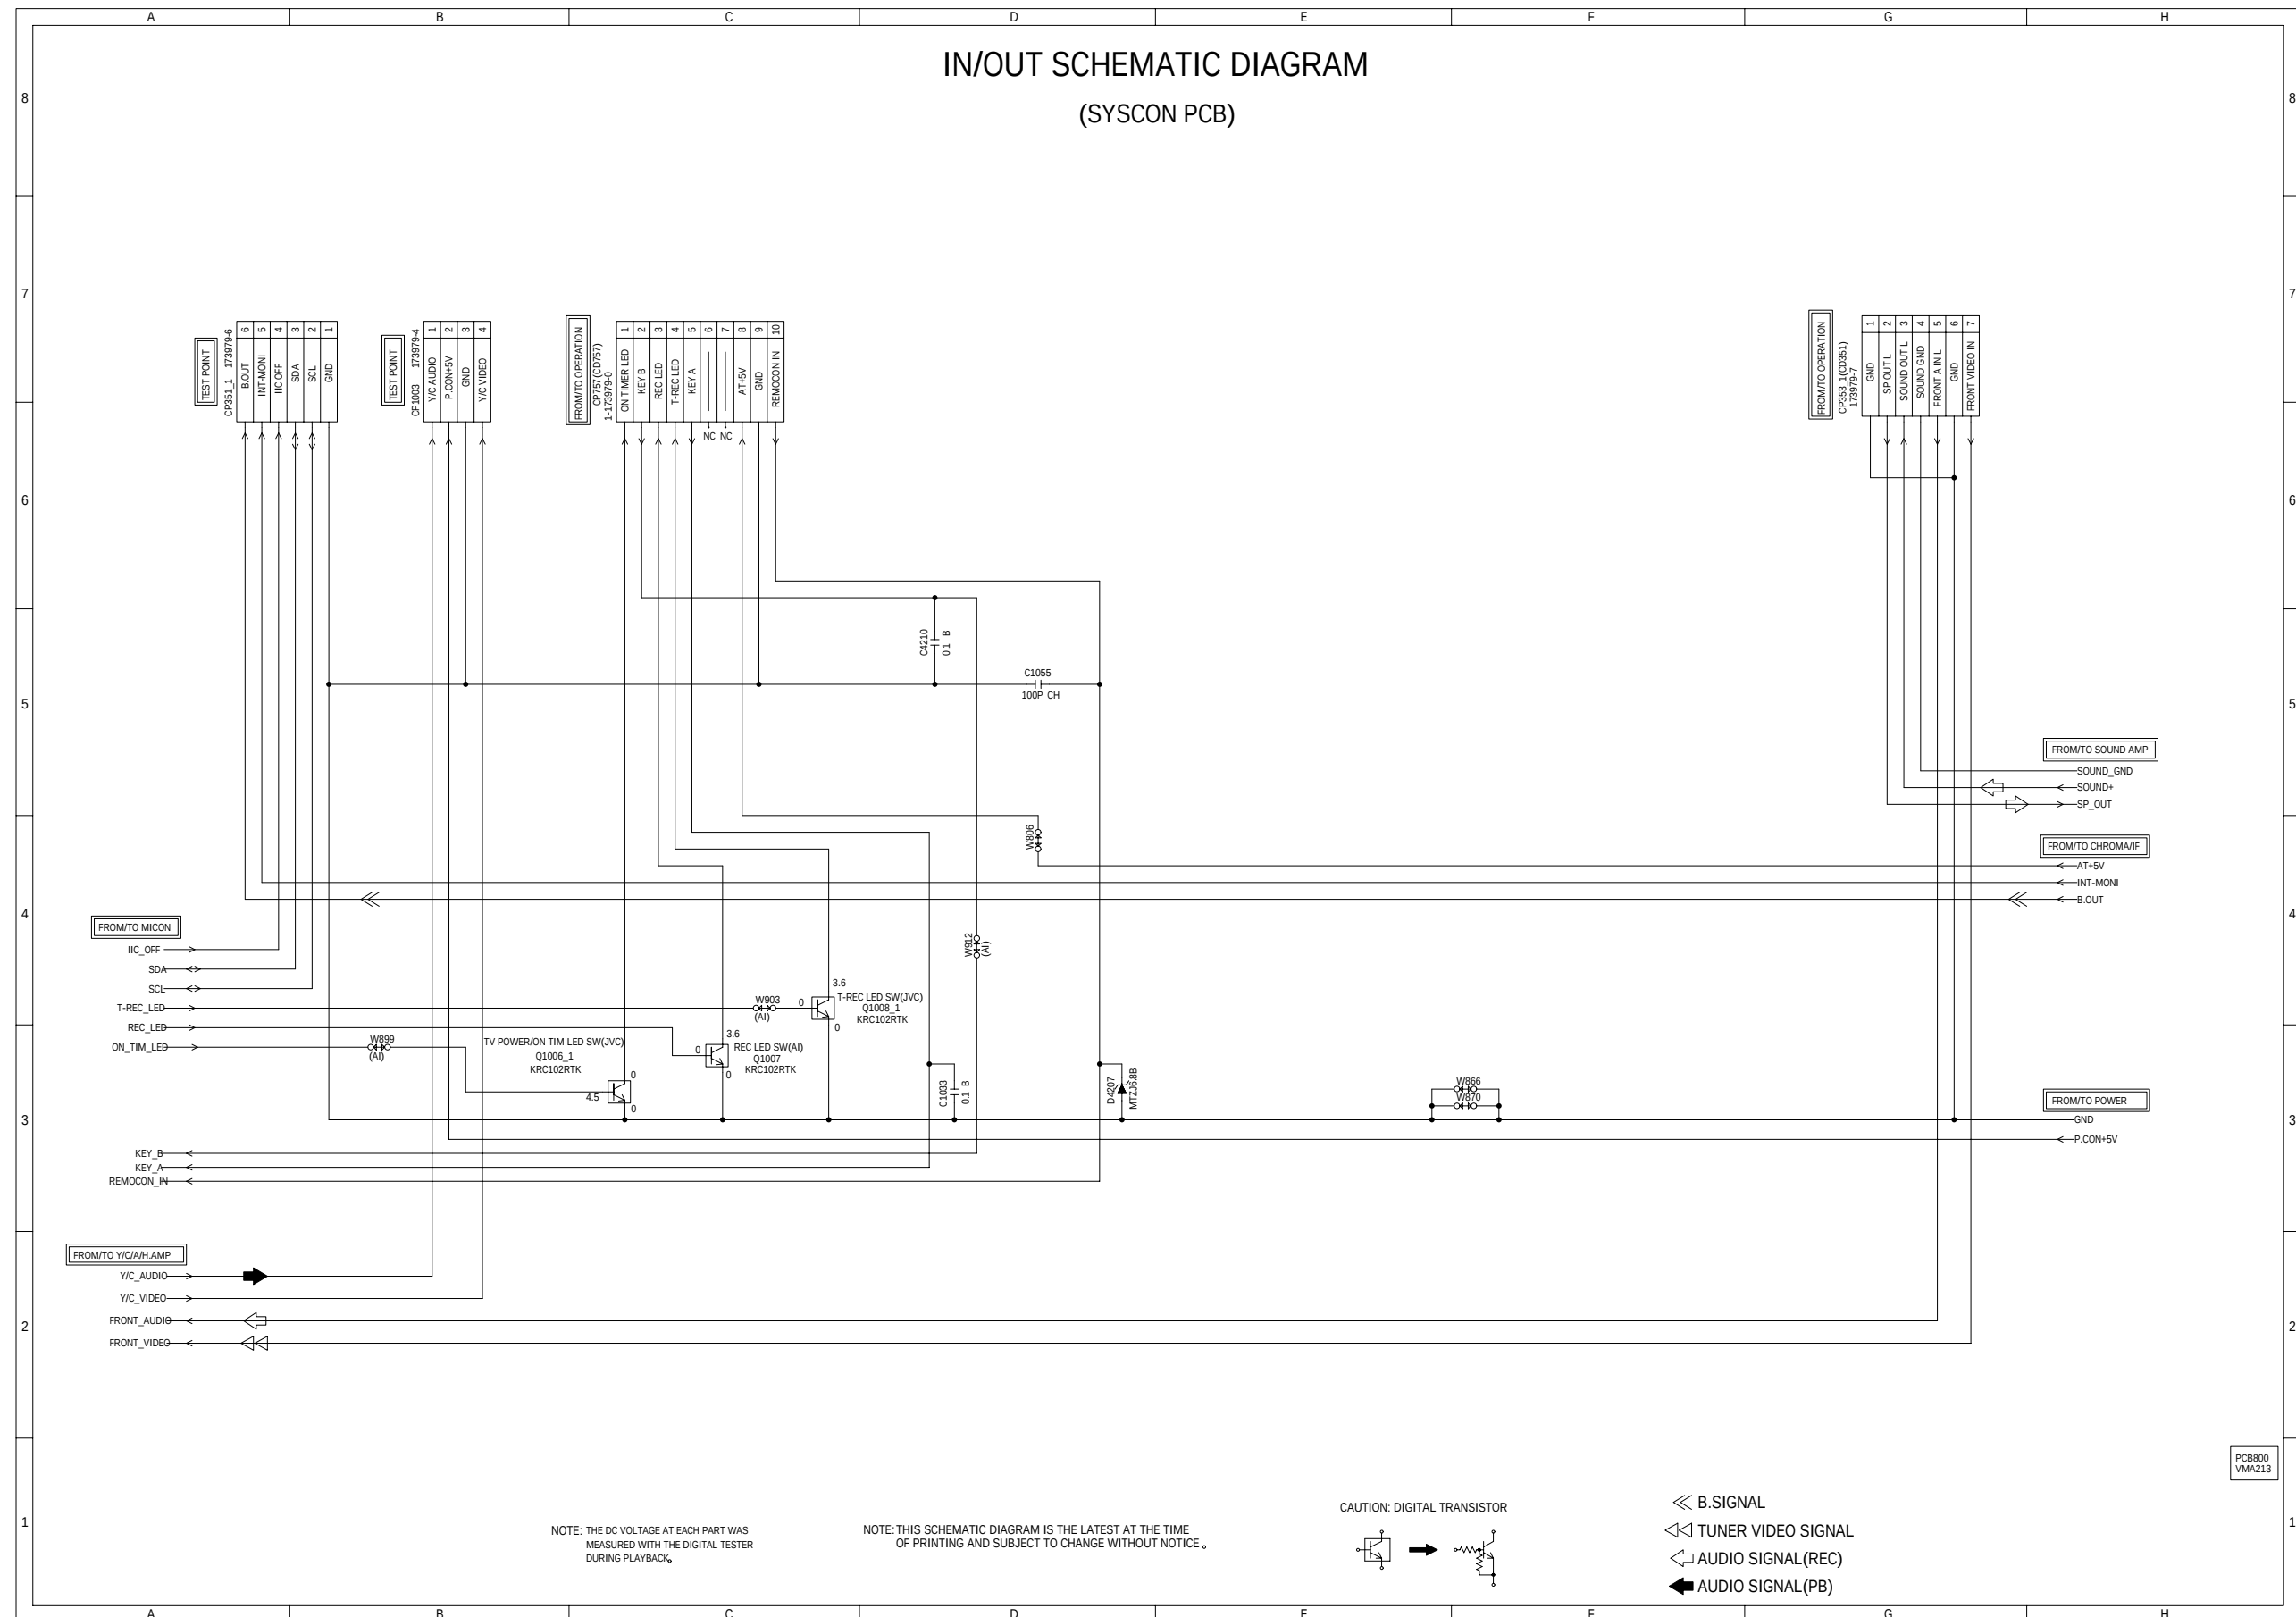

Y/C/AUDIO/CCD/HEAD AMP SCHEMATIC DIAGRAM (SYSCON PCB)




[SYSCON PWB(MICON) CIRCUIT DIAGRAM]

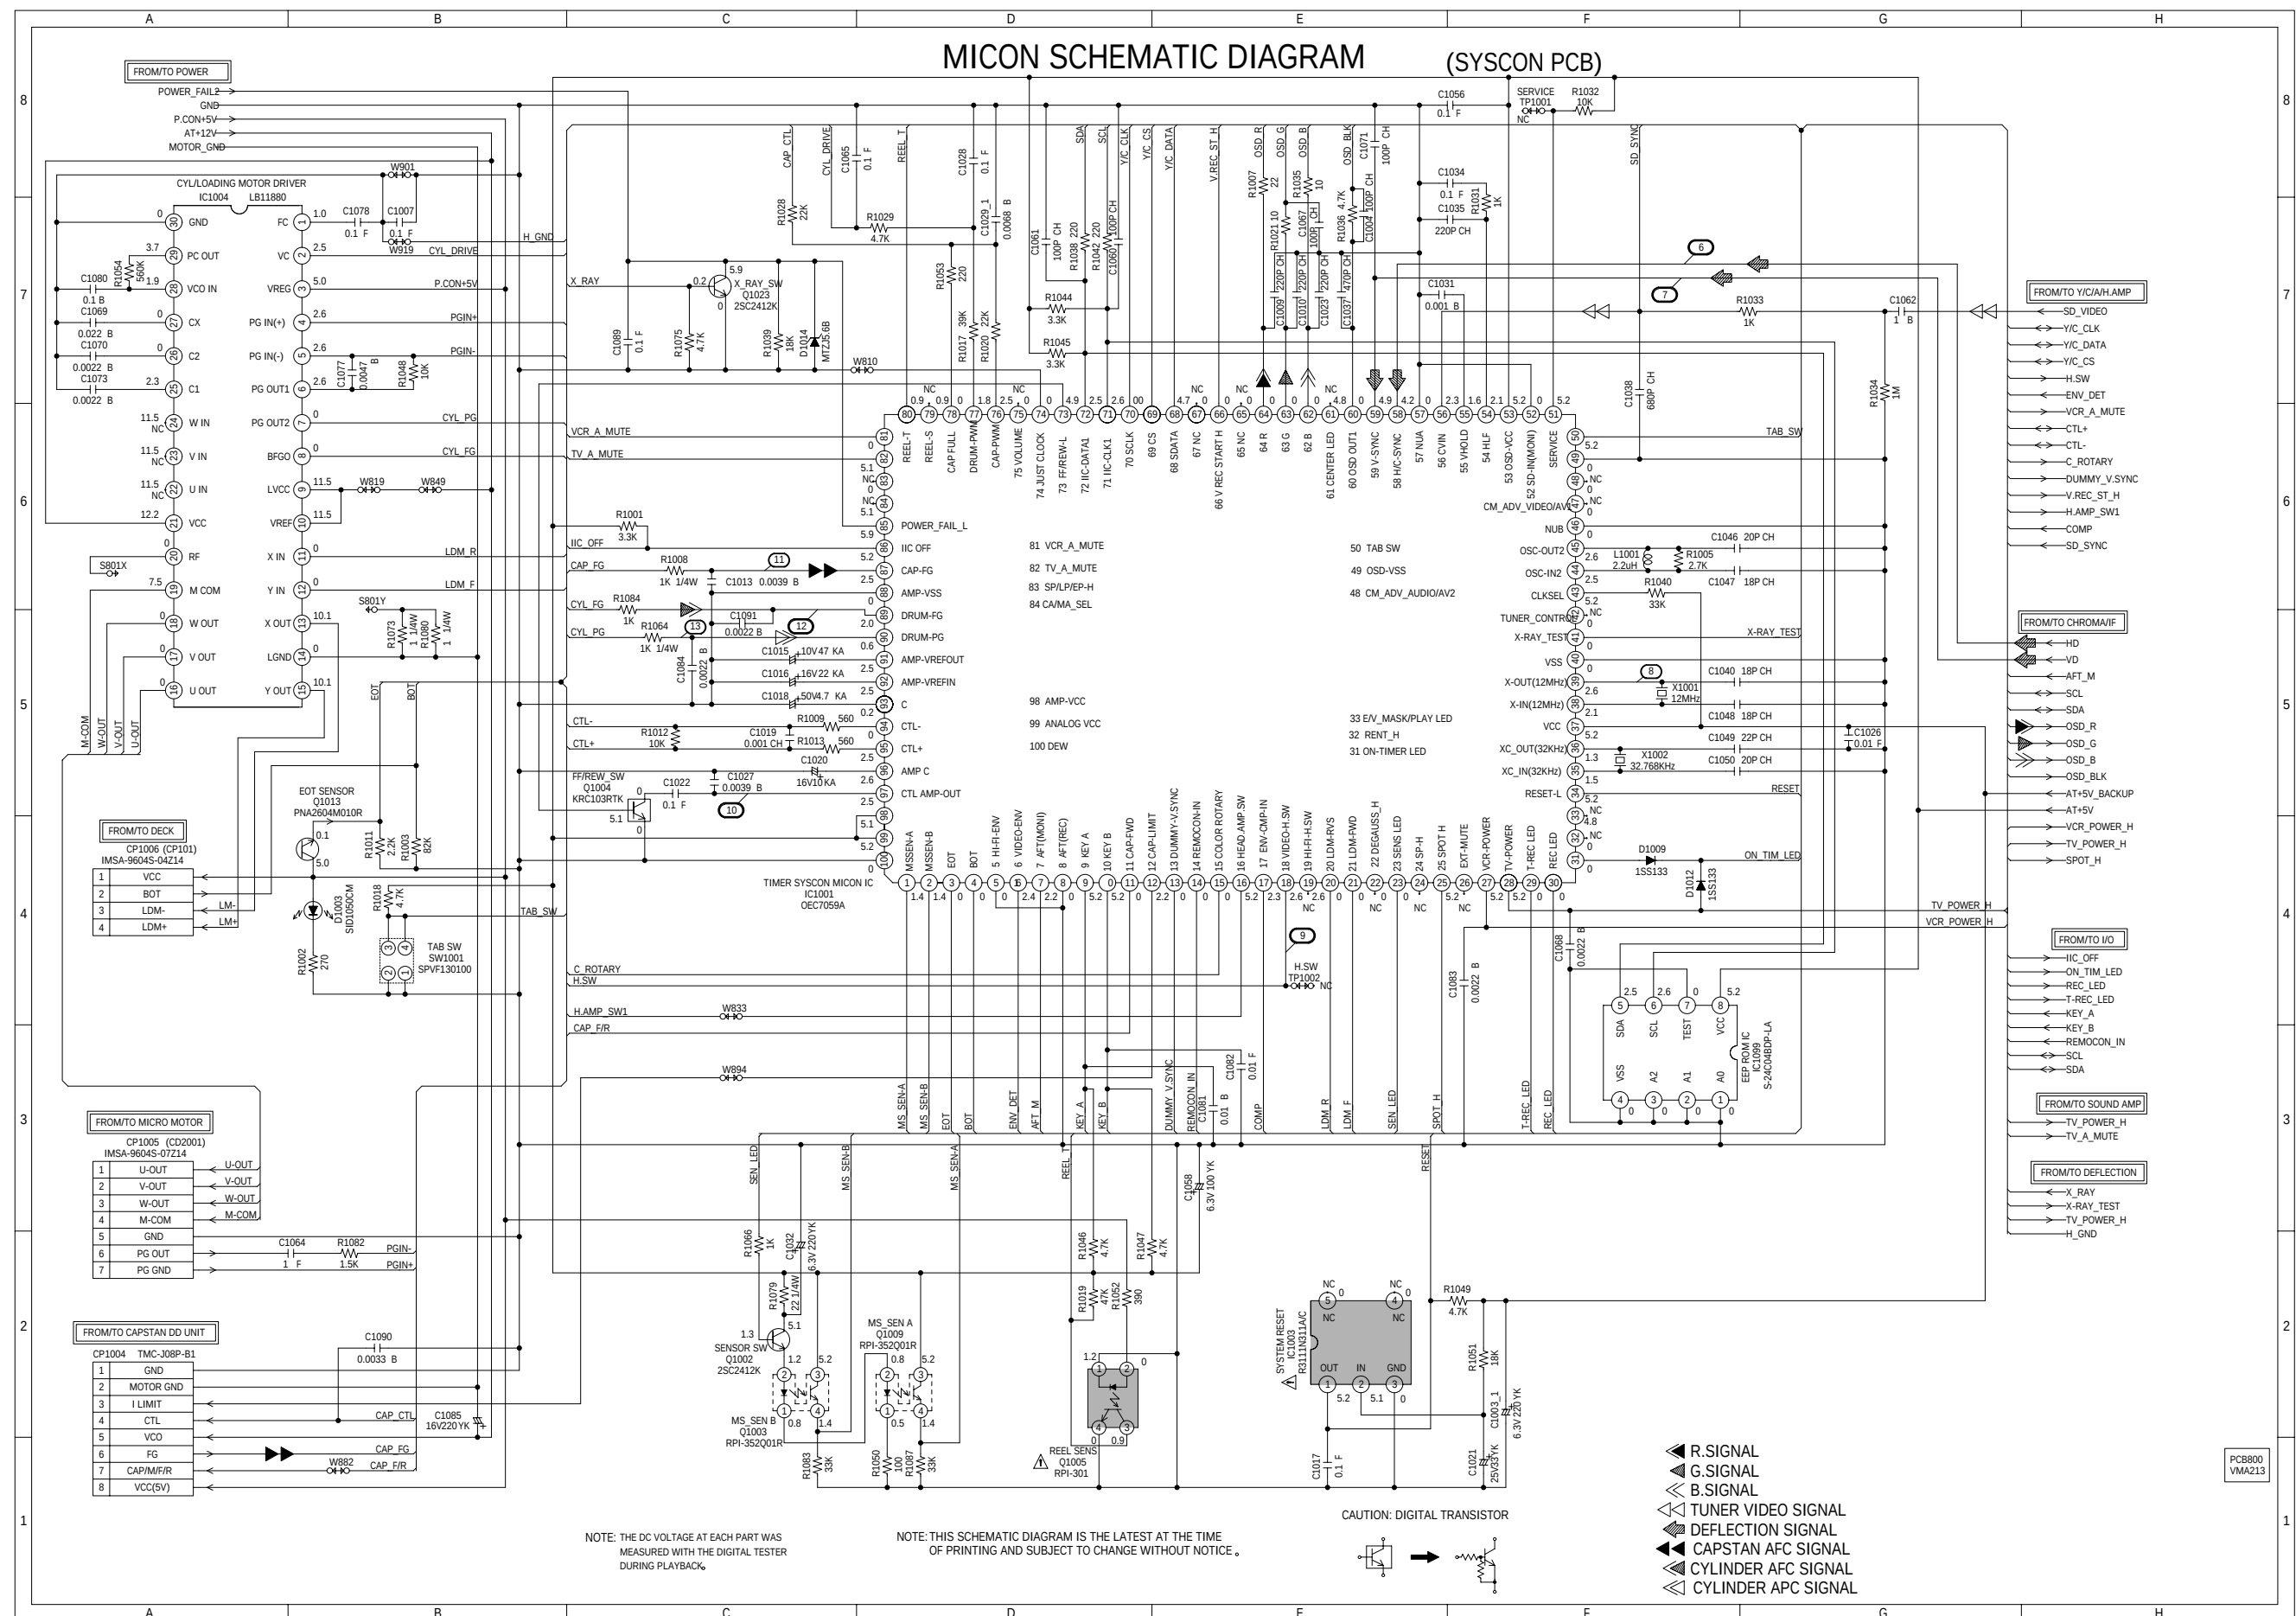


TV-13142
TV-13142W


CHROMA/IF SCHEMATIC DIAGRAM (SYSCON PCB)




[SYSCON PWB(SOUND AMP) CIRCUIT DIAGRAM]

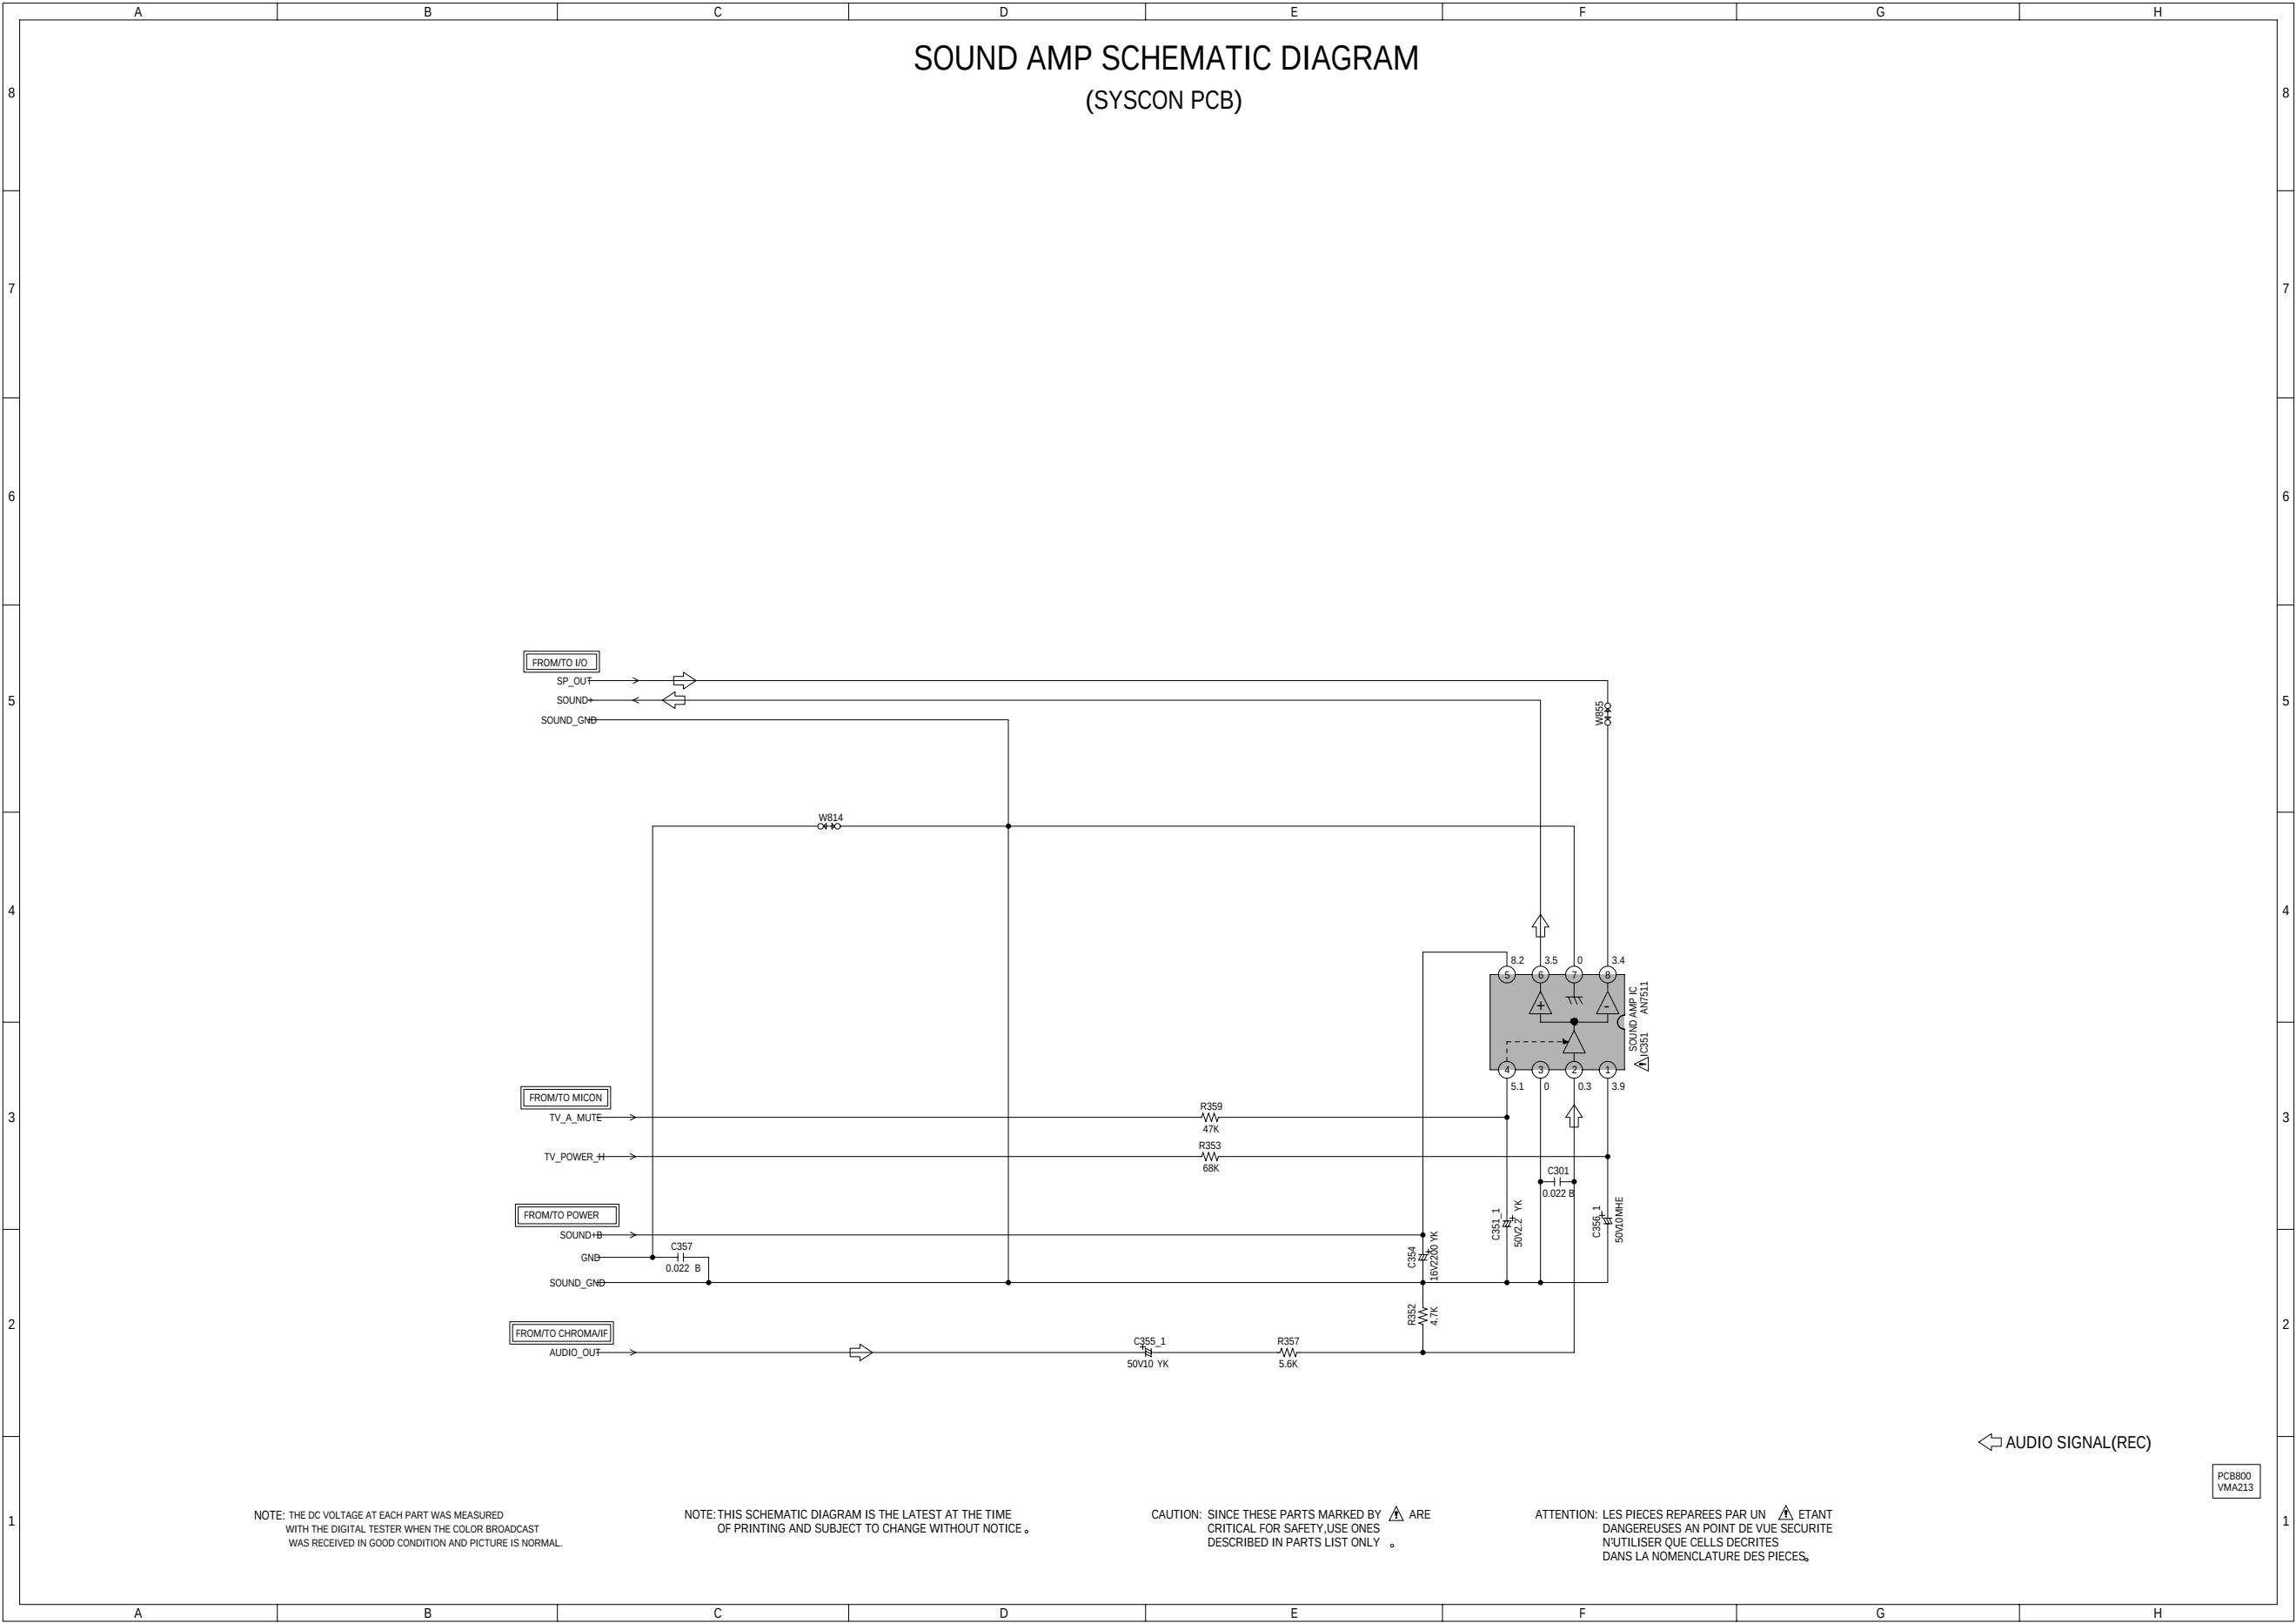


[SYSCON PWB(POWER) CIRCUIT DIAGRAM]

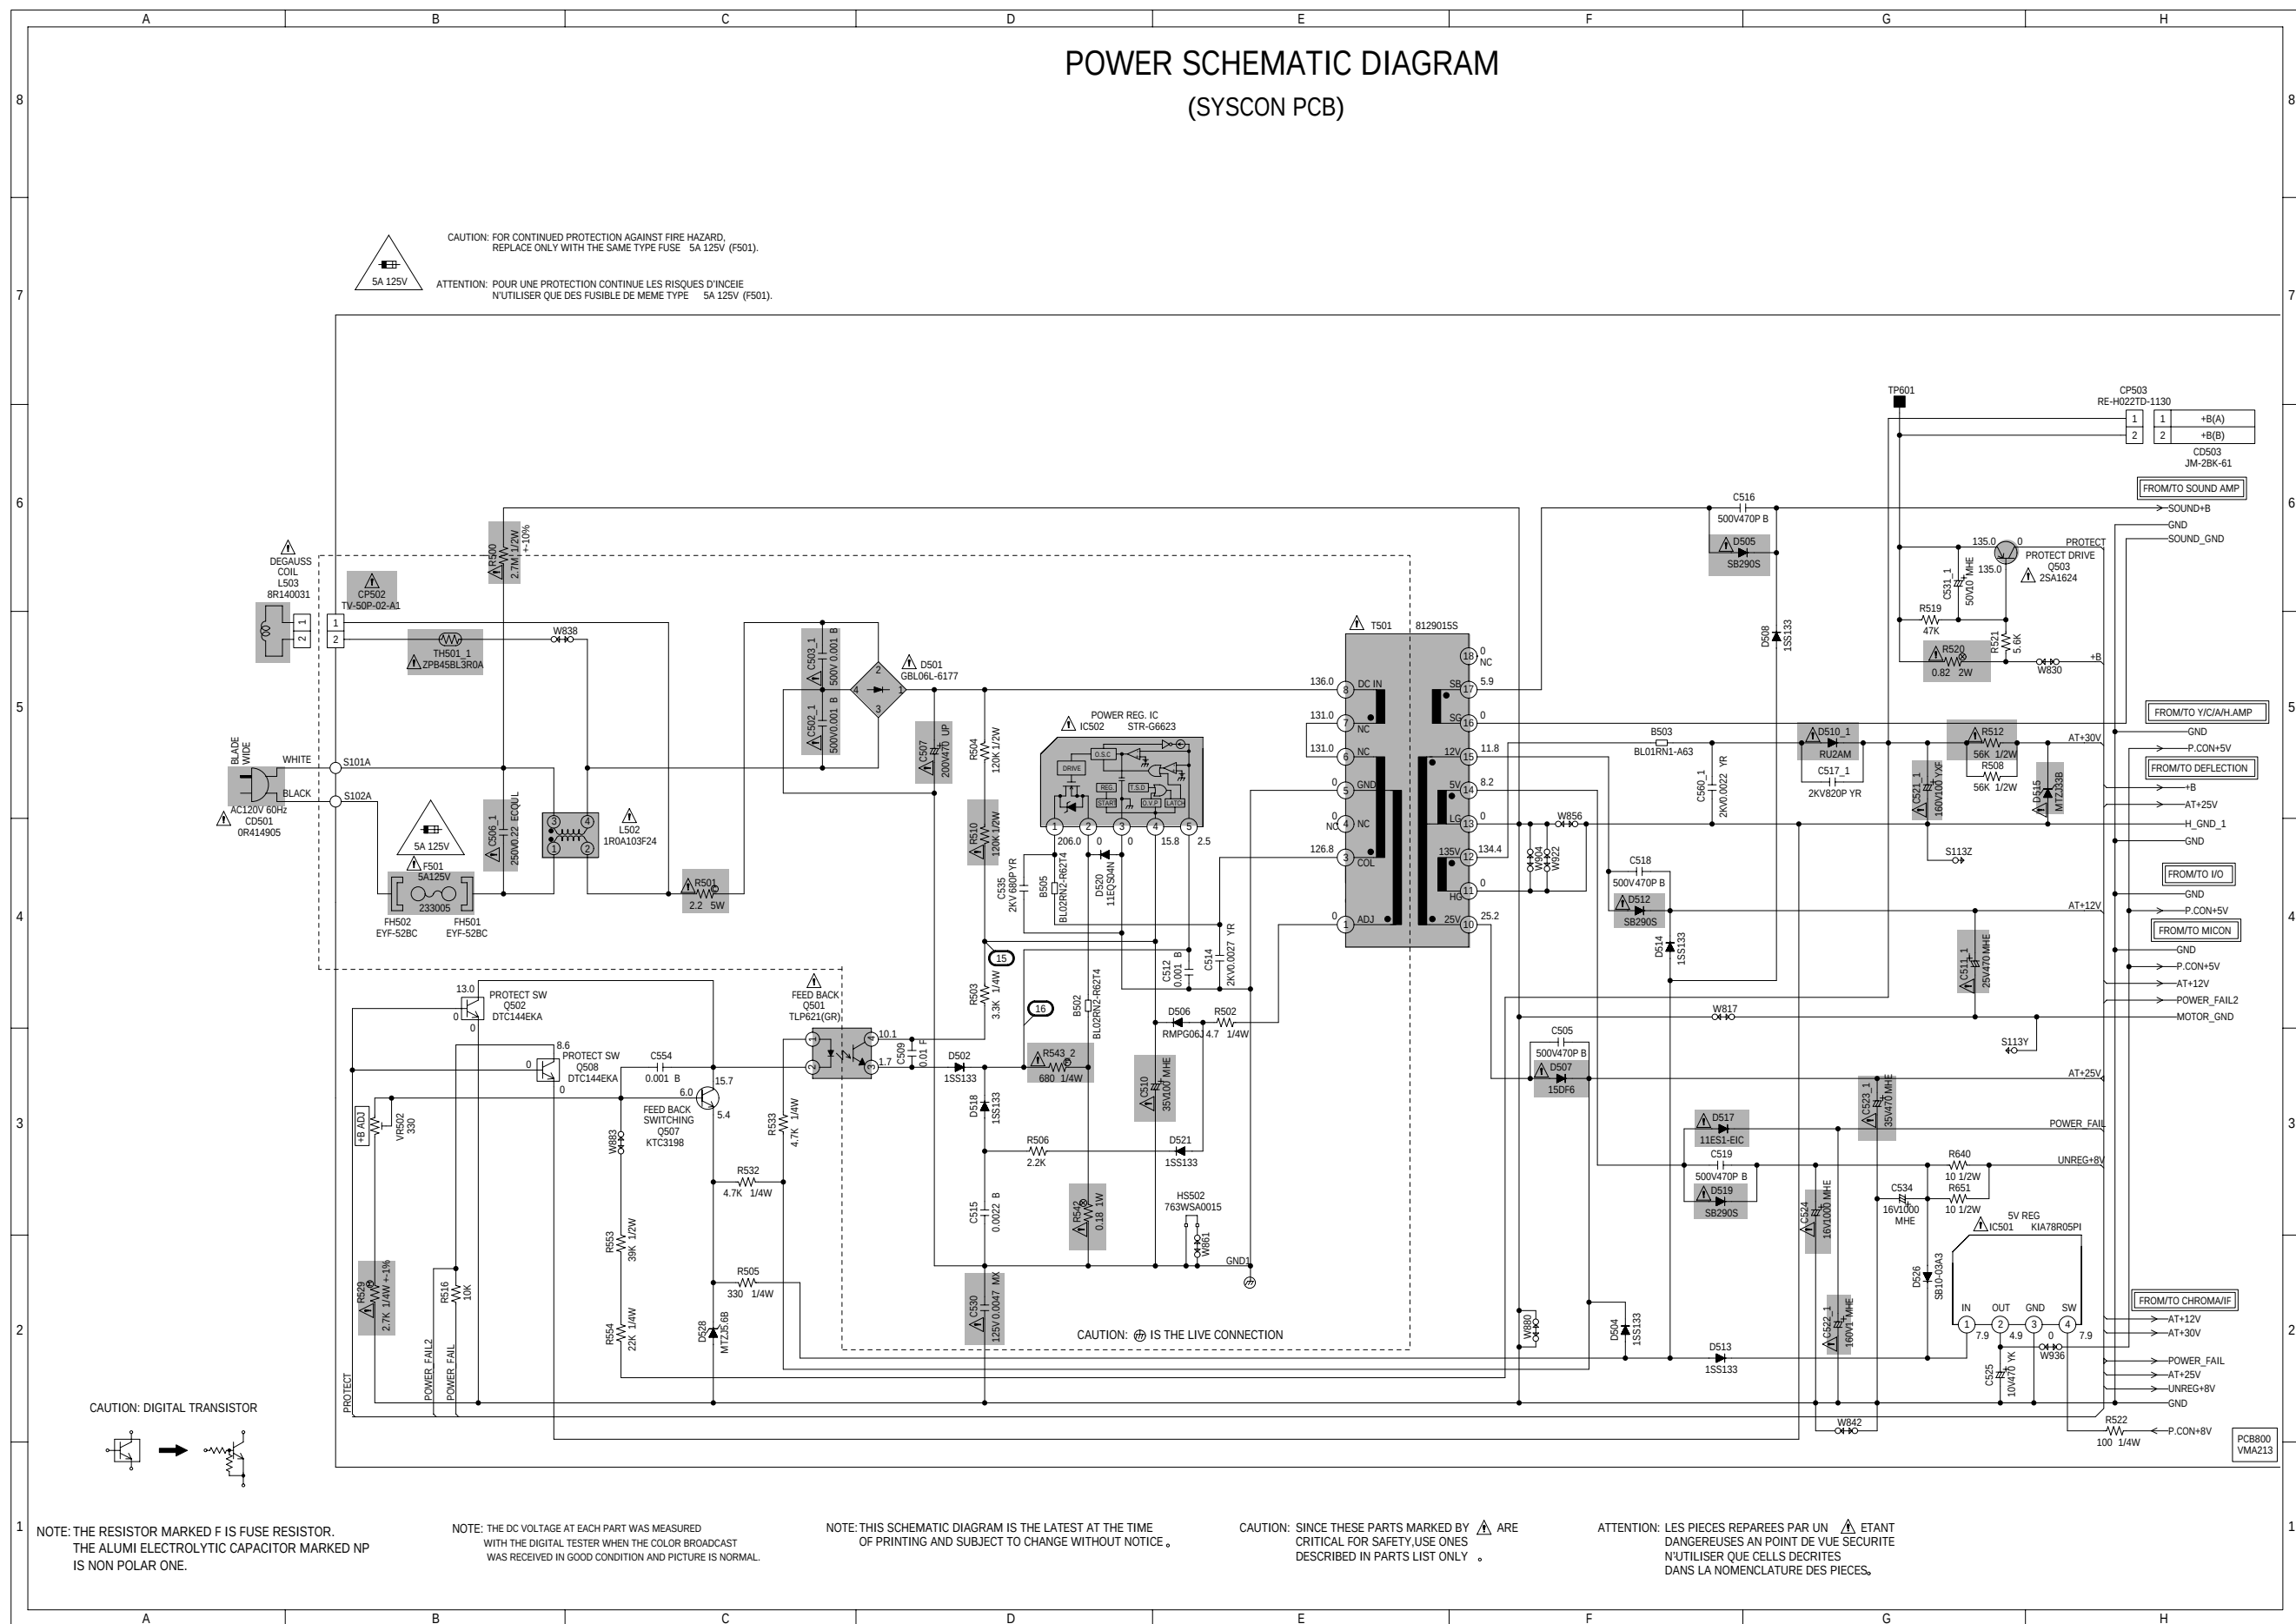

DEFLECTION SCHEMATIC DIAGRAM (SYSCON PCB)




[CRT PWB CIRCUIT DIAGRAM]

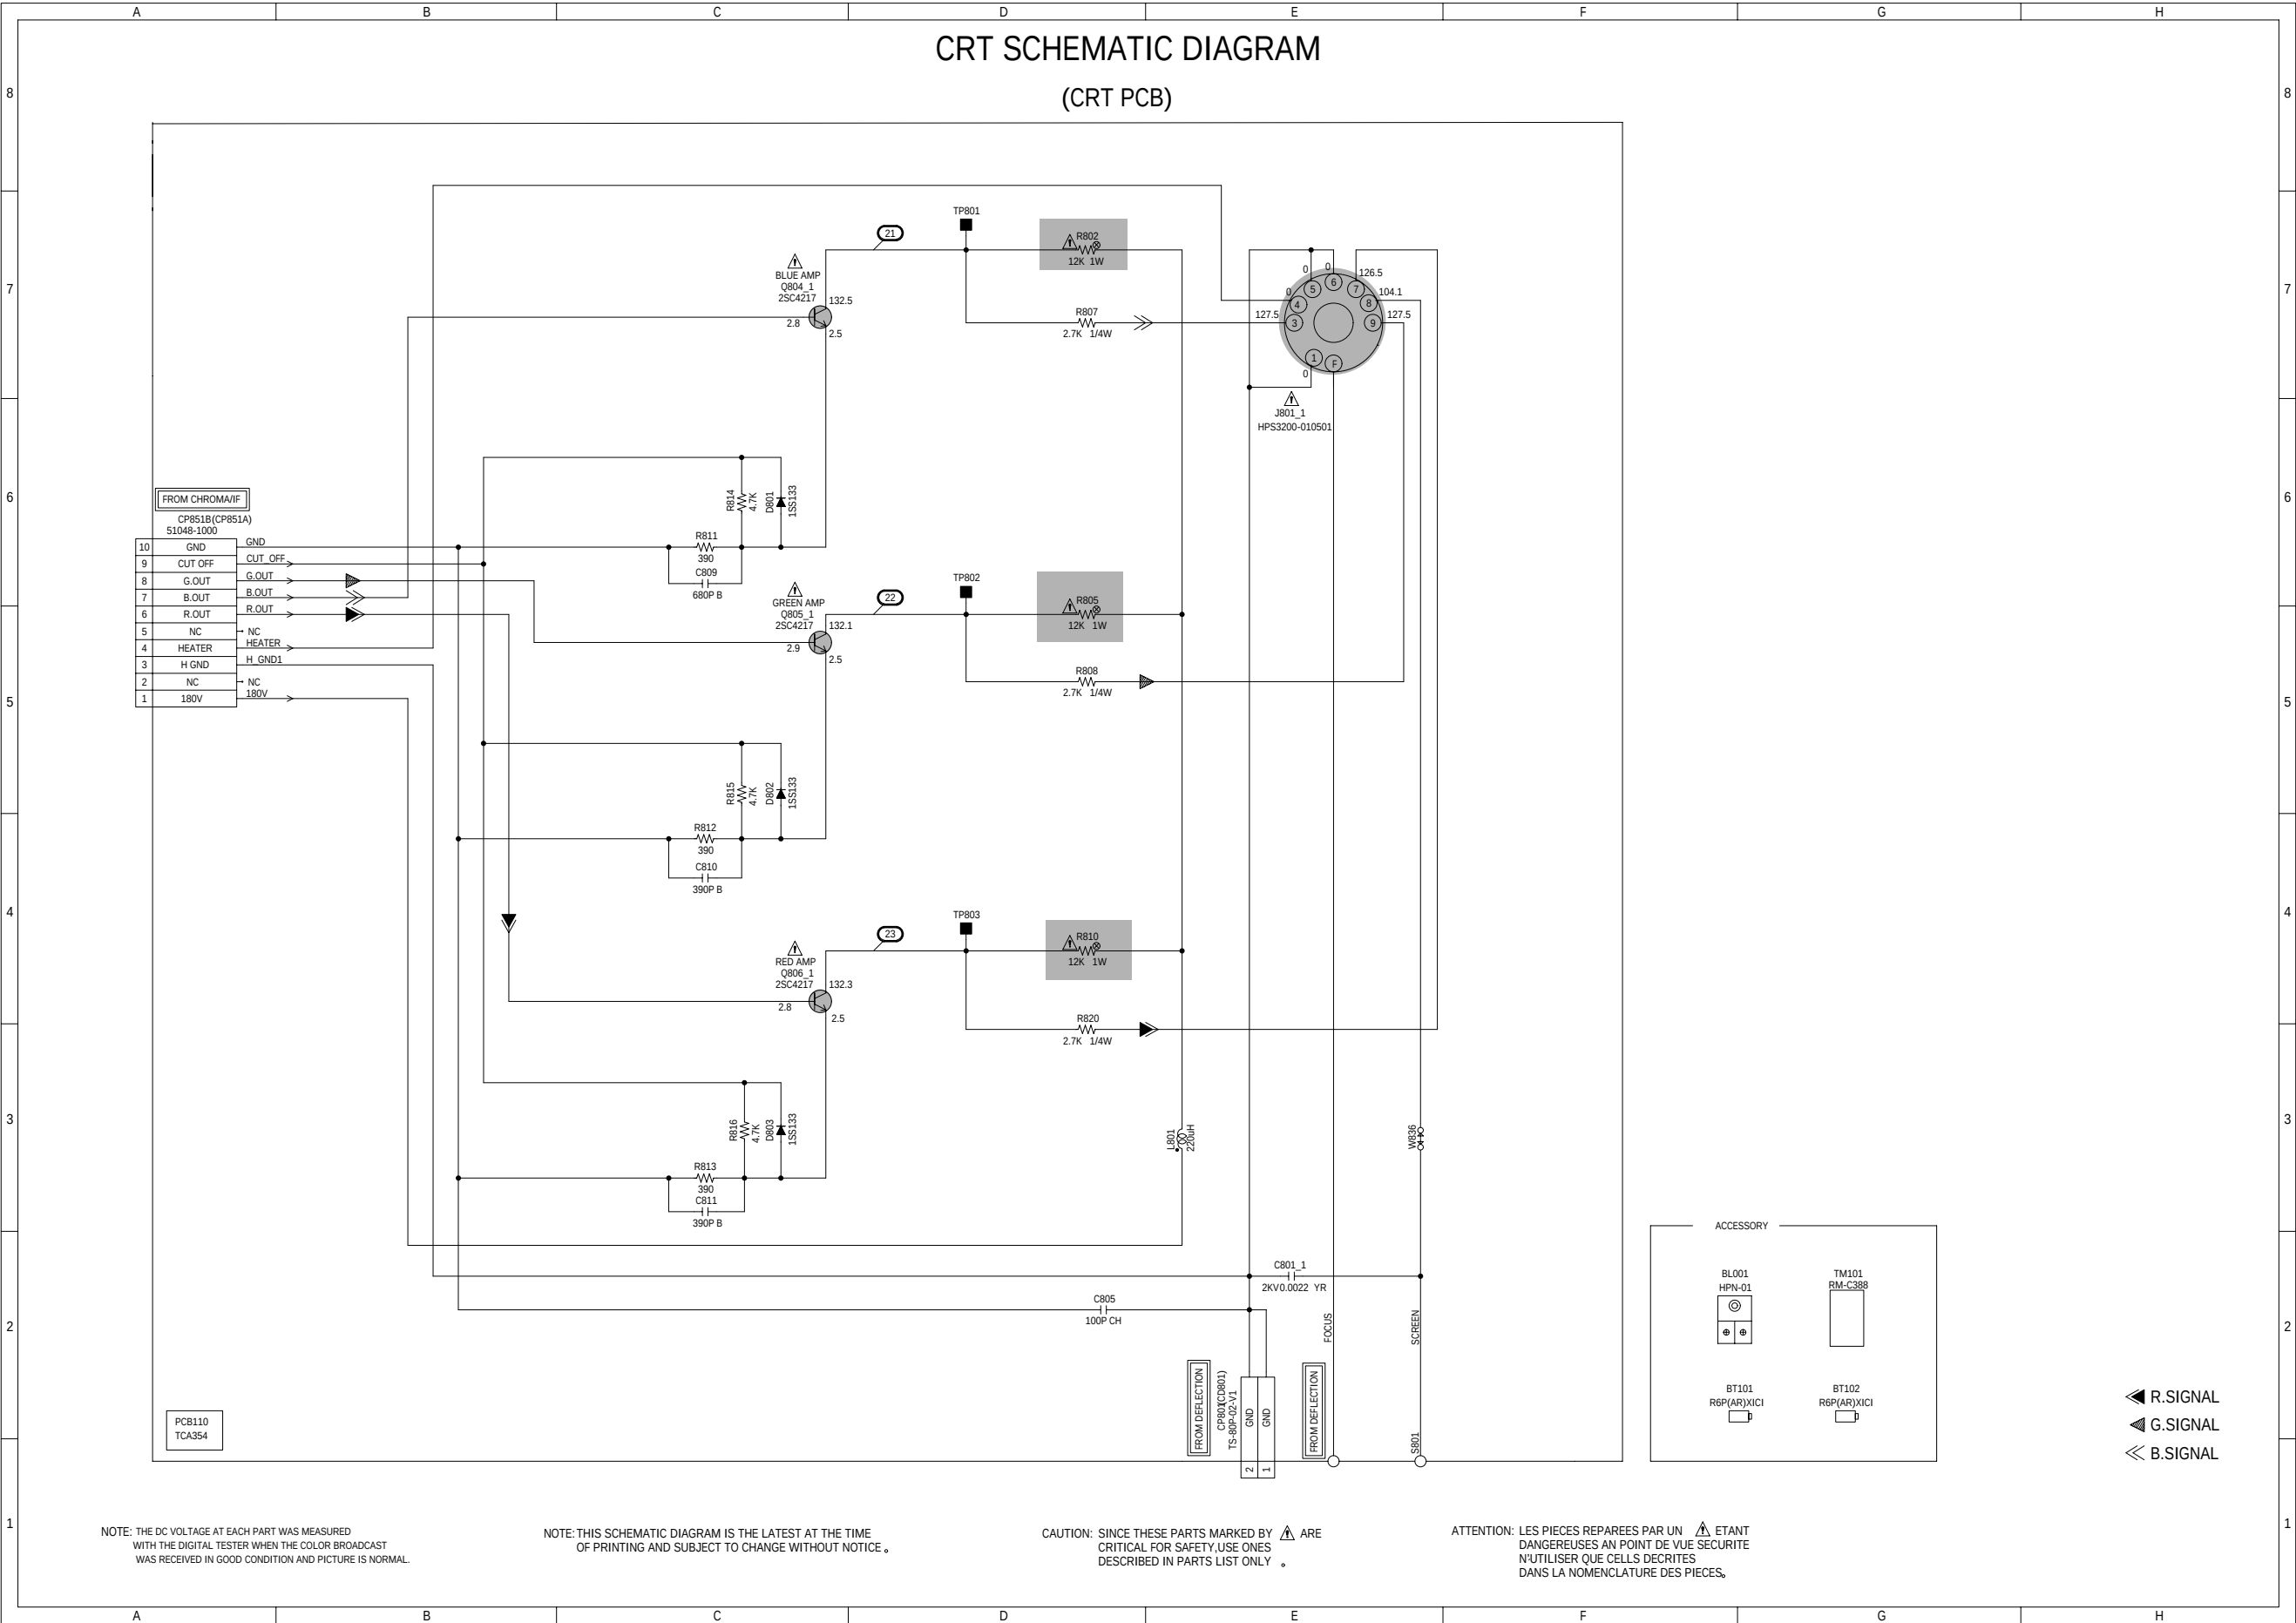


OPERATION SCHEMATIC DAIGRAM

(OPERATION PCB)




[DECK PWB CIRCUIT DIAGRAM]

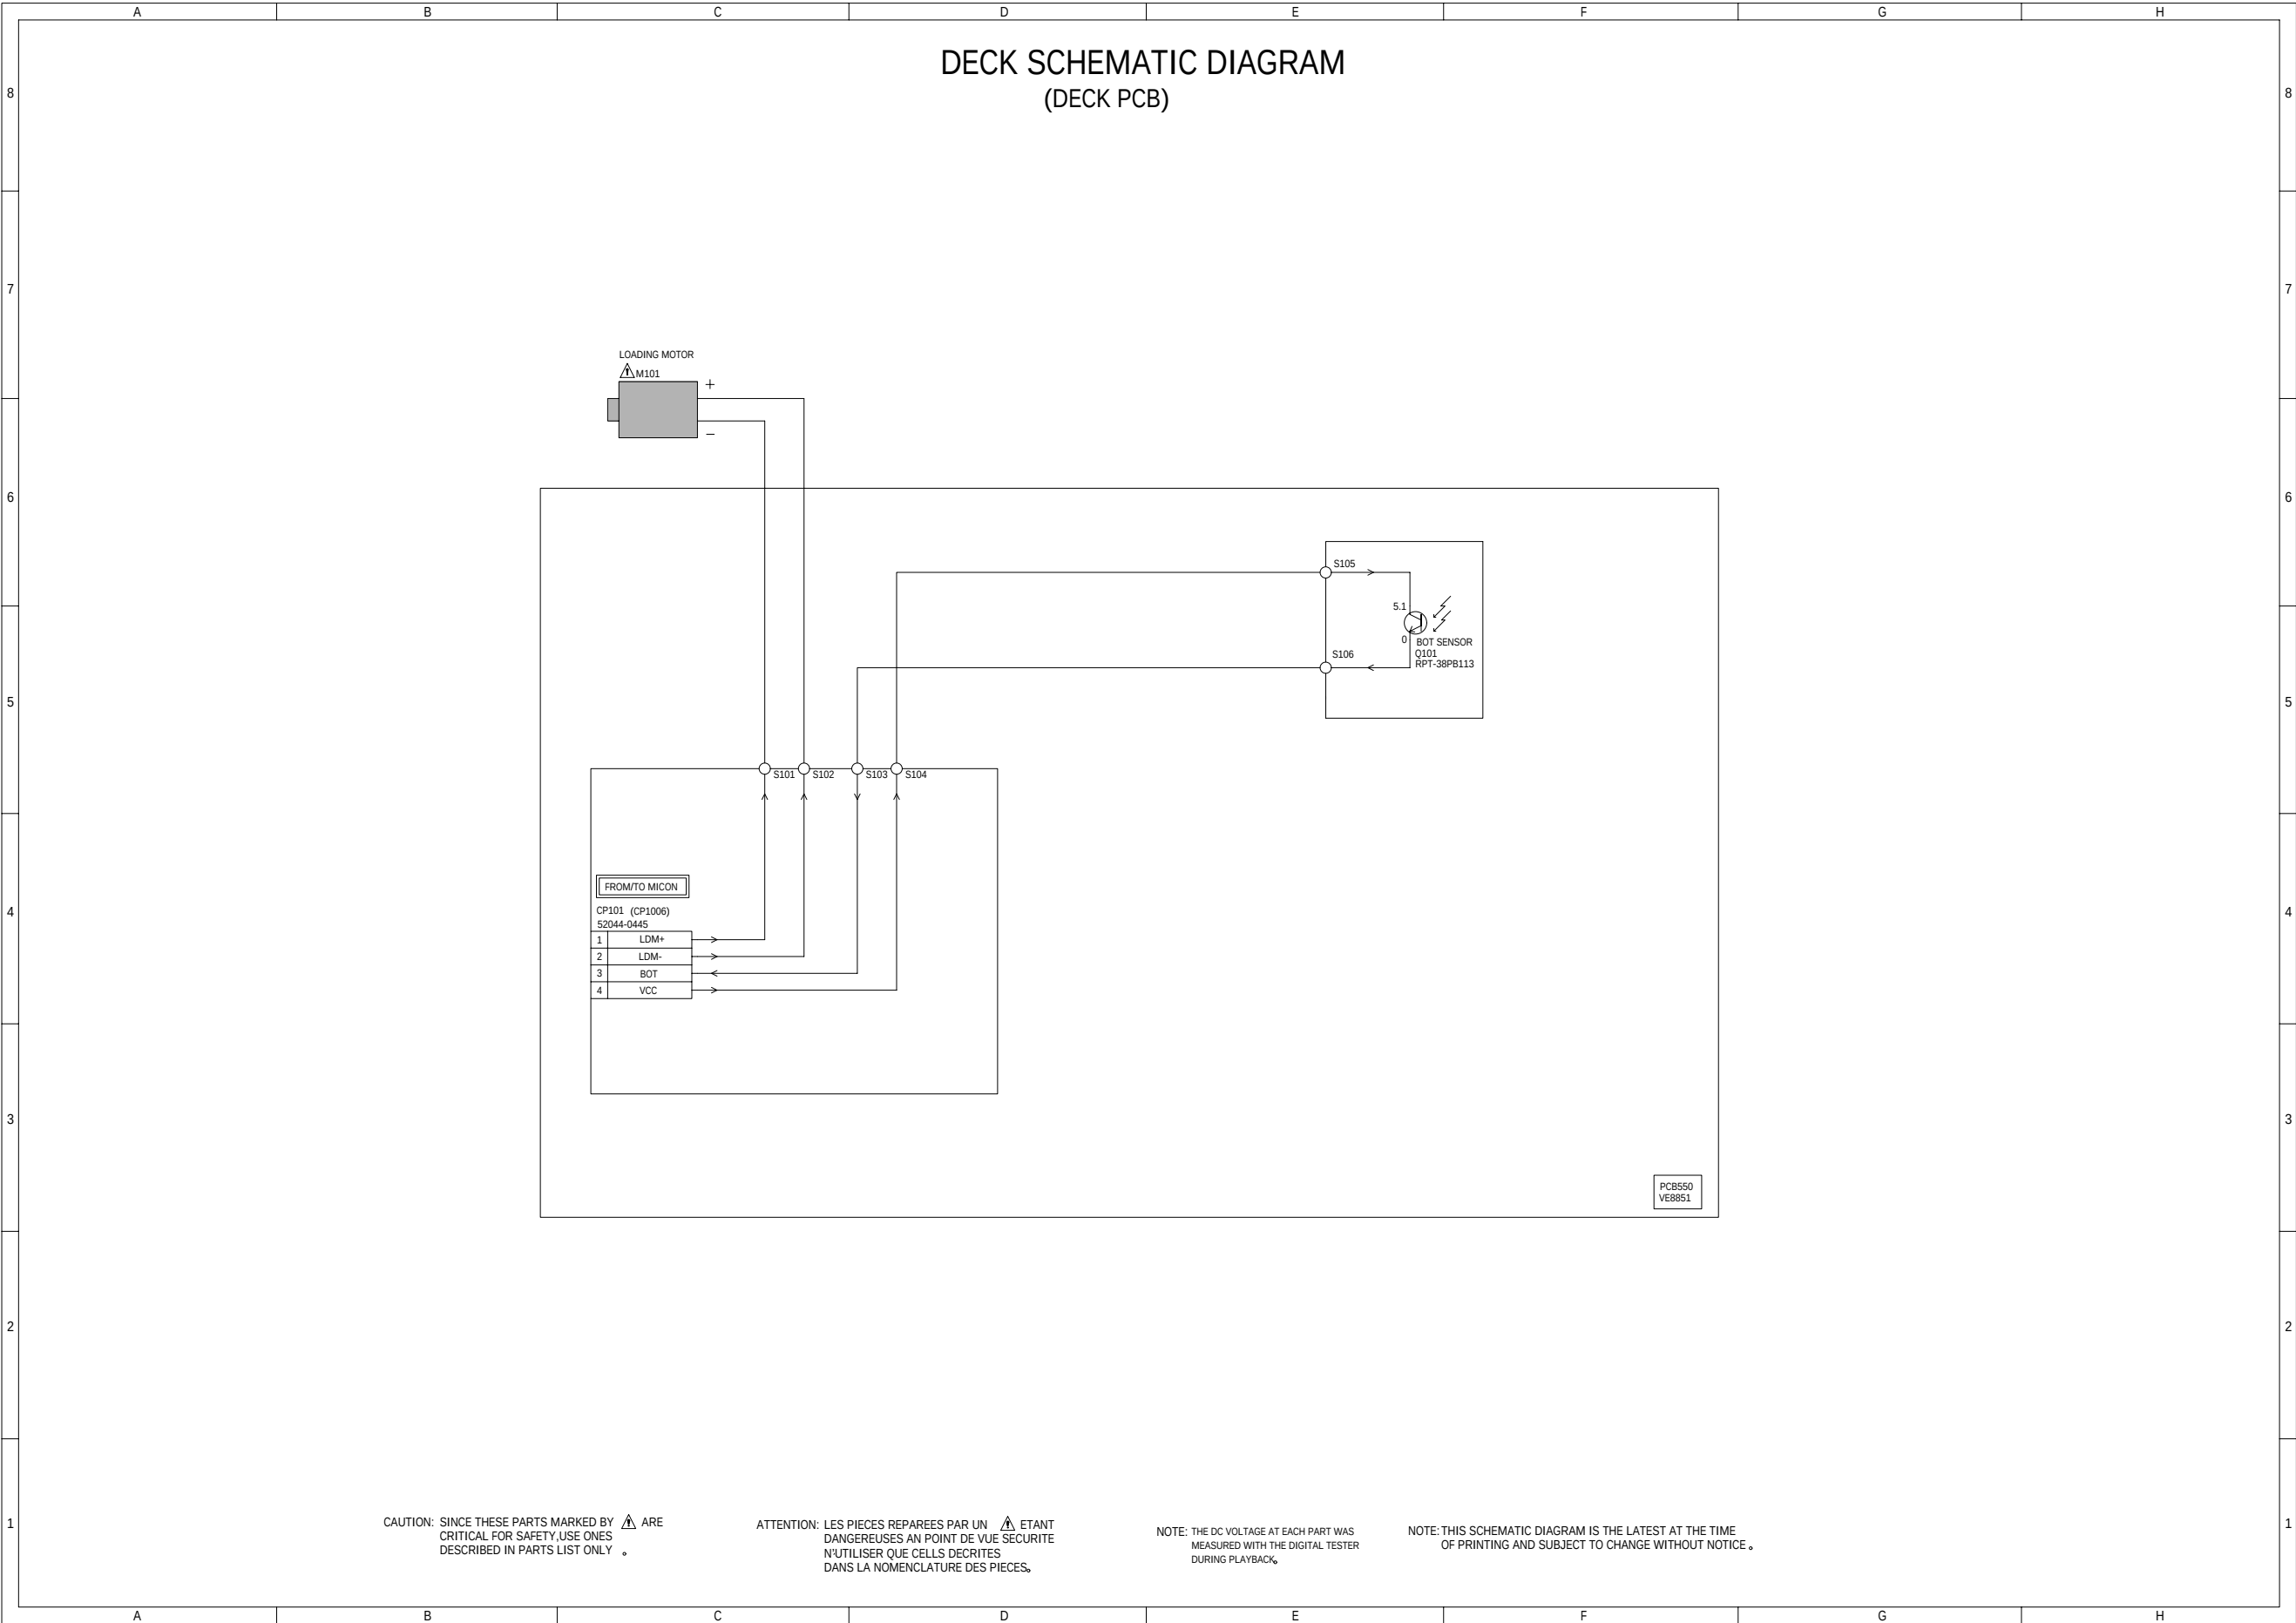


WAVEFORMS


Y/C/AUDIO/CCD/HEAD AMP

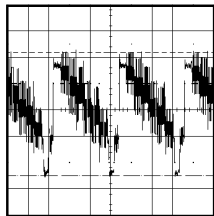


① PB
0.5V 20 s/div

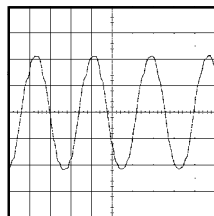


② POWER ON
100mV 0.1 s/div

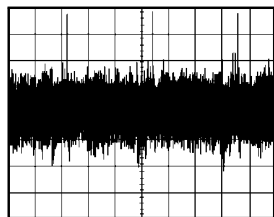

③ PB
10mV 20us/div

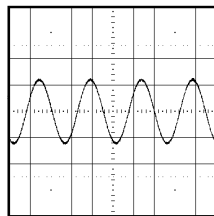


④ PB
0.5V 1ms/div

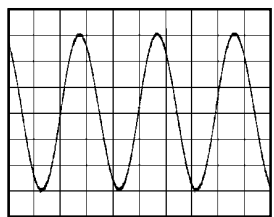


⑤ REC
10.0V 5us/div


MICON

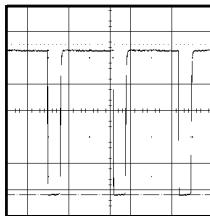


⑥ POWER ON
1.0V 20 s/div

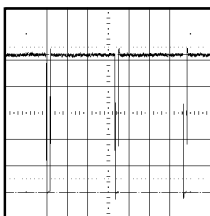


⑦ POWER ON
0.5V 10ms/div

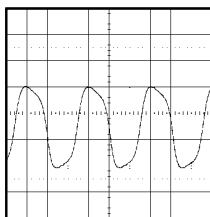


⑧ POWER ON
1.0V 10 s/div

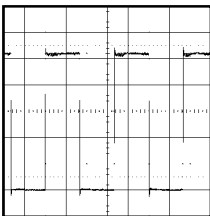


⑨ PB
1.0V 10ms/div

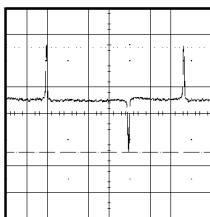


⑩ PB
1.0V 5ms/div

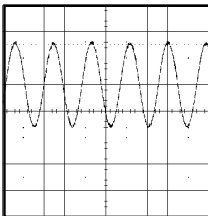

⑪ PB
0.5V 0.5ms/div

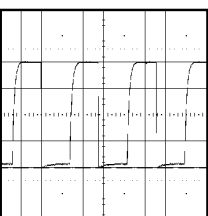


⑫ PB
1.0V 0.5ms/div

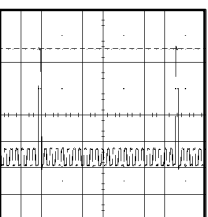


⑬ PB
1.0V 5ms/div

POWER

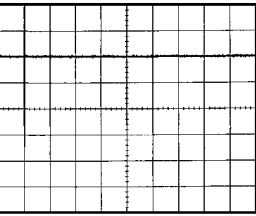


⑮ 5.0V 20ms/div

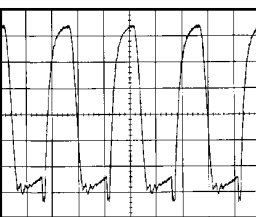


⑯ 500mV 5 s/div


DEFLECTION

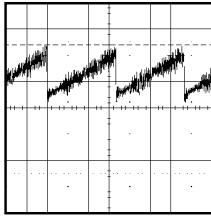


⑰ 0.5V 5ms/div

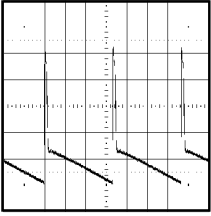


⑱ 10.0V 5ms/div

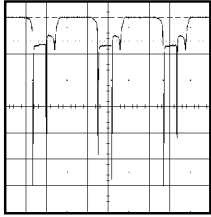


⑲ 2.0V 20 s/div

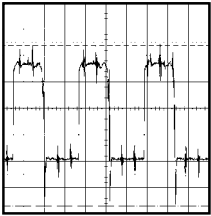


⑳ 200mV 20 s/div

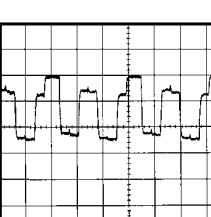

㉑ 50.0V 20 s/div

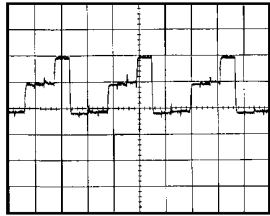


㉒ 50.0V 20 s/div

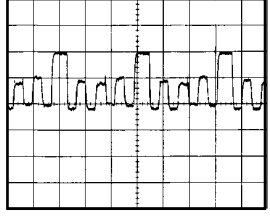

㉓ 50.0V 20 s/div

CRT

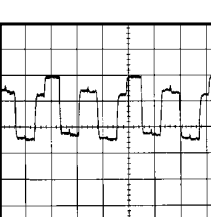

㉑ 50.0V 20 s/div

NOTE: The following waveforms were measured at the point of the corresponding balloon number in the schematic diagram.

NOTE: The following waveforms were measured at the point of the corresponding balloon number in the schematic diagram.